ORDER NO. MD9903036C2

Service Manual

COMPACT disc DIGITAL AUDIO

MASH* multi-stage noise shaping

CD Stereo System

SA-AK17

Colour

(K) ... Black Type

Area

Suffix for Model No.	Area	Colour
(E)	Europe	(K)
(EB)	Great Britain	
(EG)	Germany and Italy	

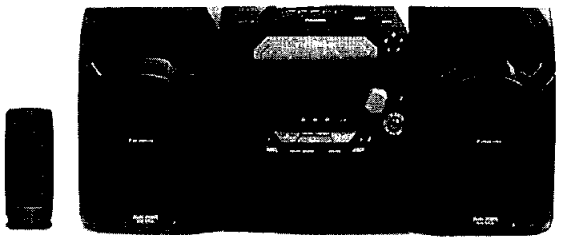

Remote Control Transmitter SB-AK17 SA-AK17 SB-AK17

System	Music Center	Speaker
SC-AK17 (E)	SA-AK17 (E)	SB-AK17 (E)
SC-AK17 (EB)	SA-AK17 (EB)	SB-AK17 (E)
SC-AK17 (EG)	SA-AK17 (EG)	SB-AK17 (E)

* MASH is a trademark of NTT.

TAPE SECTION : AR2 MECHANISM SERIES
CD SECTION : RAE0152Z-M TRAVERSE DECK SERIES

■ Specifications

■ Amplifier Section

RMS power output
THD 10%, both channels driven
For 30W per channel (6Ω)
1 kHzcontinuous power output
THD 1%both channels driven (DIN) 20W per channel (6Ω)
Input sensitivity and impedance
AUX 250mV,13.2KΩ

■ Cassette Deck Section

Track system 4 track, 2 channel
Heads
Record/playback Solid permalloy head
Erasure Double gap ferrite head
Motor DC servo motor
Recording system AC bias 100 kHz
Erasing system AC erase 100 kHz
Tape speed 4.8 cm/s
Frequency response (+3, -6 dB at DECK OUT)
NORMAL (TYPE I) 35 Hz – 14 kHz
HIGH (TYPE II) 35 Hz – 14 kHz
S/N 50dB(A weighted)
Wow and flutter 0.18 % (WRMS)
Fast forward and rewind time
Approx. 120 seconds with C-60 cassette tape

■ FM Tuner Section

Frequency range 87.50 – 108.00 MHz (50 kHz steps)
Sensitivity
S/N 26dB 1.5 µV
Antenna terminal(s) 75 Ω (unbalanced)

■ AM Tuner Section

Frequency range 522 – 1629 kHz (9kHz steps)
Sensitivity
S/N 20 dB 560 µV/m

■ CD Section

Sampling frequency 44.1 kHz
Decoding 16 bit linear
Beam source/wave length Semiconductor laser / 780 nm
Number of channels Stereo
Frequency response 20Hz – 20kHz (+1dB, -2dB)
Wow and flutter Below measurable limit
Digital filter 8 fs
D/A converter MASH (1 bit DAC)

■ General

Power consumption 120W
Power supply
For E,EG area AC 230V, 50Hz
For EB area AC 230 – 240V, 50Hz
Dimensions (W x H x D) 270 x 331 x 316 mm
Weight
For GN area 6.7 kg

Notes :
1. Specifications are subject to change without notice. Weight and dimensions are approximate.
2. Total harmonic distortion is measured by the digital spectrum analyzer.

Panasonic®

© 1999 Matsushita Electronics (S) Pte. Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experiense repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

■ Contents

	Page
BEFORE REPAIR AND ADJUSTMENT	2
PROTECTION CIRCUITRY	2
HANDLING PRECAUTIONS FOR TRAVERSE DECK	2 & 3
PRECAUTION OF LASER DIODE	3
ACCESSORIES	4
CAUTION FOR AC MAIN LEADS	4
CONNECTIONS	5
LOCATION OF CONTROLS	6
RECORDING FROM RADIO BROADCASTS	7
RECORDING FROM COMPACT DISCS	8 & 9
TAPE-TO-TAPE RECORDING	10
SETTING THE TIME	11
OPERATION CHECKS AND MAIN COMPONENT REPLACEMENT	11 ~ 18
SELF-DIAGNOSTIC DISPLAY FUNCTION	19
DESCRIPTION OF ERROR CODE	20
CD TEST MODE FUNCTION	21
MEASUREMENTS AND ADJUSTMENTS	22 & 23

	Page
ILLUSTRATION OF ICs, TRANSISTORS & DIODES	24
TERMINAL FUNCTION OF ICs	25 ~ 27
SCHEMATIC DIAGRAM	28 ~ 41
PRINTED CIRCUIT BOARD	42 ~ 51
BLOCK DIAGRAM	52 ~ 57
WIRING CONNECTION DIAGRAM	58
TROUBLESHOOTING GUIDE	59
MECHANISM PARTS LOCATION (RAA3408)	60 & 61
MECHANISM PARTS LIST	62
LOADING MECHANISM PARTS LIST	62
CD LOADING UNIT PARTS LOCATION	63 & 64
CABINET PARTS LOCATION	65 & 66
REPLACEMENT PARTS LIST	67 ~ 70
RESISTORS & CAPACITORS	70 ~ 74
PACKING MATERIALS & ACCESSORIES	75
PACKAGING	75

■ Before Repair and Adjustment

Disconnect AC power, discharge Power Supply Capacitors C506 ~ C508 through a 10Ω , 5W resistor to ground.
DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.
After repairs are completed, restore power gradually using a variac, to avoid overcurrent.

For E, EG
Current consumption at AC 230V, 50 Hz in NO SIGNAL mode should be ~350mA.
For EB
Current consumption at AC 240V, 50 Hz in NO SIGNAL mode should be ~350mA.

■ Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlines below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

Note:
When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

■ Handling Precautions For Traverse Deck

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body.
So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

• Handling of traverse deck (optical pickup)

1. Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
2. The short land between the No.4 (LD) and No.5 (GND) pins on the flexible board (FFC) is shorted with a solder build-up to prevent damage to the laser diode.
   To connect to the PC board, be sure to open by removing the solder build-up, and finish the work quickly.
3. Take care not to apply excessive stress to the flexible board (FFC board).
4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.

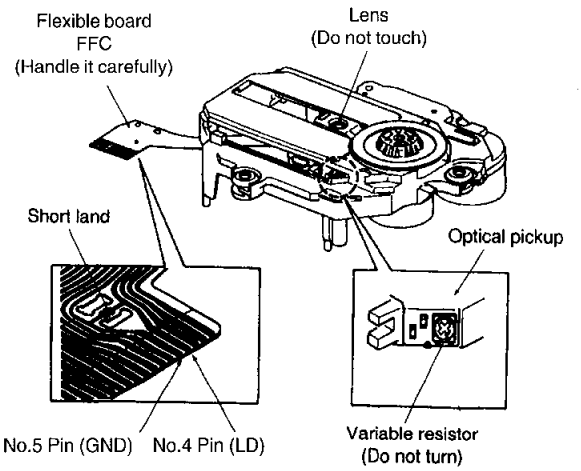

- **Grounding for electrostatic breakdown prevention**

1. Human body grounding
   Use the anti-static wrist strap to discharge the static electricity from your body.
2. Work table grounding
   Put a conductive material (sheet) or steel sheet on the area where the traverse deck (optical pickup) is placed, and ground the sheet.

Caution :
The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

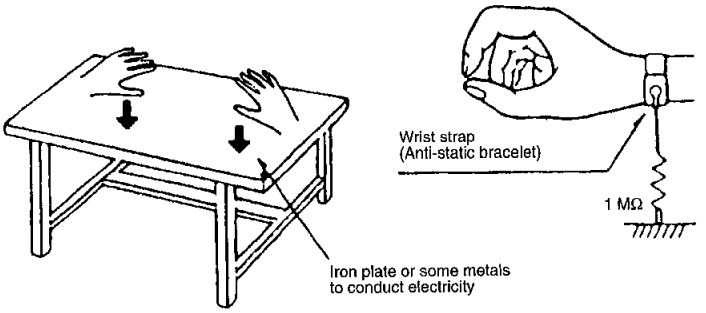

Caution when Replacing the Traverse Deck:
The traverse deck has a short point shorted with solder to protect the laser diode against electrostatics breakdown. Be sure to remove the solder from the short point before making connections.

■ Precaution of Laser Diode

CAUTION : This product utilizes a laser diode with the unit turned "ON", invisible laser radiation is emitted from the pick up lens.

Wavelength : 780 nm
Maximum output radiation power from pick up : 100 µW/VDE
Laser radiation from pick up unit is safety level, but be sure the followings:

1. Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pick up unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.

ACHTUNG: Dieses Produkt enthält eine Laserdiode. Im eingeschalteten Zustand wird unsichtbare Laserstrahlung von der Lasereinheit abgestrahlt.

Wellenlänge : 780nm
Maximale Strahlungsleistung der Lasereinheit :100µW/VDE
Die Strahlung an der Lasereinheit ist ungefährlich, wenn folgende Punkte beachtet werden:

1. Die Lasereinheit nicht zerlegen, da die Strahlung an der freigelegten Laserdiode gefährlich ist.
2. Den werkseitig justierten Einstellregler der Lasereinhit nicht verstellen.
3. Nicht mit optischen Instrumenten in die Fokussierlinse blicken.
4. Nicht über längere Zeit in die Fokussierlinse blicken.

ADVARSEL: I dette a apparat anvendes laser.

CAUTION!
THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

■ Use of Caution Labels

LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT

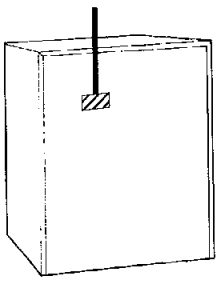

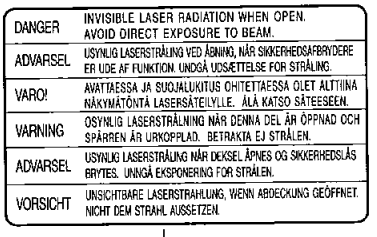
DANGER
INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.
ADVARSEL
USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VARO!
AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTÖNTÄ LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VARNING
OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.
ADVARSEL
USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.
VORSICHT
UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.

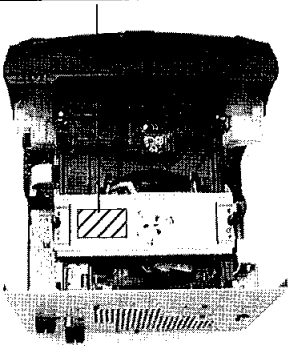

■ Accessories

RAK-CH943WK	RSA0007	RSA0022	RJA0043-1C	RJA0044-1C	
		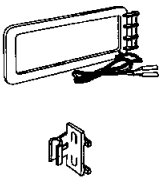			**Blank**

■ Caution for AC Main Leads

(For "EB" area code model only.)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.
A 5-ampere fuse is fitted in this plug.
Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark ⟨ASA⟩ or the BSI mark ⟨kitemark⟩ on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.
If you lose the fuse cover, the plug must not be used until a replacement cover is obtained.
A replacement fuse cover can be purchased from your local dealer.

CAUTION !
IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OFF SAFELY.
THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below.
If in any doubt please consult a qualified electrician.

IMPORTANT
The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral
Brown: Live

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL ⏚ OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF—KEEP DRY.

Before use
Remove the connector cover.

How to replace the fuse
The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.
Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

Figure A

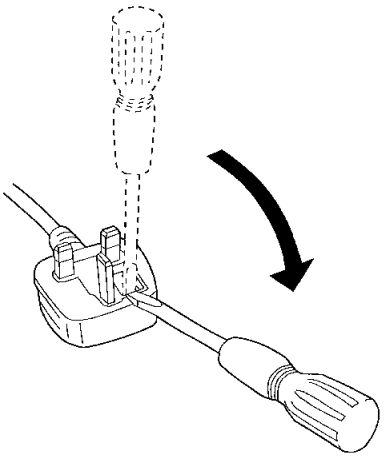

Figure B

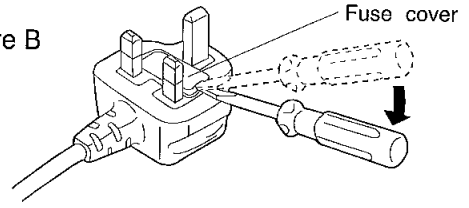

2. Replace the fuse and close or attach the fuse cover.

Figure A

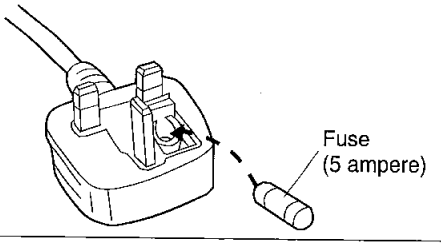

Figure B

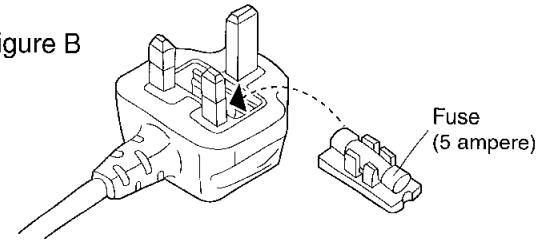

■ Connections

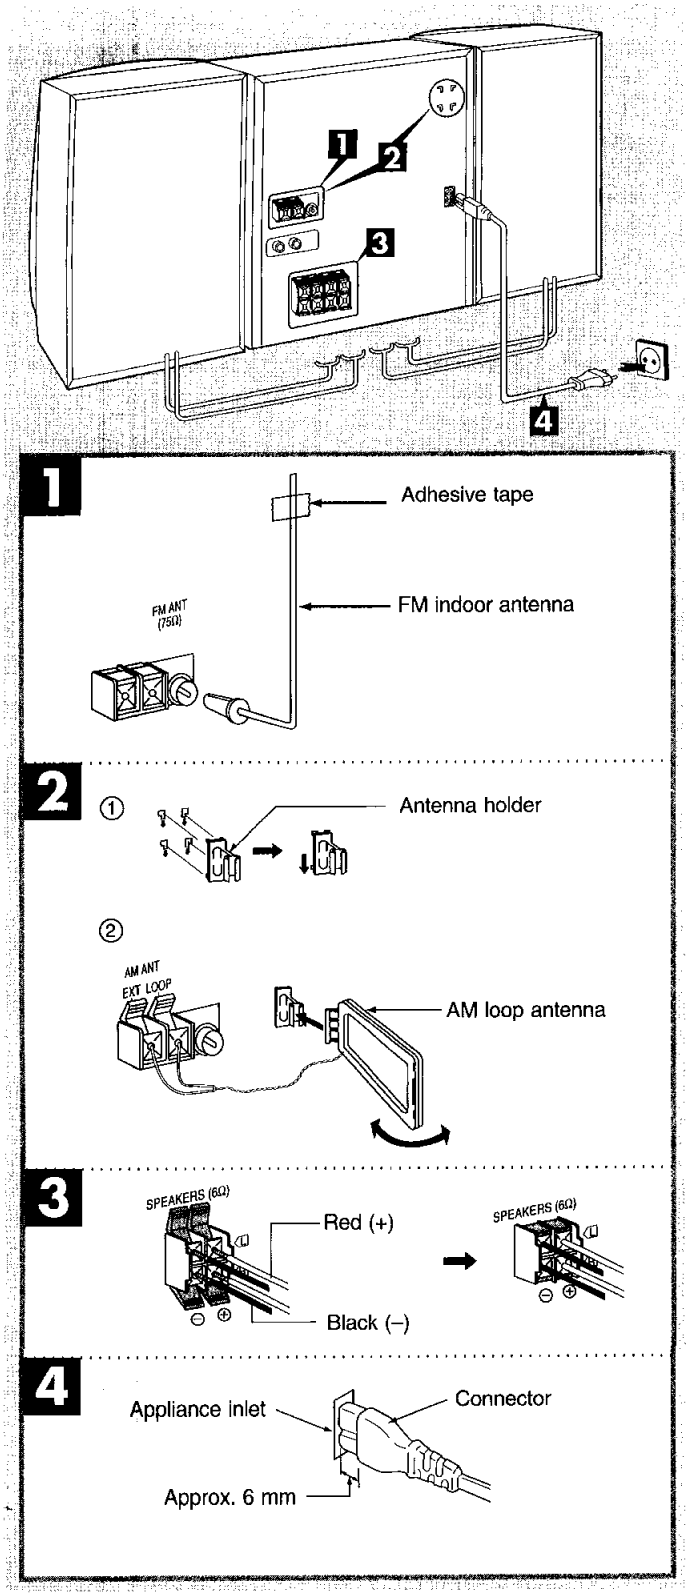

Basic connections (for supplied accessories)

- Plug the AC power cord into a household AC outlet only after all other connections have been made.
- To prepare the AM loop antenna wire and speaker cords, twist the vinyl cover tip and pull off.

1 Connect the FM indoor antenna.

Tape the antenna to a wall or column, in a position where radio signals are received with the least amount of interference.

Note

For best reception sound quality:
An FM outdoor antenna is recommended.

2 Connect the AM loop antenna.

After attaching the antenna, turn on the system and tune in a broadcast station. Then, turn the antenna to the angle of best reception and least interference.

3 Connect the front speaker cables.

Connect each end of the speaker cables to the terminal lever of the same colour.

Caution

- **Use only the supplied front speakers.**
  The combination of the main unit and front speakers provide the best sound. Using other front speakers can damage the unit and sound quality will be negatively affected.
- To prevent damage to circuitry, never short-circuit positive (+) and negative (–) speaker wires.

4 Connect the AC power cord.

Insertion of connector

Even when the connector is perfectly inserted, depending on the type of inlet used, the front part of the connector may jut out as shown in the drawing.
However there is no problem using the unit.

■ Location of Controls

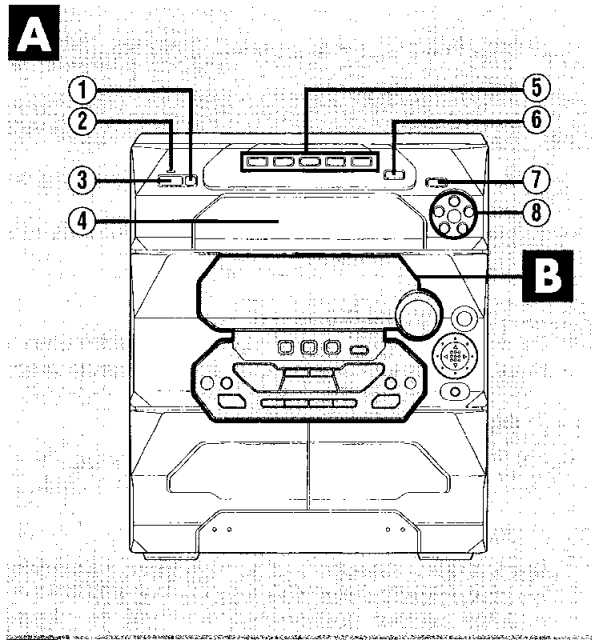

Main unit A

No.	Name
①	ECO button (ECO)
②	AC supply indicator (AC IN) This indicator lights when the unit is connected to the AC mains supply.
③	Standby/on switch (⏻/I) Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
④	Disc tray
⑤	Disc select buttons and indicators (DISC 1 – DISC 5)
⑥	CD manager button (CD MANAGER)
⑦	Random play button (RANDOM)
⑧	Direct disc tray open/close buttons (⏏ OPEN/CLOSE 1 – ⏏ OPEN/CLOSE 5)

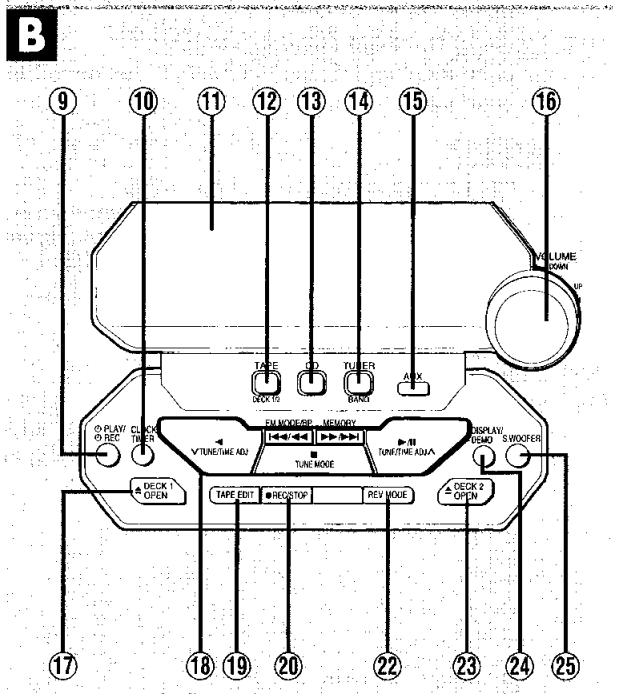

Center console B

No.	Name
⑨	Play timer/record timer button and indicator (⏲PLAY/⏲REC)
⑩	Clock/timer button (CLOCK/TIMER)
⑪	Display
⑫	Tape/deck select button (TAPE, DECK 1/2)
⑬	CD button (CD)
⑭	Tuner/band select button (TUNER, BAND)
⑮	AUX button (AUX)
⑯	Volume control (VOLUME)
⑰	Deck 1 open button (⏏ DECK 1 OPEN)
⑱	Basic operating buttons Functions change according to the source.
⑲	Tape edit button (TAPE EDIT)
⑳	Recording start/stop button (● REC/STOP)
㉒	Reverse mode select button (REV MODE)
㉓	Deck 2 open button (⏏ DECK 2 OPEN)
㉔	Display select/demonstration button (-DISPLAY/–DEMO)
㉕	V.BASS button (V.BASS)

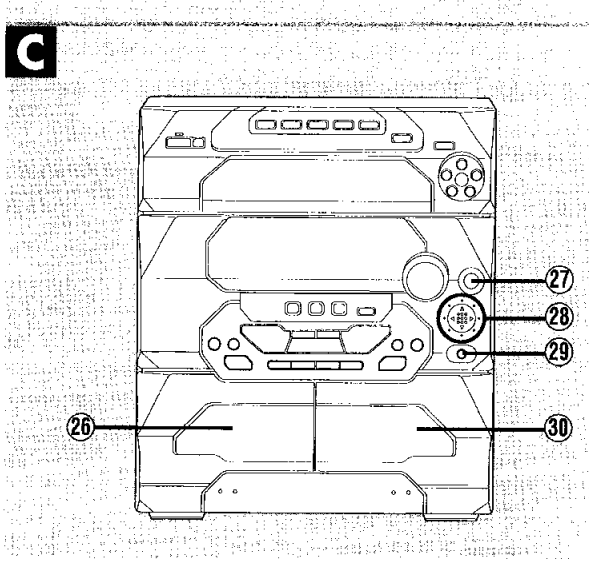

Main unit C

No.	Name
㉖	Deck 1 cassette holder
㉗	3D AI EQ button (3D AI EQ)
㉘	Sound equalizer control/indicators (SOUND EQ)
㉙	Headphone jack (PHONES)
㉚	Deck 2 cassette holder

■ Recording From Radio Broadcasts

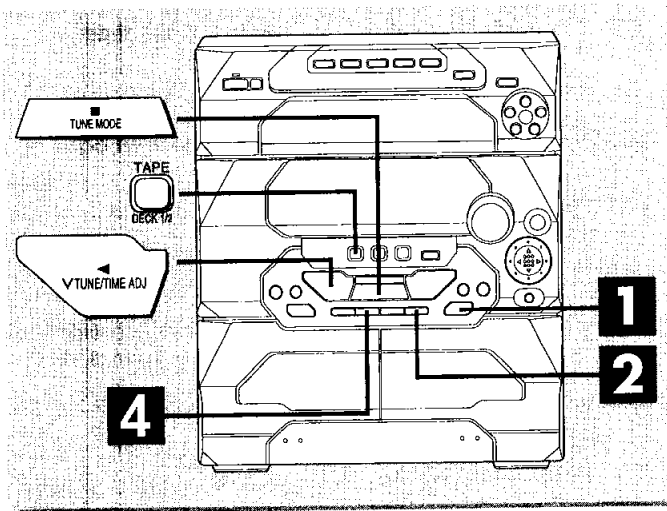

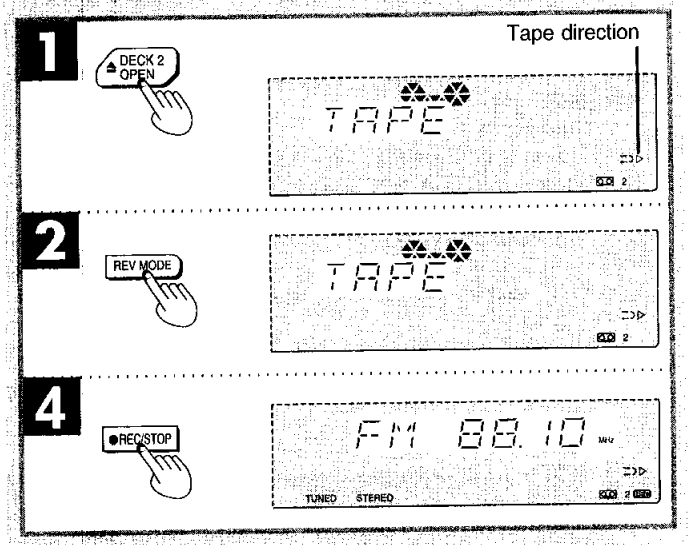

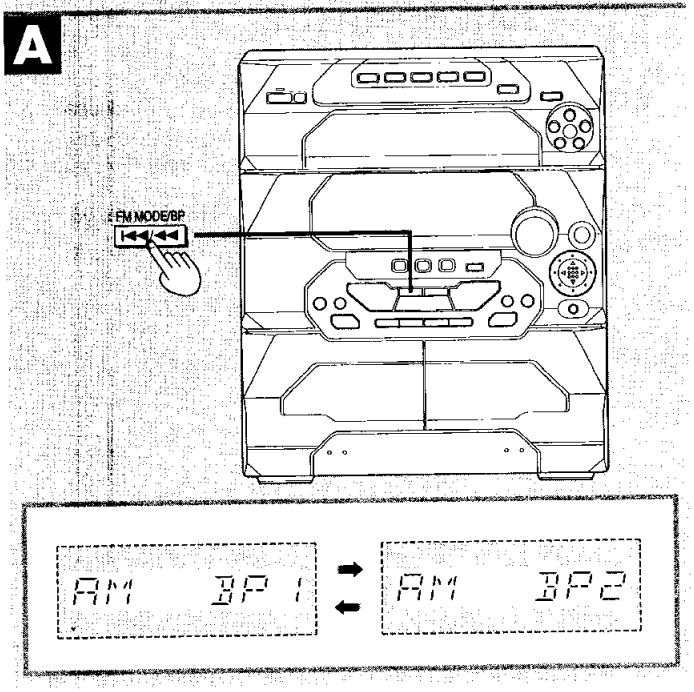

1 **Press [⏏ DECK 2 OPEN] and insert the tape.**
Close the holder by hand.
Tape direction is automatically set to "▷".

2 **Press [REV MODE] to select the reverse mode.**
Every time you press the button:

⇄ → ⇄ → ⟲⇄

⇄ : One side is recorded, then recording stops automatically.

⇄, ⟲⇄ : Both sides (front side → reverse side) are recorded, then recording stops automatically.

3 **Select a radio station.**

4 **Press [● REC/STOP] to start recording.**
If you selected "⟲⇄" in step 2, the direction will automatically change to "⇄" when recording starts.

To stop recording
Press [● REC/STOP] again.
Recording can also be stopped by pressing [■].

To start recording on the reverse side
Load a tape and change the tape direction as follows:
1. Press [TAPE DECK 1/2] and select tape deck 2.
2. Press [◀] and immediately thereafter [■]. The tape direction will be shown as "◁".

To record from a specific point on a tape
Before recording, advance the tape to the point from where you want to start recording.

To cut an unnecessary part while recording
1. Press [● REC/STOP] during the unnecessary part. The cassette deck will go into the stop mode.
2. Press [● REC/STOP] to resume recording again. Recording will continue in the same direction as before.

Note
When recording an AM broadcast, sound is momentarily interrupted when you start and stop the recording.

To reduce noise while AM recording (Beat proof function) A

Press [FM MODE/BP] while recording.
Each time you press the button, "BP1" and "BP2" will be displayed alternately.
Select the position where there is less noise.

■ Recording From Compact Discs

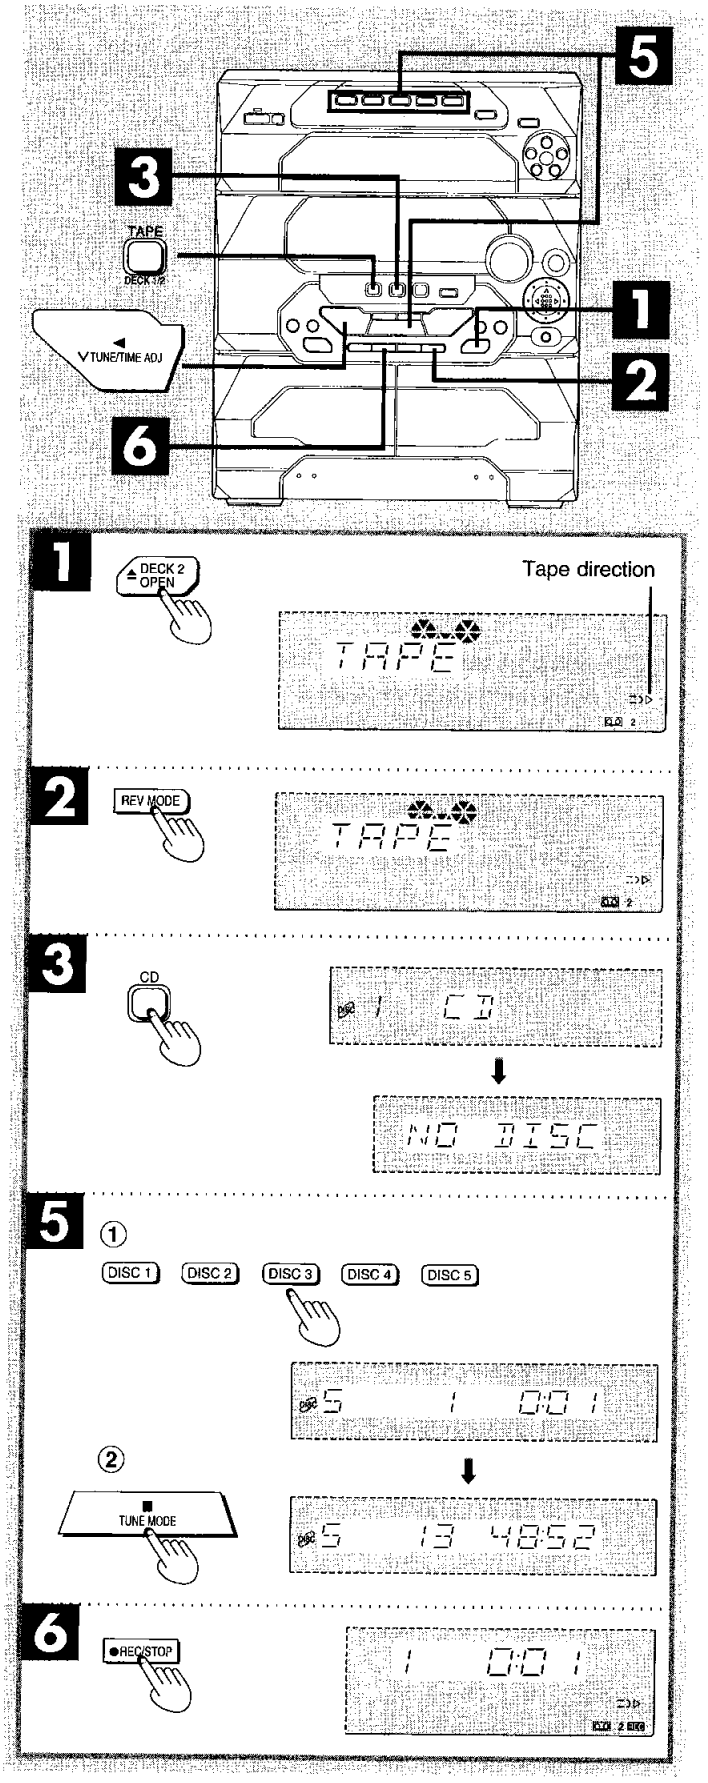

1 **Press [≜ DECK 2 OPEN], and insert the tape.**
Close the holder by hand.
Tape direction is automatically set to "▷".

2 **Press [REV MODE] to select the reverse mode.**
Every time you press the button:

⇄ → ⇉ → ⇄

⇄ : One side is recorded, then recording stops automatically.

⇉, ⇄ : Both sides (front side › reverse side) are recorded, then recording stops automatically.

3 **Press [CD].**

4 **Insert CD in the tray.**

5 **Press [DISC 1] – [DISC 5] to select the disc you want.**
Pressing [■] will stop playback.

6 **Press [● REC/STOP] to start recording.**

- If you selected "⇄" in step **2**, the direction will automatically change to "⇉" when recording starts.
- The recording will proceed from the first track on the selected CD and will continue on through the last track of the final disc (page 26).
- The tape deck stops automatically when the CD is finished.

To stop recording

- To add a 4 second silent interval before stopping
  Press [■]. The CD will stop automatically too.
- To stop recording without a silent interval
  Press [● REC/STOP]. The CD will stop automatically too.

To start recording on the reverse side

Load a tape and change the tape direction as follows:

1. Press [TAPE DECK 1/2] and select tape deck 2.
2. Press [◀] and immediately thereafter [■]. The tape direction will be shown as "◁".

To record from a specific point on a tape

Before recording, advance the tape to the point from where you want to start recording.

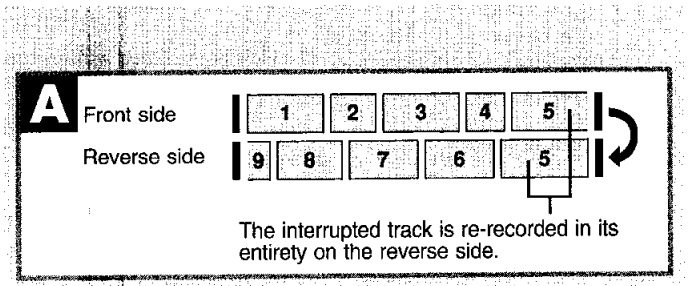

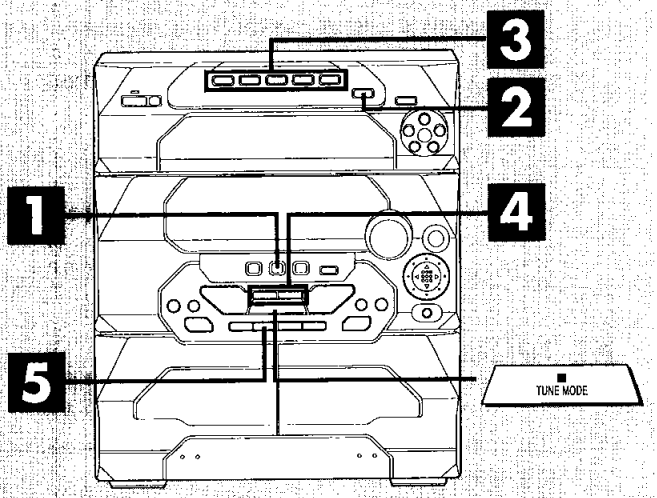

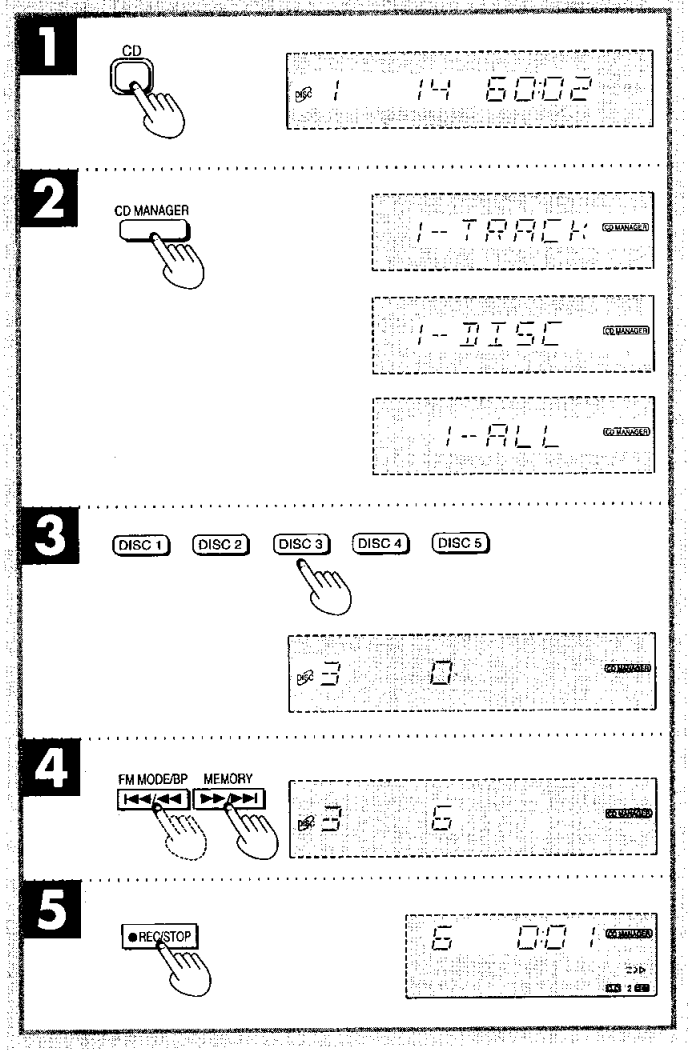

To record special CDs and tracks (CD Manager function)

This function makes it easier for you to select special CDs and tracks from amongst those loaded in the player.

- While recording, if a track is cut off in the middle at the end of the front side, it is re-recorded from the beginning, on the reverse side. A
- At the end of the reverse side recording stops and the current track will be interrupted.

Before recording

Prepare the tape you want to use.

1 **Press [CD].**

2 **Press [CD MANAGER] to select the desired mode.**

Every time you press the button:

1-TRACK → 1-DISC → 1-ALL
↑ NORMAL (OFF) ←

1-TRACK : Only one particular track is recorded.
1-DISC : The tracks on only one particular disc are recorded.
1-ALL : The same track numbers on each of the CDs are recorded in succession.
(NORMAL : The original display is restored in about 3 seconds.)

3 **Press [DISC 1] – [DISC 5] to select the disc you want.**

Note

This step is not required if 1-ALL was selected in step 2.

4 **Press [|◄◄/◄◄] or [►►/►►|] to select the desired track.**

Note

This step is not required if 1-DISC was selected in step 2.

5 **Press [● REC/STOP] to start recording.**

To stop recording

- To add a 4 second silent interval before stopping
  Press [■]. The CD will automatically stop too.
- To stop recording without a silent interval
  Press [● REC/STOP]. The CD will stop automatically too.

■ Tape-to-Tape Recording

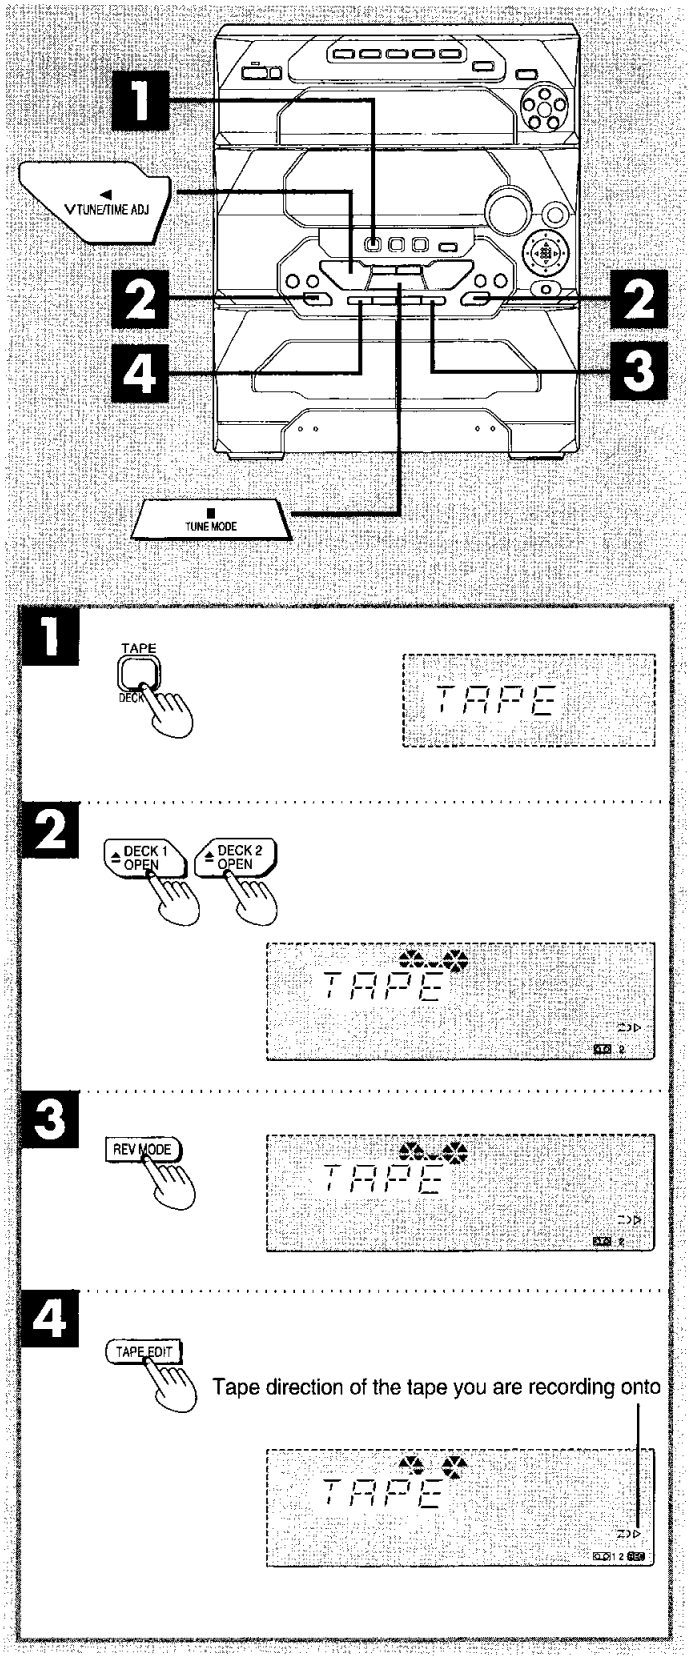

The recording level and the Dolby effect will be recorded as they are on the tape being played back.

1 Press [TAPE].

2 Press [≜ OPEN] on both decks and insert the tapes.
For playback : Into deck 1
For recording : Into deck 2
Close the holders by hand.
Tape direction is automatically set to "▷".

3 Press [REV MODE] to select the reverse mode.
Every time you press the button:

⇄ → ⇉ → ⟲⇄

⇄ : One side is recorded, then recording stops automatically.

⇉, ⟲⇄ : Both sides (front side → reverse side) are recorded, then recording stops automatically.

4 Press [TAPE EDIT] to start recording.
- If you selected "⟲⇄" in step 3, the direction will automatically change to "⇉" when recording starts.

To stop recording:
Press [■].
Both decks will stop.

To start recording on the reverse side
Load a tape and change the tape direction as follows:
1. Press [TAPE DECK 1/2] and select tape deck 2.
2. Press [◀] and immediately thereafter [■]. The tape direction will be shown as "◁".

To record from a specific point on a tape
Before recording, advance the tape to the point from where you want to start recording.

■ Setting The Time

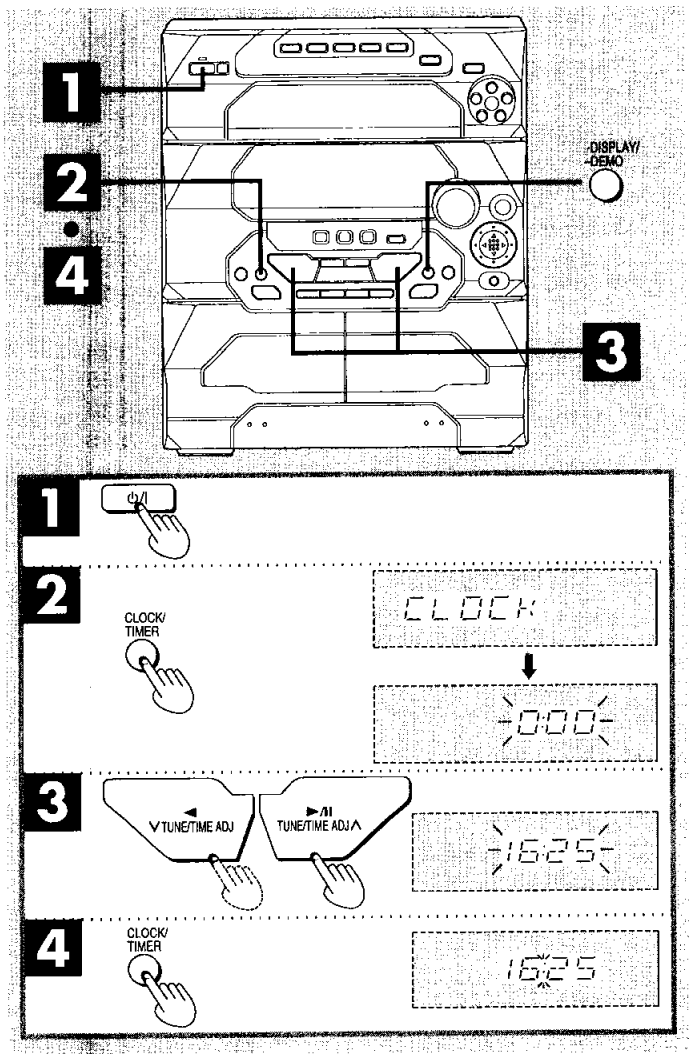

This is a 24-hour display clock.
This example in the figure shows how to set the time for 16:25 (4:25 p.m.).

1 **Press [⏻/I] to switch on the system.**

2 **Press [CLOCK/TIMER] to select "CLOCK".**
Every time you press the button:

CLOCK → ⏲PLAY → ⏲REC
↑— Previous display ←┘

3 **(within 7 seconds or so)**
Press [∨] or [∧] to show the present time.

4 **Press [CLOCK/TIMER] to finish setting the time.**
The display will return to whatever was displayed before you set the time.

To display the time when system is ON
Press [CLOCK/TIMER] to select "CLOCK".

At ECO mode on, to display the time when system is OFF
Press [-DISPLAY/–DEMO].

The time will be displayed for about 5 seconds and then the display will return to whatever was previously displayed.

■ Operation Checks and Main Component Replacement Procedures

Gear for servicing (jig) information

1. This unit has a gear which is used for checking items (Open/close of disc tray, up/down operation of traverse unit by manually) when servicing.
2. For preparation of gear (for servicing), Perform the procedures as follows.
3. In case of re-servicing the same set, the "gear for servicing" may has been taken off because it has been used. The "gear for servicing" must be stored.

1. Remove the gear provided with mechanism cover as shown below.

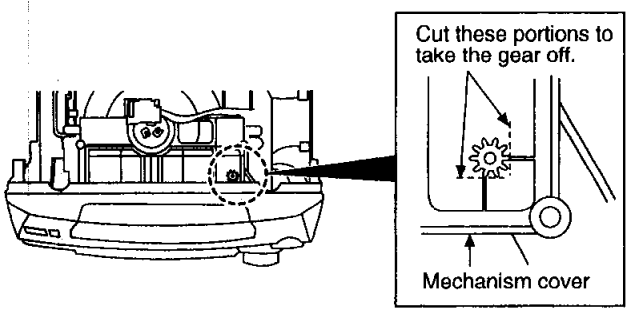

2. Insert the hexagonal screwdriver (2mm) into the gear, and then project the tip of screwdriver for 1~2mm in length.

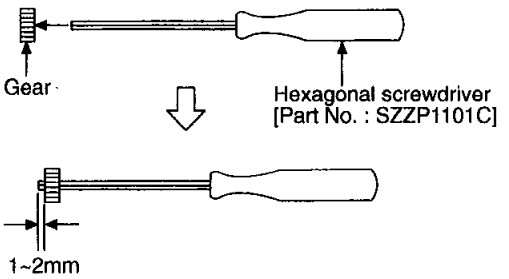

"**ATTENTION SERVICER**" Some chassis components may have sharp edges. Be careful when disassembling and servicing.

1. **This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.**
2. **For reassembly after operation checks or replacement, reverse the respective procedures. Special reassembly procedures are described only when required.**
3. **Select items from the following index when checks or replacement are required.**
4. **Refer the Parts No. on the page of "Main Component Replacement Procedures", if necessary.**

• Contents

page

- **Checking Procedure for each major P.C.B.**
  1. Checking of the Main, Tuner, Panel, Deck and Power P.C.B. ..... 12 & 13
- **Main Component Replacement Procedures**
  1. Replacement of the Traverse Deck 14
  2. Replacement of the Power Amplifier IC and Regulator Transistors 15
- **Disassembly and assembly of the Traverse Unit** ..... 16 & 17
- **Disassembly and assembly of the Disc Tray** ..... 17 & 18

Warning : This product uses a laser diode. Refer to caution statement on page 3.
ACHTUNG : • Die Lasereinheit nicht zerlegen.
• Die Lasereinheit darf nur gegen eine vom Hertsteller spezifizierte Einheit ausgetauscht werden.

■ Checking Procedure for each major P.C.B.

1. Checking of the Main, Tuner, Panel, Deck and Power P.C.B.

ⓐ [XTBS3+8JFZ1] (Black)

Step 1 Remove the Top Cabinet.

Step 2 Push the lever in the direction of arrow.

Step 3 Pull out the CD tray as shown and remove the CD lid. Push back the CD tray after the CD lid has been removed.

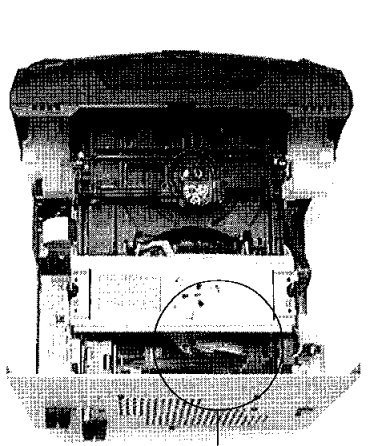

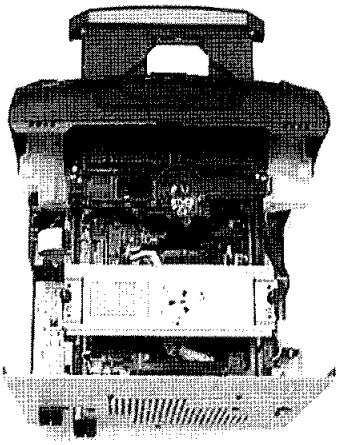

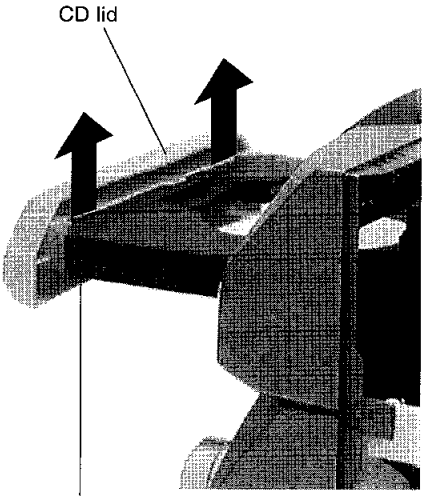

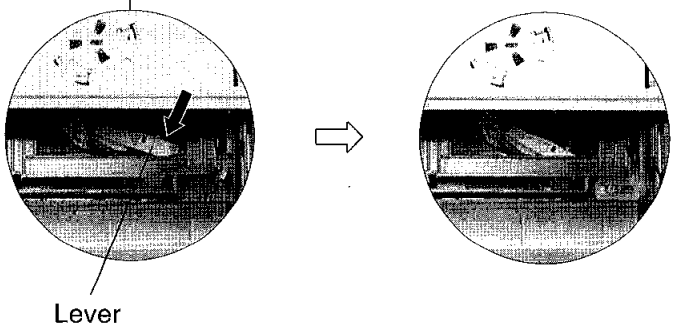

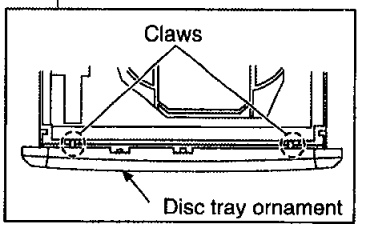

(Bottom view)

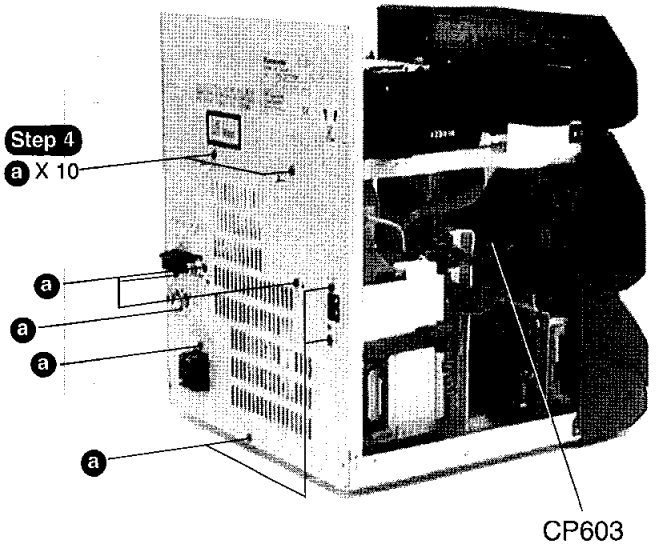

Step 6 Release 2 catches and remove the CD changer base together with the CD changer.

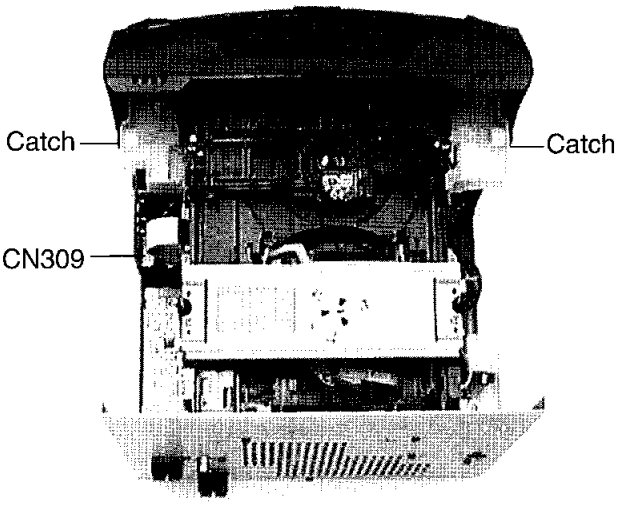

Step 5 Remove the wire at CP603 and CN309.

●Checking for Panel PCB, Main PCB and Deck PCB

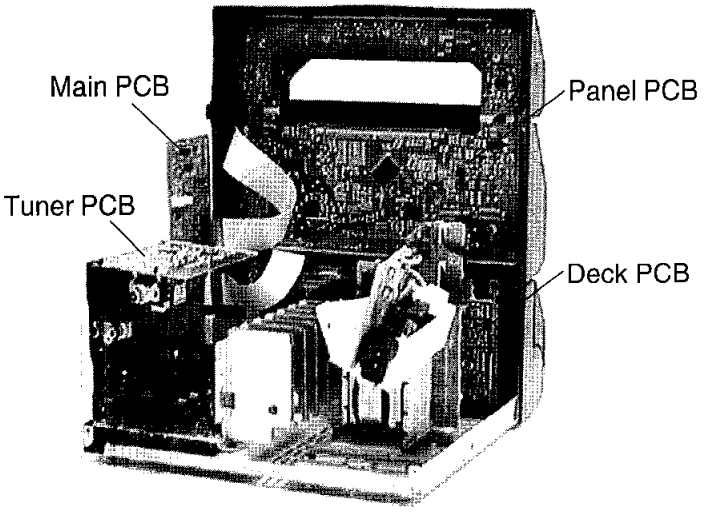

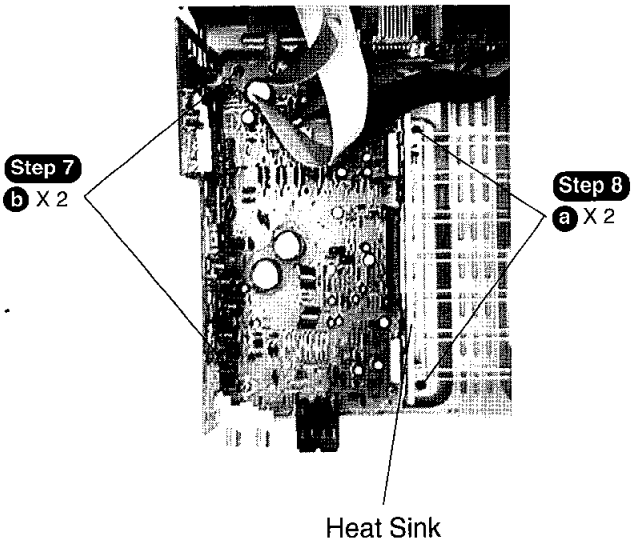

●Checking for Power PCB

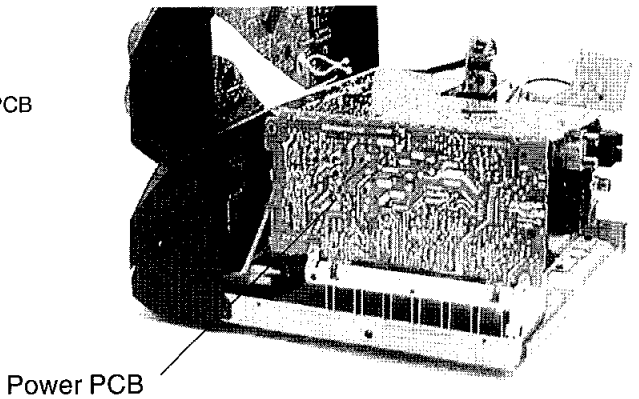

b
[XTB3+20J]
(Brass)

■ Main Component Replacement Procedures

1. Replacement of the Traverse Deck

Step 1 Follow the procedures in 'Disassembly of the Traverse Unit' (**Step 1** ~ **Step 4**).

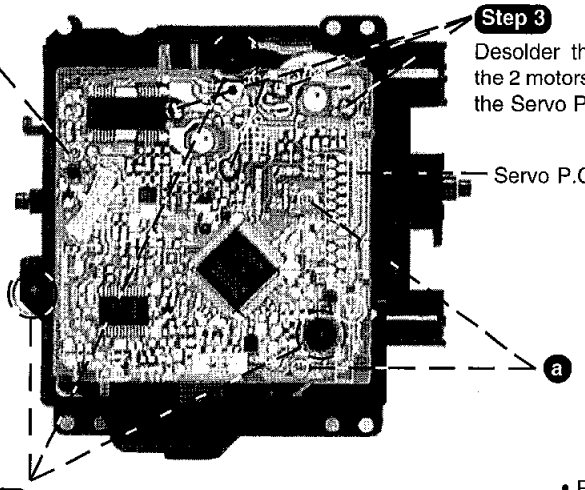
Step 2
a X 3
Step 3
Desolder the 4 legs of the 2 motors and pull out the Servo P.C.B.
Servo P.C.B.
a
Step 4
Widen the 3 bosses with a flat screwdriver and pull out the 3 pins. Then remove the Traverse Deck.

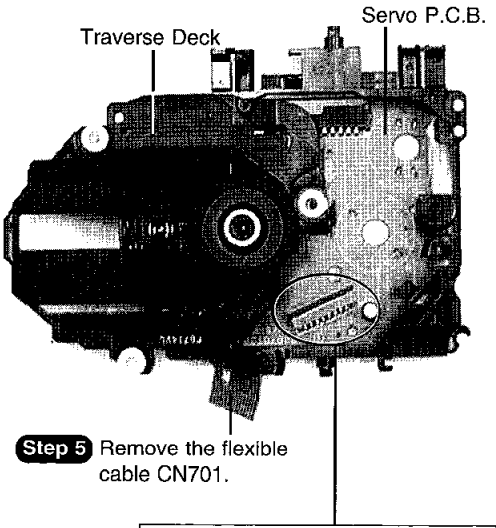

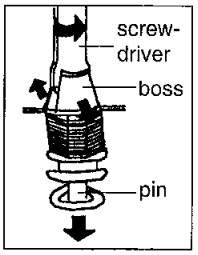

• Removal of the flexible cable
Push the top of the connector in the direction of the arrow ① , and then pull out the flexible cable in the direction of the arrow ② .

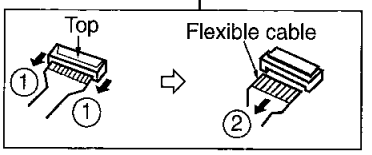

Note :
Insert a short pin into the flexible cable for traverse unit.

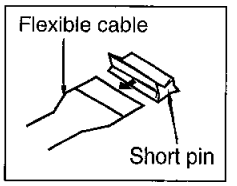

●Installation fo the CD servo P.C.B. after replacement

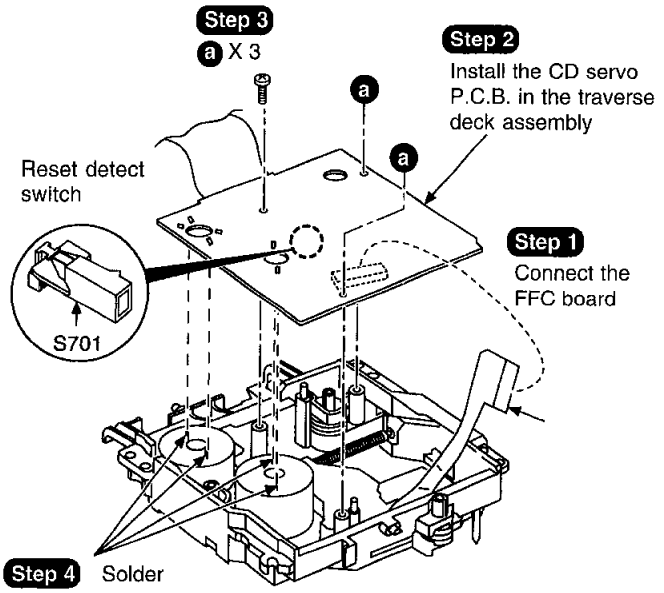

Note : Before installing the CD servo P.C.B., move the optical pickup toward the outer edge from the mark "◀".
[Otherwise, the reset detect switch (S701) mounted on the CD servo P.B.C. may be damaged.]

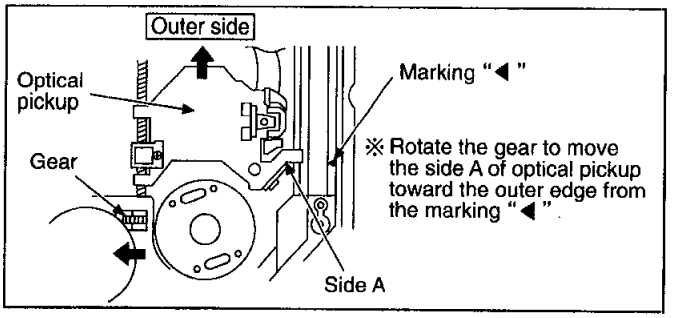
Outer side
Optical pickup
Marking "◀"
※ Rotate the gear to move the side A of optical pickup toward the outer edge from the marking "◀".
Gear
Side A

a [XTN2+6G] (Brass)

2. Replacement of the Power Amplifier IC and Regulator Transistor.

Step 1 Follow the procedures in 'Checking Procedure for each major P.C.B.' (**Step 1** ~ **Step 6**).

ⓐ	[XTBS3+8JFZ1] (Black)
ⓑ	[XTB3+20J] (Black)
ⓒ	[XTW3+15T] (Brass)
ⓓ	[XTB3+10JFZ] (Black)

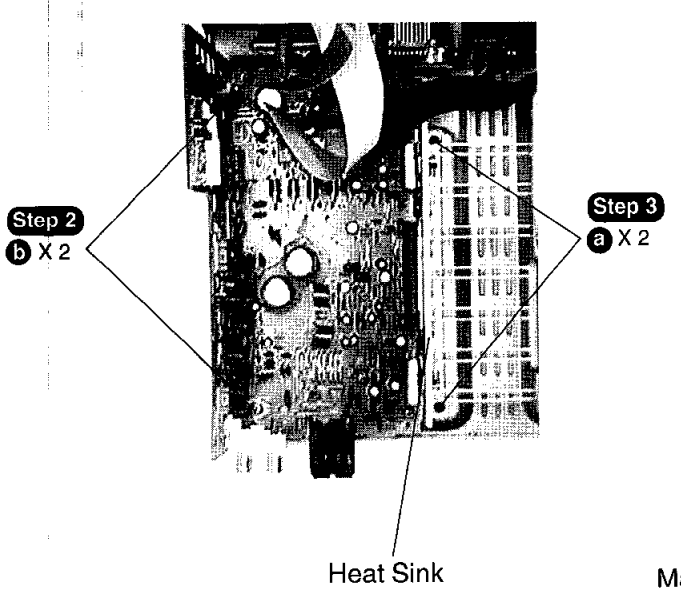

Step 4 Remove the wires at CN302, CN303 and CN304 and pull out the Main PCB.

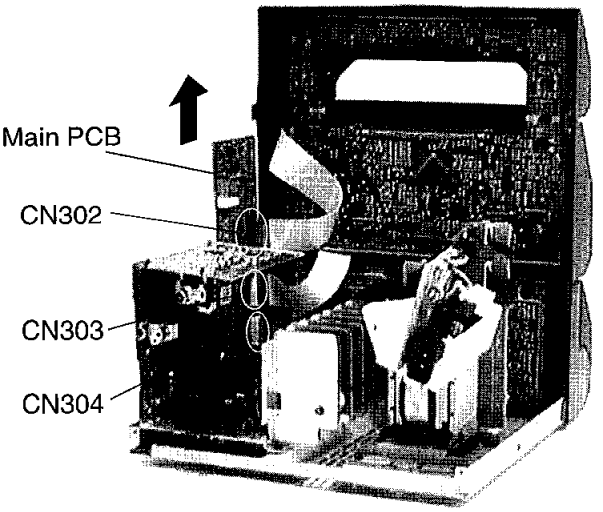

Step 5 Remove 4 screws fixed to the Power Amplifier IC and Transistor Holders.

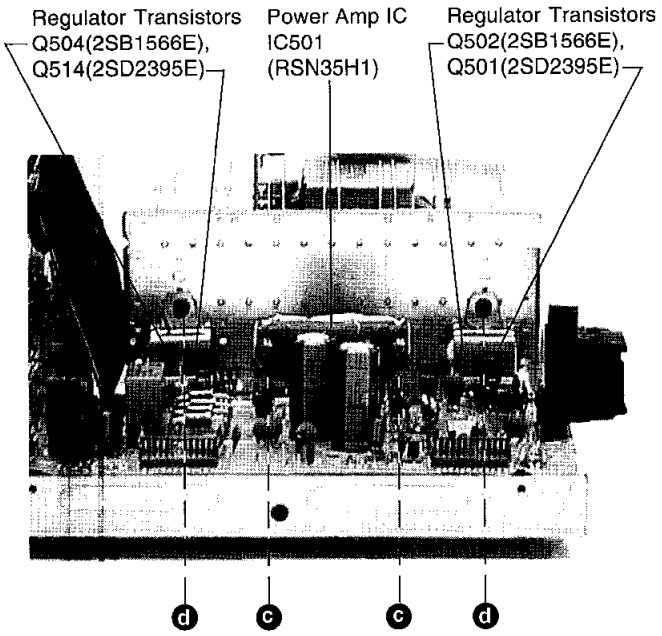

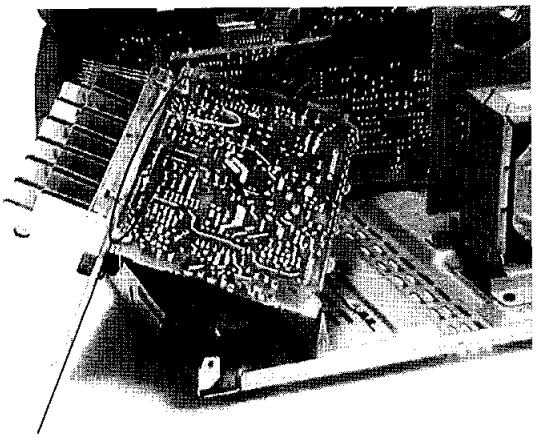

Step 6 Unsolder the terminals of Power Amp IC or Regulator Transistor and replace the respective component.

■ Disassembly and assembly of the Traverse Unit

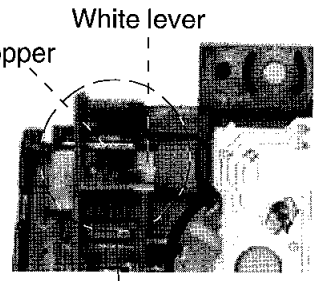

Step 1 Push the lever from position Ⓐ to Ⓑ.

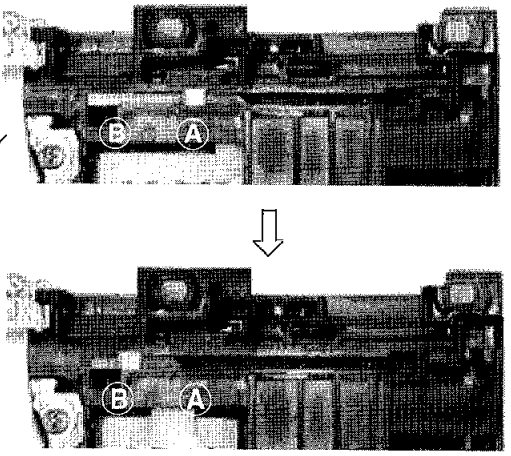

Step 3 Push the stopper (black) down until the white lever eject out.

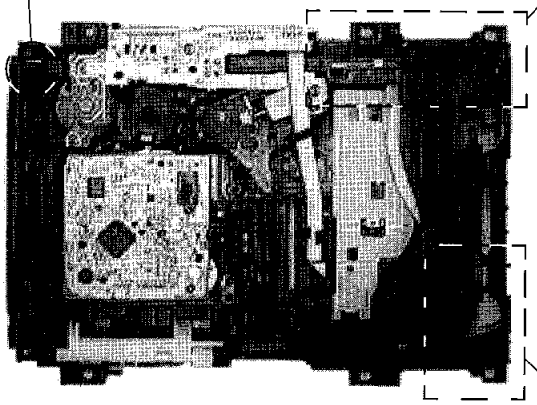

Step 2 Pull the stopper (black) in the direction of arrow ① and push the lever is the direction of arrow ②.

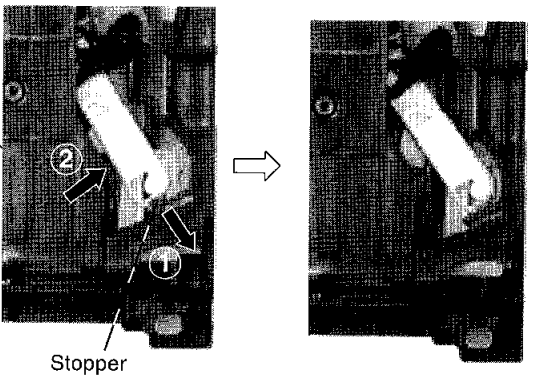

Step 4 Lift up the traverse unit and slide out the unit as shown.

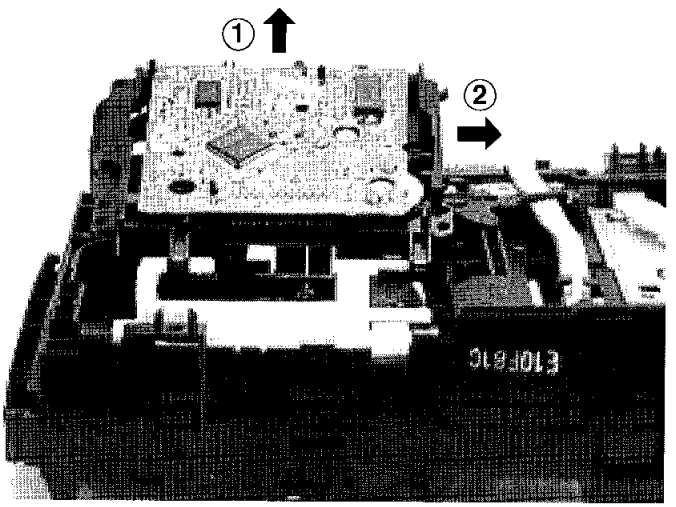

●Replacement of Traverse Unit

Step 1 Place the traverse unit as shown.

Step 2 Press in the lever shaft in the direction of arrow ① as shown and push the traverse unit into position in the direction of arrow ② .

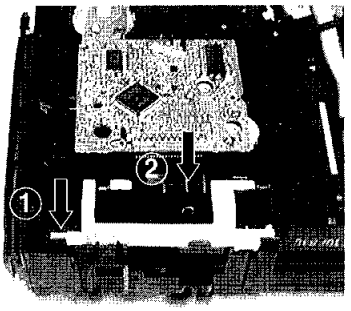

Step 3 Pull the stopper in the direction of arrow ① and release the lever in the direction of arrow ② as shown.

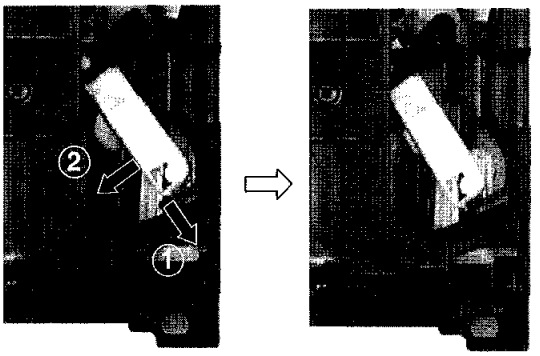

Step 4 Pull out the tray half way and push it back fully.

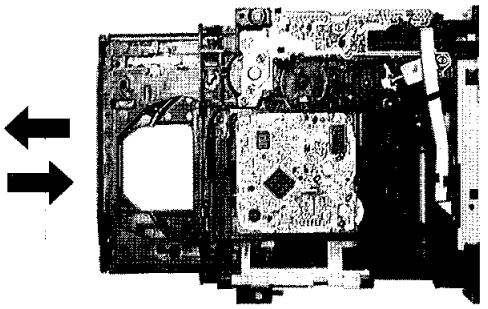

Step 5 Push the lever to the initial position indicated '⊢'.

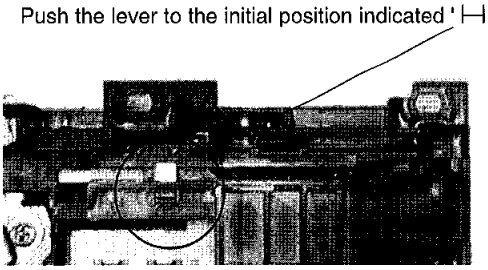

■ Disassembly and assembly of the Disc Tray

Step 1 ×3

Step 3 Remove the mechanism cover.

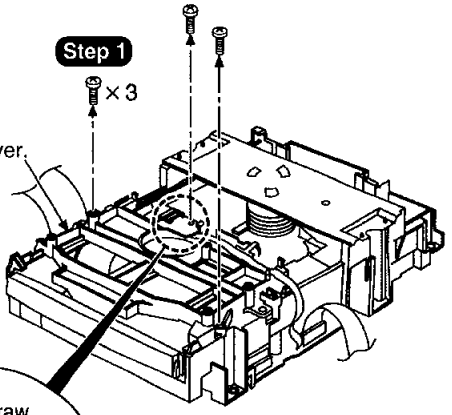

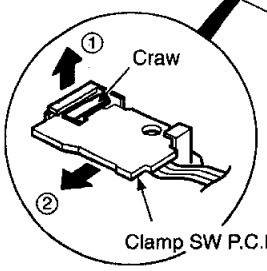

Step 2 With lifting the claw in the direction of arrow ① , draw the clamp SW P.C.B. in the direction of arrow ② .

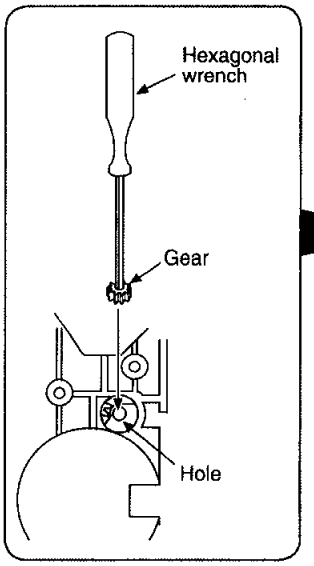

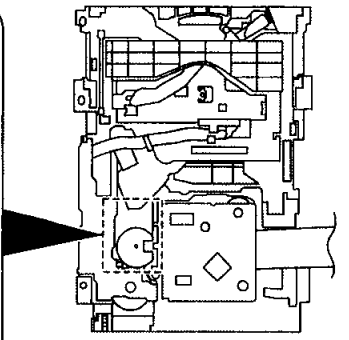

Step 4 Insert the gear with hexagonal wrench into the hole.

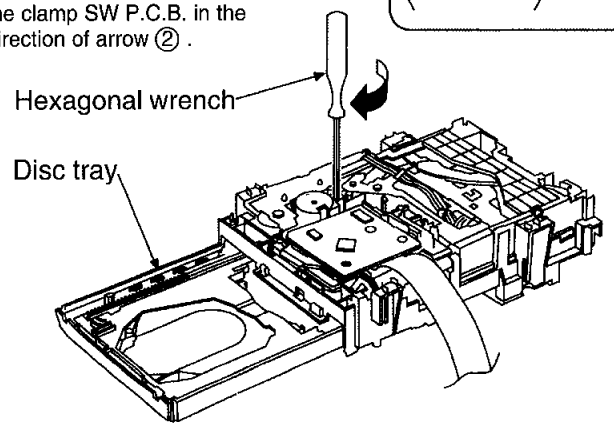

Step 5 Rotate the hexagonal wrench in the direction of arrow (clockwise), and then open the disc tray fully.

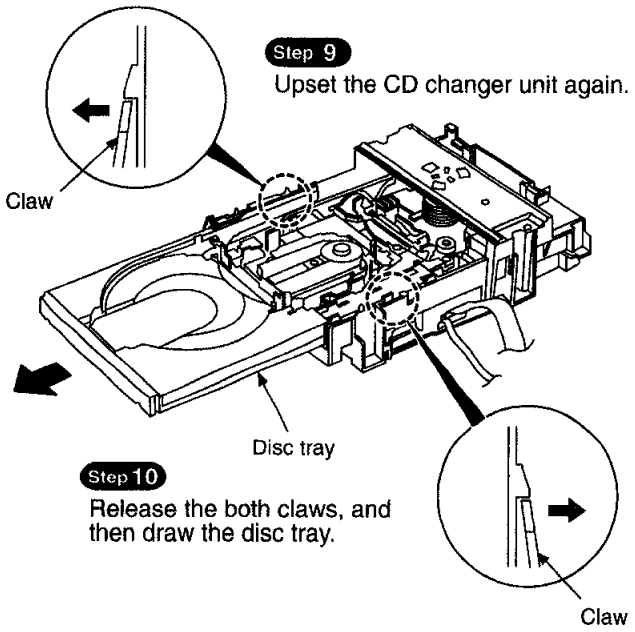

Step 9
Upset the CD changer unit again.

Step 10
Release the both claws, and then draw the disc tray.

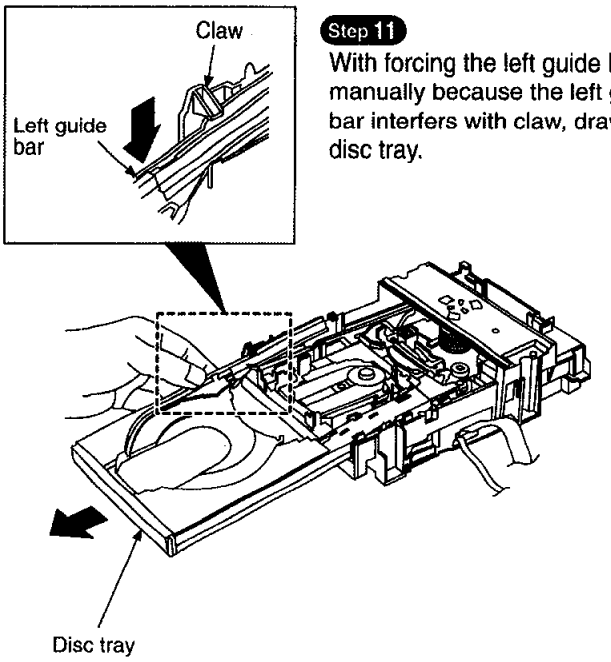

Step 11
With forcing the left guide bar manually because the left guide bar interfers with claw, draw the disc tray.

Installation of the disc tray after replacement

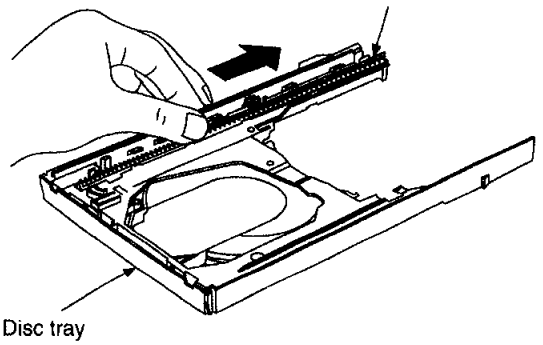

Step 1
Slide the drive rack fully in the direction of arrow.

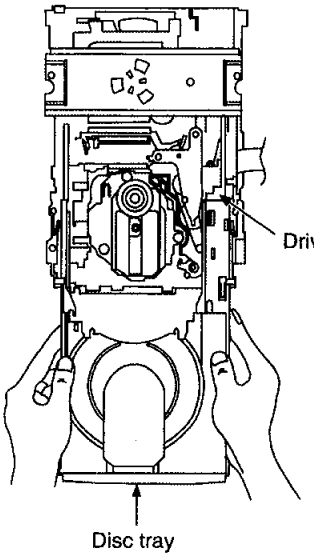

Step 2
Holding the drive rack not to move, install the disc tray

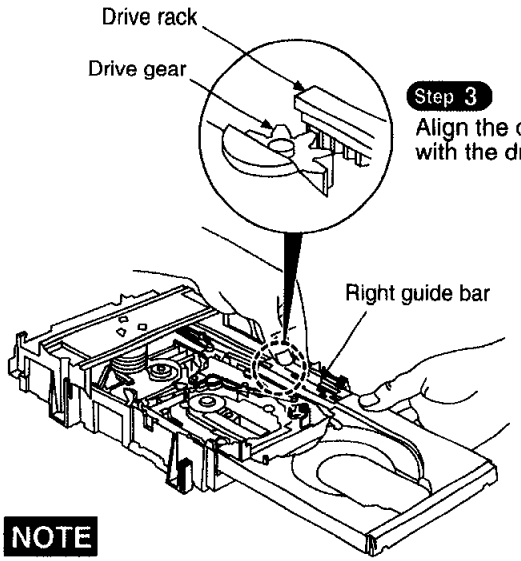

Step 3
Align the drive rack with the drive gear.

NOTE
Force the right guide bar of tray base manually not to move upwards.

Step 4
Holding the disc tray manually,rotate the pulley gear in the direction of arrow.

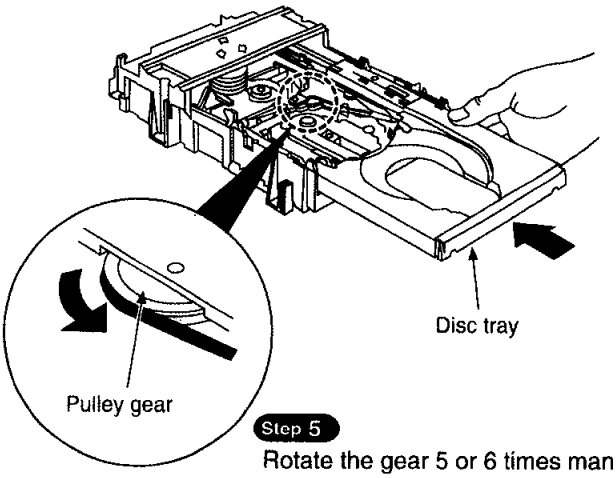

Step 5
Rotate the gear 5 or 6 times manually, and then push the disc tray.

■ Self-Diagnostic Display Function

■ Self-diagnostic display

This unit is equipped with a self-diagnostic display function which, if a problem occurs, will display an error code corresponding to the problem.
Use this function when performing maintenance on the unit.

■ How to enter the Self-Diagnostic Function

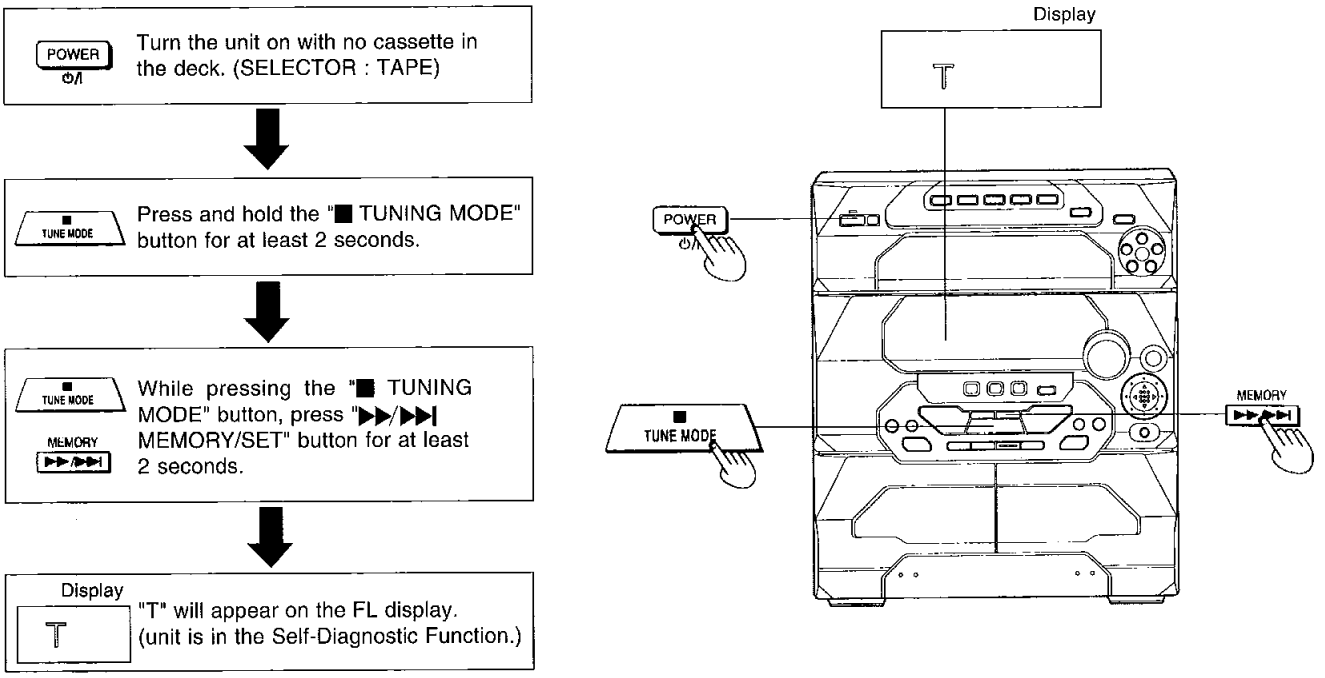
POWER
Turn the unit on with no cassette in the deck. (SELECTOR : TAPE)
TUNE MODE
Press and hold the "■ TUNING MODE" button for at least 2 seconds.
TUNE MODE
MEMORY
While pressing the "■ TUNING MODE" button, press "▶▶/▶▶| MEMORY/SET" button for at least 2 seconds.
Display
T
"T" will appear on the FL display. (unit is in the Self-Diagnostic Function.)
Display
T
POWER
TUNE MODE
MEMORY

■ Cassette Mechanism Test (For error code H01, H02, H03, F01, F02)

1. Press "TAPE, DECK 1/2" to select Deck 2.
2. Load a cassette tape with the erasure prevention tab, remove from left side only and close the cassette holder.
3. Press "▶▶/▶▶| MEMORY" (Tape will be stop after 2 seconds).
4. Load a cassette tape with the erasure prevention tab, remove from right side only and close the cassette holder.
5. Press "|◀◀/◀◀ FM MODE/BP" (Tape will be stop after 2 seconds).
6. Load a pre-recorded tape with both side record tabs intact and close the cassette holder.
7. Press "▶ TUNE/TIME ADJ∧ " (After TPS function, tape will stop automatically).
8. Press "•REC/STOP" (Tape will not move).
9. Press "■ TUNING MODE" to indicate Error code.
   • If several problem exist, error code will change each time when "■ TUNING MODE" is pressed.
   (e.g. H01 H03 F01 ..... etc.)
10. Press "TAPE, DECK 1/2" to select Deck 1.
11. Repeat step 2 to 9 to test Deck 1. (Tape Deck 1 will not check H02 because of no recording function)

■ CD Mechanism Test (F15, F16, F25 ~ F28, F75)

1. Press "CD".
2. Press "NEXT OPEN".
3. Press "■ TUNING MODE" to indicate Error Code.
   • If several problem exist, error code will change each time when "■ TUNING MODE" is pressed.
   (e.g. F15 F16 F25 ..... etc.)

■ To clear all Error code

1. Press "■ TUNING MODE" button for 5 seconds.
2. FL indicator shows "CLEAR" for 1 second and change to "T".

■ How to get out from Self-Diagnostic function

1. Press "POWER" button OFF.

■ Power Amplifier Failure (F61)

1. When power amplifier fail, F61 will indicate automatically.

■ Description of Error Code

(1) Error detection for Cassette Mechanism block

No.	Error	Error Display	Problem condition
1	MODE SW detection error	H01	Faulty operation of cassette mechanism. Faulty contact or short-circuit of mechanism mode switch (S951, S971).
2	REC INH SW detection error	H02	Recording not possible. Faulty contact or short-circuit of REC INH switch (S974, S975).
3	HALF SW detection error	H03	Playback can not perform. Faulty contact or short-circuit of HALF switch (S952, S972).
4	Reel Pulse detection error	F01	The tape advances slightly and then stops. Faulty reel pulse, faulty hole detect IC (IC951, IC971).
5	TPS abnormal	F02	Cassette deck will not perform TPS function. Faulty playback EQ/recording amplifier IC (IC101).

(2) Error detection for CD/Changer block

No.	Error	Error Display	Problem condition
1	REST SW detection error	F15	CD does not function. This error occurs when the Optical Pick Up REST SW (S701) is not detected within the specified time (about 8 seconds)
2	Transmission error between CD servo LSI and micon	F26	CD does not function. This error occurs when the POWER is ON for the CD block and an error is detected after the transmission has started.
3	CD power error	F75	CD does not function. Check if CDRST is H for SELECTOR at CD. If it is not H after 1 second, it shall be memorised as an error. (IC702)

(3) Power Supply related error detection

No.	Error	Error Display	Problem condition
1	POWER AMP output abnormal	F61	When POWER is switched on, power become off automatically. During normal operation, if DC DET become L, PCNT shall become L and the error display on the left shall be displayed. (IC501)

■ CD Test Mode Function

This CD test mode is provided to check CD unit without connecting to changer loading mechanism. This mode shall operate CD PLAY with CD unit being connected only and CD Automatic Alignment result is shown on FL display.

■ How to set CD test mode

Prepare and set up the CD unit

CD — Press CD

TUNE MODE — Press and hold the "■ TUNING MODE" button at least 2 seconds.

TUNE MODE + MEMORY ▶▶/▶▶| — While pressing the "■ TUNING MODE" button, press "▶▶/▶▶| MEMORY/SET" button for at least 2 seconds.

Display: CD E00 — Automatic Alignment result appear on the FL display.

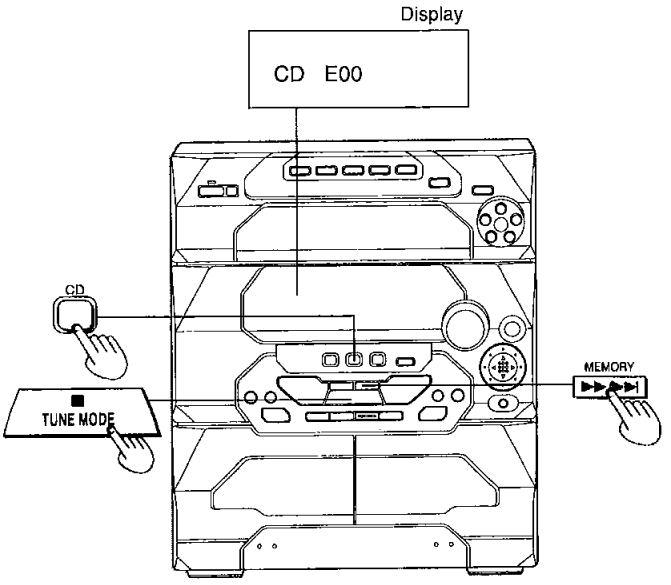

■ CD Automatic Alignment result indication

This function provided indication of error code as the result of Automatic Alignment of CD (Tracking, Focus, Offset, etc.). Based on these error codes, the faulty area can be located .

■ Error code Explanation

- The unit is satisfactory if the error code is E00
- Before testing, make sure that the test disc is free of scratches, dirt and that the optical pick up lens is clean.

Error code	E00	E01	E02	E03	E04	E05	E06	E07	E08	E09	E0A	E0B	E0C	E0D	E0E	E0F
Focus offset	○	※	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tracking offset	○	※	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Focus Gain (Rough)	○	※	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Tracking Gain(Rough)	○	–	○	×	○	×	○	×	○	×	○	×	○	×	○	×
Tracking balance	○	–	×	×	○	○	×	×	○	○	×	×	○	○	×	×
Focus balance	○	–	○	○	×	×	×	×	○	○	○	○	×	×	×	×
Tracking or Focus Gain (Fine)	○	–	○	○	○	○	○	○	×	×	×	×	×	×	×	×

○ Satisfy × Fault (※ Fault either items)

■ Measurements and Adjustments
< CASSETTE DECK SECTION >

- Measurement Condition
  - Reverse-mode selector switch : ⇄
  - Tape edit : NORMAL
  - Record timer : OFF
  - Make sure head, capstan and pressure roller are clean.
  - Judgeable room temperature 20 ± 5 °C (68 ± 9 °F)

- Measuring instrument
  - EVM (Electronic Voltmeter)
  - Digital frequency counter

- Test tape
  - Head azimuth adjustment (8 kHz, –20 dB); QZZCFM
  - Tape speed adjustment (3 kHz, –10 dB); QZZCWAT
  - Playback gain adjustment (315 Hz, 0 dB); QZZCFM
  - Normal reference blank tape; QZZCRA
  - CrO_2 tape; QZZCRX

• Head Azimuth Adjustment (Deck 1/2)

Caution :
- Please replace both azimuth adjustment screws (RHE5152ZB) and springs (RMB0331) simultaneously when readjusting the head azimuth. (shown in Fig. 2)
  Even if you wish to readjust the head azimuth without replacing the screws and springs, a fine adjustment cannot be done because of the screw-locking bond adhered to the azimuth screw and spring.
- Please remove the screw-locking bond left on the head base when replacing the azimuth screw.
- If you wish to readjust the head azimuth, be sure to adjust with adhering the cassette tape closely to the mechanism by pushing the center of cassette tape with your finger. (shown in Fig. 3)

1. Playback the azimuth adjustment portion (8 kHz, –20 dB) of the test tape (QZZCFM) in the forward play mode. Vary the azimuth adjusting screw until the output of the R-CH (PB OUT-R) are maximized.
2. Perform the same adjustment in the reverse play mode.
3. After the adjustment, apply screwlock to the azimuth adjusting screw.

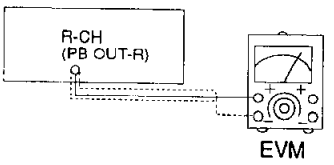

Fig. 1



Fig.2

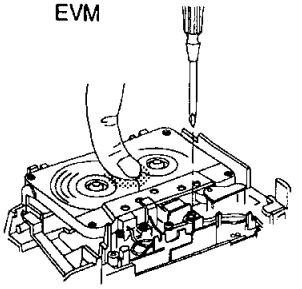
Fig. 3

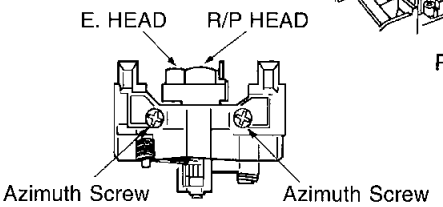

Fig. 4

• Tape Speed Adjustment (Deck 1/2)

1. Set the tape edit button to "NORMAL" position.
2. Insert the test tape (QZZCWAT) to DECK 2 and playback (FWD side) the middle portion of it.
3. Adjust Motor VR (DECK 2) for the output value shown below.

   Adjustment target : 2940 ~ 3060 Hz (NORMAL speed)
4. After alignment, assure that the output frequency of the DECK 2 REV and DECK 1 FWD are within **±45 Hz** and **± 60 Hz** respectively of the value of the output frequency of DECK 2 FWD.

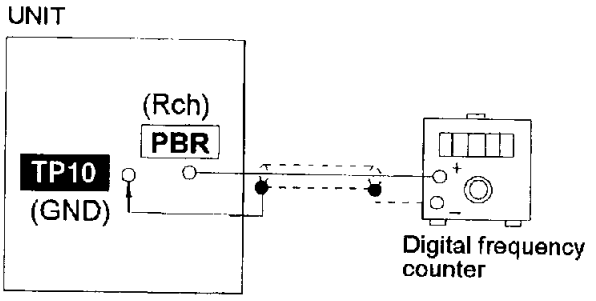

• Bias and Erase Voltage Check

1. Set the unit to "AUX" position.
2. Insert the Normal blank tape (QZZCRA) into DECK 2 and set the unit to "REC" mode (use "•REC / STOP" key).
3. Measure and make sure that the output is within the standard value.
4. Insert the CrO_2 tape (QZZCRX).
5. Repeat steps 2 and 3.

Bias voltage for Deck 2 (Standard value) :	**19 ± 4mV (Normal)**
	27 ± 5mV (CrO_2)
Erase voltage for Deck 2 (Standard value) :	**more than 70mV (Normal)**
	more than 90mV (CrO_2)

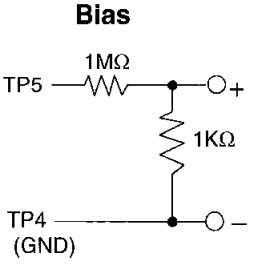

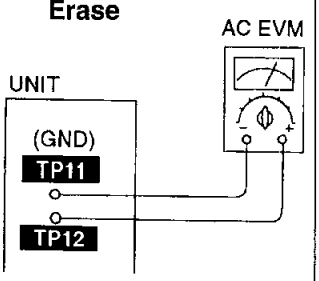

• Bias Frequency Adjustment (Deck 2)

1. Set the unit to "AUX" position.
2. Insert the Normal blank tape (QZZCRA) into DECK 2 and set the unit to "REC" mode (use "•REC / STOP" key).
3. Adjust L601 so that the output frequency is within the standard value.

Standard Value : 95 ± 8 kHz

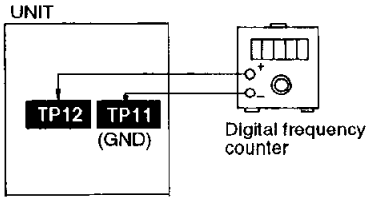

< TUNER SECTION >

■ AM-IF ALIGNMENT

SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	INDICATOR (ELECTRONIC VOLTMETER or OSCILLOSCOPE)	ADJUSTMENT (Shown in **Fig. 3**)	REMARKS
CONNECTIONS	FREQUENCY				
Fashion a loop of several turns of wire and radiate a signal into the loop ant. of receiver.	450kHz 30 % Mod. at 400Hz	Point of non-interference.(on/ about 600kHz	Headphones Jack (32Ω) (Fabricate the plug as shown in Fig. 2 and then connect the lead wires of the plug to the measuring instrument.)	Z102 (AM IFT)	Adjust for maximum output.

■ AM-RF ALIGNMENT

"	522 kHz	Tuning capacitor fully closed	"	Z101(GN) (AM OSC Coil)	Adjust for maximum output.
"	603 kHz	Tuning to signal	"	Z101(GN) (AM ANT Coil)	Adjust for maximum output.

• Alignment Points

<Cassette Deck Section>

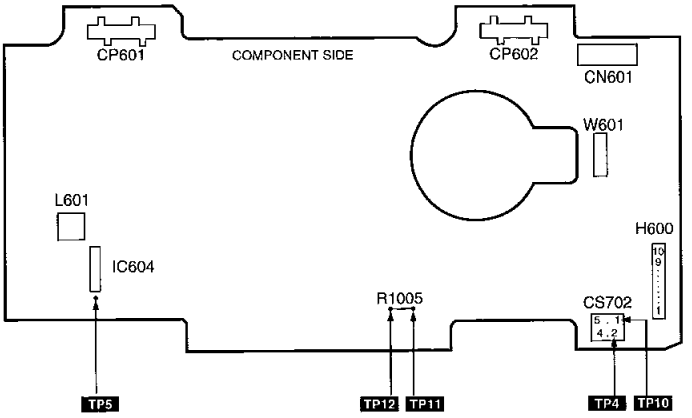

Fig. 1

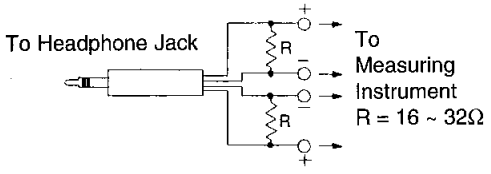

Fig. 2

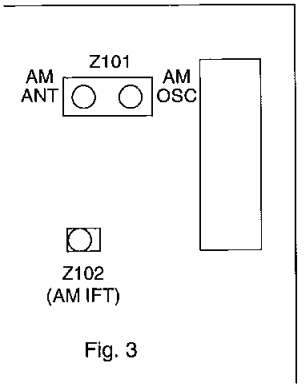

Fig. 3

■ Illustration of IC's, Transistors and Diodes

M38198MCA824(100P)
MN662746RPK1(80P)
M62433AFP(80P)

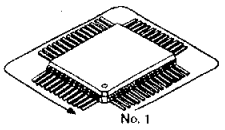

RSN35H1

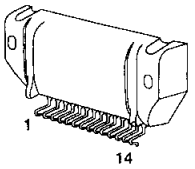

TA7291P

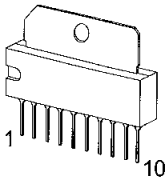

BA3835F-E2(18P)
BU2090AF-E2 (16P)
BA4558FE2 (8P)

LA1833MN-TLM (24P)
LC72131MDTRM (20P)
AN7348STA-E1 (24P)

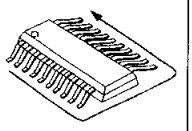

BA7755A

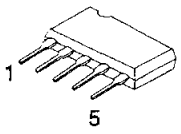

M5218AP

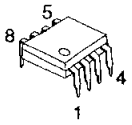

0N2180RLC

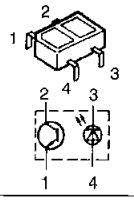

AN8837SBE1

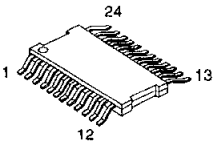

AN8780NSBE2

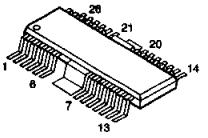

2SJ498CDTA



2SA1037AKSTX
DTC114YKA146

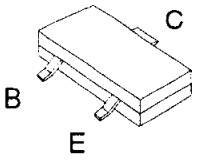

2SD2395E
2SB1566E

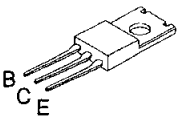

2SB1238QRTV2

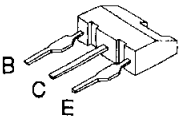

2SC3940AQSTA

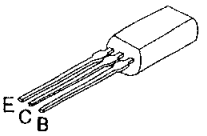

KTA12710YTA
KTC32030YTA
2SD965RTA
KSB564ACYGTA

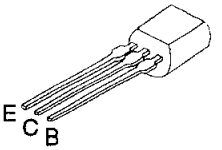

KRC109MTA
KRA102MTA
KRC111MTA
KRA110MTA
KRC103MTA
KRC102MTA
KRC114MTA

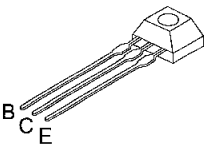

KTC3199GRTA
RVTDTC143EST
RVTDTA114EST
2SC2784FTA
2SA933SSTA
RVTDTC114EST

2SC1740SSTA
2SC2785FTA
2SC2787LTA
2SD2144STA
2SD1450STA

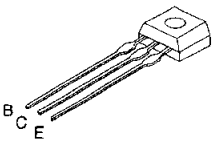

SLR325DCT31
SLR325MCT31W

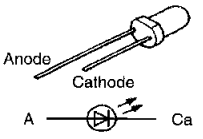

1D3E
1N5402BM21
RL1N4003N02

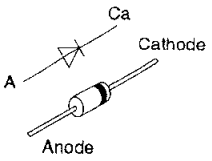

MTZJ10BTA
MTZJ4R7BTA
MTZJ5R1BTA
MTZJ15CTA
MTZJ33BTA
MTZJ12BTA

MTZJ5R6BTA
MTZJ6R2BTA
MTZJ8R2CTA
MTZJ7R5ATA
MA4020LTA
MTZJ3R6BTA

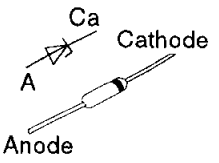

LN201LPQJA



RVD1SS133TA
1SS291TA
MA165TA

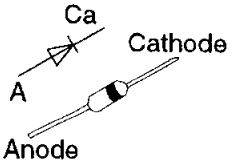

GP1S94

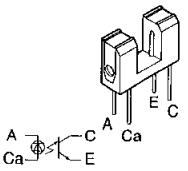

Blank

■ Terminal Function of IC's

• IC701 (AN8837SBE1) Servo Amplifier

Pin No.	Mark	I/O	Function
1	PDE	I	Tracking signal input terminal 1 (E ch)
2	PDF	I	Tracking signal input terminal 2 (F ch)
3	VCC	I	Power supply connection
4	PDA	I	Focus signal input terminal 1 (A ch)
5	PDB	I	Focus signal input terminal 2 (B ch)
6	LPD	I	Laser PD connection
7	LD	O	Laser power auto control output
8	RF	O	RF signal output
9	RFIN	I	RF signal input
10	CSBRT	I	Capacitor for detection connection
11	CEA	I	Capacitor connection for HPF amplifier
12	BDO	O	BDO output ("H" : drop out)
13	LDON	I	LD APC input ("H" : ON, "L" : OFF)
14	GND	—	Ground connection

Pin No.	Mark	I/O	Function
15	/RFDET	O	NRFDET output ("L" : detection)
16	CROSS	O	CROSS output (Track cross signal output)
17	OFTR	O	Off-track output("L" : ON track, "H" : OFF track)
18	VDET	O	VDET output("H" : Vibration detected)
19	ENV	O	RF envelope detection
20	ENVOFF	I	Not used, connected to power supply
21	TEBPF	I	Oscillation detect signal input
22	TEN	I	Tracking error signal input
23	TEOUT	O	Tracking error signal output
24	FEOUT	O	Focus error signal output
25	FEN	I	Focus error signal input
26	VREF	O	Reference voltage output
27	TBAL	I	Tracking balance signal input
28	FBAL	I	Focus balance signal input

• IC703 (AN8780NSBE2) Focus coil / Tracking coil / Traverse motor / Spindle motor driver

Pin No.	Mark	I/O	Function
1	/RST	—	Not used, open
2	NC	—	Not used
3	IN2	I	Motor driver (2) input
4	PC2	I	Turntable motor drive signal ("L" : ON)
5	NC	—	Not used
6	IN1	I	Motor driver (1) input
7	PVCC1	I	Power supply (1) for driver
8	PGND1	—	Ground connection (1) for driver
9	NC	—	Not used, connected to GND
10	D1-	O	Motor driver (1) reverse-action output
11	D1+	O	Motor driver (1) forward-action output
12	D2-	O	Motor driver (2) reverse-action output
13	D2+	O	Motor driver (2) forward-action output

Pin No.	Mark	I/O	Function
14	D3–	O	Motor driver (3) reverse-action output
15	D3+	O	Motor driver (3) forward-action output
16	D4–	O	Motor driver (4) reverse-action output
17	D4+	O	Motor driver (4) forward-action output
18	NC	—	Not used, open
19	PGND2P	—	Ground connection (2) for driver
20	PVCC2	I	Power supply (2) for driver
21	VCC	I	Power supply terminal
22	VREF	I	Reference voltage input
23	IN4	I	Motor driver (4) input
24	IN3	I	Motor driver (3) input
25	RSTIN	I	Reset terminal (Not used, connected to GND)
26	NC	—	Not used, connected to GND

• IC702 (MN662746RPK1) Servo processor / Digital signal processor / Digital filter / D/A converter

Pin No.	Mark	I/O	Function
1	BCLK	O	Serial bit clock terminal (Not used, open)
2	LRCK	O	L/R discriminating signal (Not used, open)
3	SRDATA	O	Serial data (Not used, open)
4	DVDD1	I	Power supply (digital circuit) terminal
5	DVSS1	—	GND (digital circuit) terminal
6	TX	O	Digital audio interface signal
7	MCLK	I	Microprocessor command clock signal
8	MDATA	I	Microprocessor command data signal
9	MLD	I	Microprocessor command load signal
10	SENSE	O	Sense signal output
			(OFT,FESL,MAGEND,NAJEND,POSAD,SFG)
11	/FLOCK	O	Optical servo condition(focus)("L" : lead-in)
12	/TLOCK	O	Optical servo condition(tracking)("L" : lead-in)
13	BLKCK	O	Sub-code block clock (f=75Hz)
14	SQCK	I	External clock signal input for sub-code Q
			register.
15	SUBQ	O	Sub-code Q code output
16	DMUTE	I	Muting input ("H" : mute)
17	STAT	O	Status signal output
			(CRC,CUE,CLVS,TTSTVP,FCLV,SQCK)
18	/RST	I	Reset input
19	SMCK	O	1/2-divided clock signal of crystal oscillating at
			MSEL = "H" (fSMCK=8.4672MHz)
			1/4-divided clock signal of crystal oscillating at
			MSEL="L" (fSMCK=4.2336MHz)
20	PMCK	O	1/192-divided clock signal of crystal oscillating
			(fPMCK=88.2kHz) (Not used, open)
21	TRV	O	Traverse servo control output
22	TVD	O	Traverse drive signal output
23	PC	O	Spindle motor ON signal output ("L" : ON)
24	ECM	O	Spindle motor drive signal output
			(forced mode output)
25	ECS	O	Spindle motor drive signal output
			(servo error signal output)
26	KICK	O	Kick pulse output
27	TRD	O	Tracking drive output
28	FOD	O	Focus drive output
29	VREF	I	D/A (drive) output (TVD,ECS,TRD,FOD,
			FBAL,TBAL) Reference voltage input.
30	FBAL	O	Focus balance adjustment output
			(Not used,open)
31	TBAL	O	Tracking balance adjustment output
32	FE	I	Focus error signal input (analog input)
33	TE	I	Tracking error signal input (analog input)
34	RFENV	I	RF envelope signal input
35	VDET	I	Vibration detection signal input ("H" : detection)

Pin No.	Mark	I/O	Function
36	OFT	I	Off-track signal input ("H" : off track)
37	TRCRS	I	Track cross signal input
38	/RFDET	I	RF detection signal input ("L" : detection)
39	BDO	I	Dropout signal input ("H" : Dropout)
40	LDON	O	Laser on signal output ("H" : ON)
41	TES	O	Tracking error shunt signal output ("H" : shunt)
42	PLAY	O	Play signal out ("H" : PLAY)
43	WVEL	O	Double speed status signal output ("H" : DS)
44	ARF	I	RF signal input
45	IREF	I	Reference current input
46	DRF	I	DSL bias (Not used, open)
47	DSLF	I/O	DSL loop filter
48	PLLF	I/O	PLL loop filter
49	DSLF2	I/O	VCO loop filter (Not used, open)
50	AVDD2	I	Power supply input (for analog circuit)
51	AVSS2	—	GND (for analog circuit)
52	EFM	O	EFM signal output (Not used, open)
53	PCK	O	PLL extraction clock ouput (Not used, open)
			(fPCK=4.321 MHz during normal playback)
54	TOUT	O	Phase comparison signal of EFM and PCK signals
			(Not used, open)
55	SUBC	O	Sub-code serial data output (Not used, open)
56	SBCK	I	Sub-code frame clock signal output
			(fCLDCK=7.35kHz during normal playback)
57	VSS	—	GND
58	X1 IN	I	Crystal oscillating circuit input (f=16.9344MHz)
59	X2 OUT	O	Crystal oscillating circuit output (f=16.9344MHz)
60	VDD	I	Power supply input (for oscillating circuit)
61	BYTCK	O	Byte clock output (Not used, open)
62	/CLDCK	O	Clock input for sub-code serial data
			(Not used, open)
63	FCLK	O	Crystal frame clock signal output
			(fCLK=7.35kHz, double=14.7kHz)
64	PFLAG	O	Interpolation flag output ("H" : interpolation)
			(Not used, open)
65	FLAG	O	Flag output (Not used, open)
66	CLVS	O	Spindle servo phase synchronizing signal output
			("H" : CLV, "L" : rough servo) (Not used, open)
67	CRC	O	Sub-code CRC checked output
			("H" : OK, "L" : NG) (Not used, open)
68	RESY	O	Frame resynchronizing signal output
			(Not used, open)
69	FLAG	O	De-emphasis ON signal output
			("H" : ON) (Not used, open)
70	ARST	I	Reset input through MASH circuit ("L" : Reset)
71	/TEST	I	Test input

Pin No.	Mark	I/O	Function
72	AVDD1	I	Power supply input (for analog circuit)
73	OUTL	O	Left channel audio signal output
74	AVSS1	—	GND
75	OUTR	O	Right channel audio signal output
76	RSEL	I	RF signal polarity assignment input
			(at "H" level, RSEL="H", at "L" level, RESL="L")
77	CSEL	I	Crystal oscillating frequency designation input

Pin No.	Mark	I/O	Function
			"L" : 16.9344MHz "H" : 33.8688MHz
78	PSEL	I	Test input (normally "L") (Not used, open)
79	MSEL	I	Output mode switching of SUBQ terminal
			("H" : Q code buffer mode)
80	SSEL	I	Output frequency switching for SMCK terminal
			"H" : SMCK=8.4672MHz
			"L" : MCK=4.2336MHz (Not used, open)

• IC600 (M38198MCA824) System Microprocessor

Pin No.	Mark	I/O	Function
1	CRT	I/O	CRT timer
2	TPS	I	TPS signal input
3	DECK1	I	Deck 1 mechanism condition input
4	DECK 2	I	Deck 2 mechanism condition input
5	KEY 4	I	Key 4 input
6	KEY 3	I	Key 3 input
7	KEY 2	I	Key 2 input
8	KEY 1	I	Key 1 input
9	SER 1	O	Serial clock output for IC903 and IC904
10	VBASS	O	VBass level control signal output
11	SER 2	O	Serial data/clock output for IC301 and IC903
12	SER 3	O	Serial data output for IC301 and IC904
13	SER 4	O	Serial clock output (Not used, open)
14	SPE	I	Spectrum analyser input
15	CHG_PLGR	O	Changer plunger output
16	CHG_SW1	I	Changer SW detection input 1
17	CHG_SW2	I	Changer SW detection input 2
18	CDRST	O	Reset signal output for CD circuit
19	STATUS	I	Reset signal input for CD circuit
20	SQCK	O	CD subcode clock output
21	SD	I	Tuner signal detect input
22	SUBQ	I	CD subcode data input
23	CHG_CW	O	Changer motor CW output
24	CHG_CCW	O	Changer motor CCW output
25	CHG_HALF	O	Changer half drive output
26	MLD/	O	CD command load output and
	PLLCE		tuner chip enable output
27	MDATA/	O	CD command data output /
	PLLDA		Tuner PLL data output
28	MCLK/	O	CD command clock output and
	PLLCK		tuner PLL clock output
29	RESTSW	I	CD REST detect SW input

Pin No.	Mark	I/O	Function
30	BLKCK	I	CD block clock input
31	RMT	I	Remote control signal input
32	DCDET	I	DC detect input
33	ECONO	O	Main transformer control output for economy
			mode
34	SYNC	I	AC power source detect signal input
35	/RESET	I	RESET input
36	XCIN	I	X'tal oscillator (f = 32.768 kHz sub clock)
37	XCOUT	O	X'tal oscillator (f = 32.768 kHz sub clock)
38	XIN	I	X'tal oscillator (f = 8.0 MHz Main clock)
39	XOUT	O	X'tal oscillator (f = 8.0 MHz Main clock)
40	VSS	—	Ground (0V)
41	MBP1	O	MPU beat proof output 1
42	MBP2	O	MPU beat proof output 2
43	J_JOGA	I	AI Equalizer control signal input
44	J_JOGB	I	AI Equalizer control signal input
45	MKCLK	O	Deck control clock output
46	SP_A	O	Space control A
47	SP_B	O	Space control B
48	SP_C	O	Space control C
49-54	GRD8-GRD13	O	LCD grid signal output
55-61	GRD1-GRD7	O	LCD grid signal output
62-90	SEG32-SEG4	O	LCD segment signal output
91	VCC	I	Power supply (+5V)
92-94	REG3-REG1	O	LCD segment signal output
95	REG_IN	I	Region select signal input
96	V_JOGA	I	Main volume jog input A
97	V_JOGB	I	Main volume jog input B
98	VEE	—	Power supply (-30V)
99	AVSS	—	Analog ground (0V)
100	VREF	I	Reference voltage input

■ Schematic Diagram

(All schematic diagrams may be modified at any time with the development of new technology)

Note :

< for Servo Circuit >

- **S701** : Reset switch

< for Panel circuit and Operation Circuit >

- **S602** : AUX select switch
- **S603** : Reverse play, Tune/time adjust down switch
- **S604** : DISC 5 eject switch
- **S605** : Tuner select switch
- **S606** : FWD play/pause, tune/time adjust up switch
- **S607** : DISC 4 eject switch
- **S608** : CD select switch
- **S609** : Stop, tune mode select switch
- **S610** : DISC 3 eject switch
- **S611** : Tape/deck select switch
- **S612** : FWD, memory/set switch
- **S613** : DISC 2 eject switch
- **S614** : Clock, timer select switch
- **S615** : Economy mode switch
- **S616** : REW, FM mode/BP select switch
- **S617** : DISC 1 eject switch
- **S618** : Play timer/REC timer select switch
- **S619** : Random play switch
- **S620** : Deck 1 open switch
- **S621** : EQ adjust down switch
- **S622** : Display, demonstration select switch
- **S623** : CD manager switch
- **S624** : Tape Edit switch
- **S625** : EQ adjust left switch
- **S626** : V. BASS switch
- **S627** : DISC 5 select switch
- **S628** : EQ adjust up switch
- **S629** : Record select switch
- **S630** : DISC 4 select switch
- **S631** : EQ adjust right switch
- **S632** : Reverse mode select switch
- **S633** : DISC 3 select switch
- **S634** : Deck 2 open switch
- **S635** : DISC 2 select switch
- **S636** : DISC 1 select switch
- **S638** : Power switch
- **S639** : 3D AI EQ switch
- **VR600** : Volume control

< for Mechanism (Deck 1) circuit and Mechanism (Deck 2) circuit >

- **S951** : Deck 1 Mode detect switch.
- **S952** : Deck 1 Tape detect switch.
- **S953** : Deck 1 CrO_2 detect switch.
- **S971** : Deck 2 Mode detect switch.
- **S972** : Deck 2 Tape detect switch.
- **S973** : Deck 2 CrO_2 detect switch.
- **S974** : Deck 2 Record detect switch.
- **S975** : Deck 2 Record detect switch.

< for Loading Motor circuit, Detecting Switch (1) Circuit and Detecting Switch (2) Circuit >

- **SW1, SW2** : Tray position switch
- **SW3** : Tray open switch
- **SW4** : CD offset detect switch
- **SW5** : Spindle bottom position detect switch

•Signal line

: +B line
: –B line
: FM/AM signal line
: Main signal line
: Playback signal line
: Record signal line
: CD signal line
: FM signal line
: AM signal line
: AM OSC signal line
: FM OSC signal line
: AUX signal line

•The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.

No mark : Playback << >>.....Rec [ ] : AUX (( )) : CD < > ..... FM ( ).... AM

•Importance safety notice:
Components identified by ⚠ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

Caution !
IC, LSI and VLSI are sensitive to static electricity.
Secondary trouble can be prevented by taking care during repair.
•Cover the parts boxes made of plastics with aluminium foil.
•Put a conductive mat on the work table.
•Ground the soldering iron.
•Do not touch the pins of IC, LSI or VLSI with fingers directly.

J TUNER CIRCUIT

(P.C.Board on page 45)

: +B Line
: FM/AM Signal Line
: FM Signal Line
: FM OSC Signal Line
: AM Signal Line
: AM OSC Signal Line

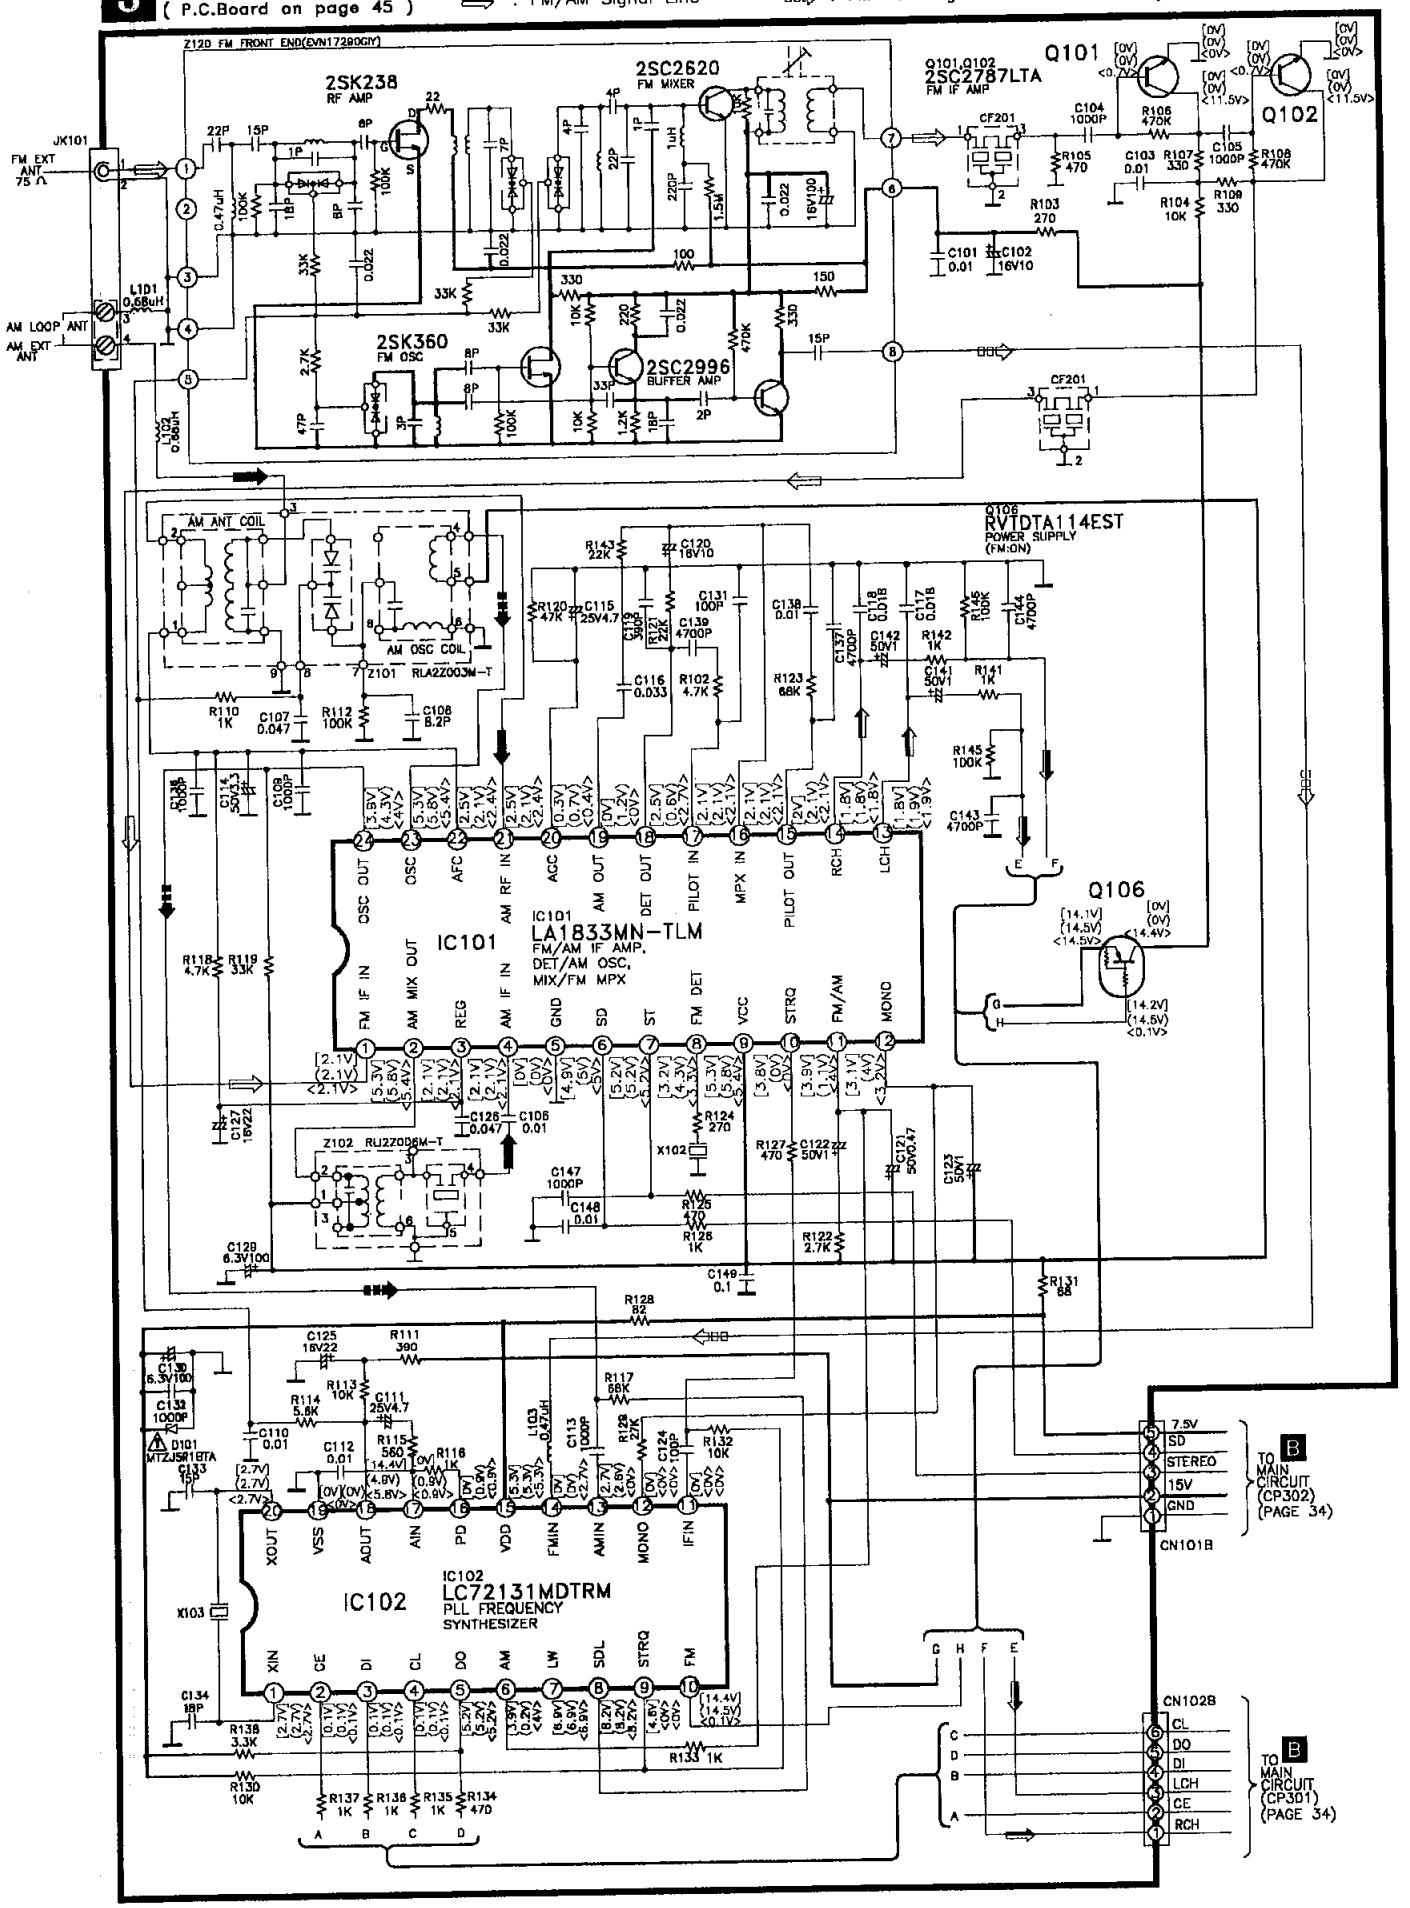

: +B line : CD signal line

A CD SERVO CIRCUIT (P.C.Board on page 43)

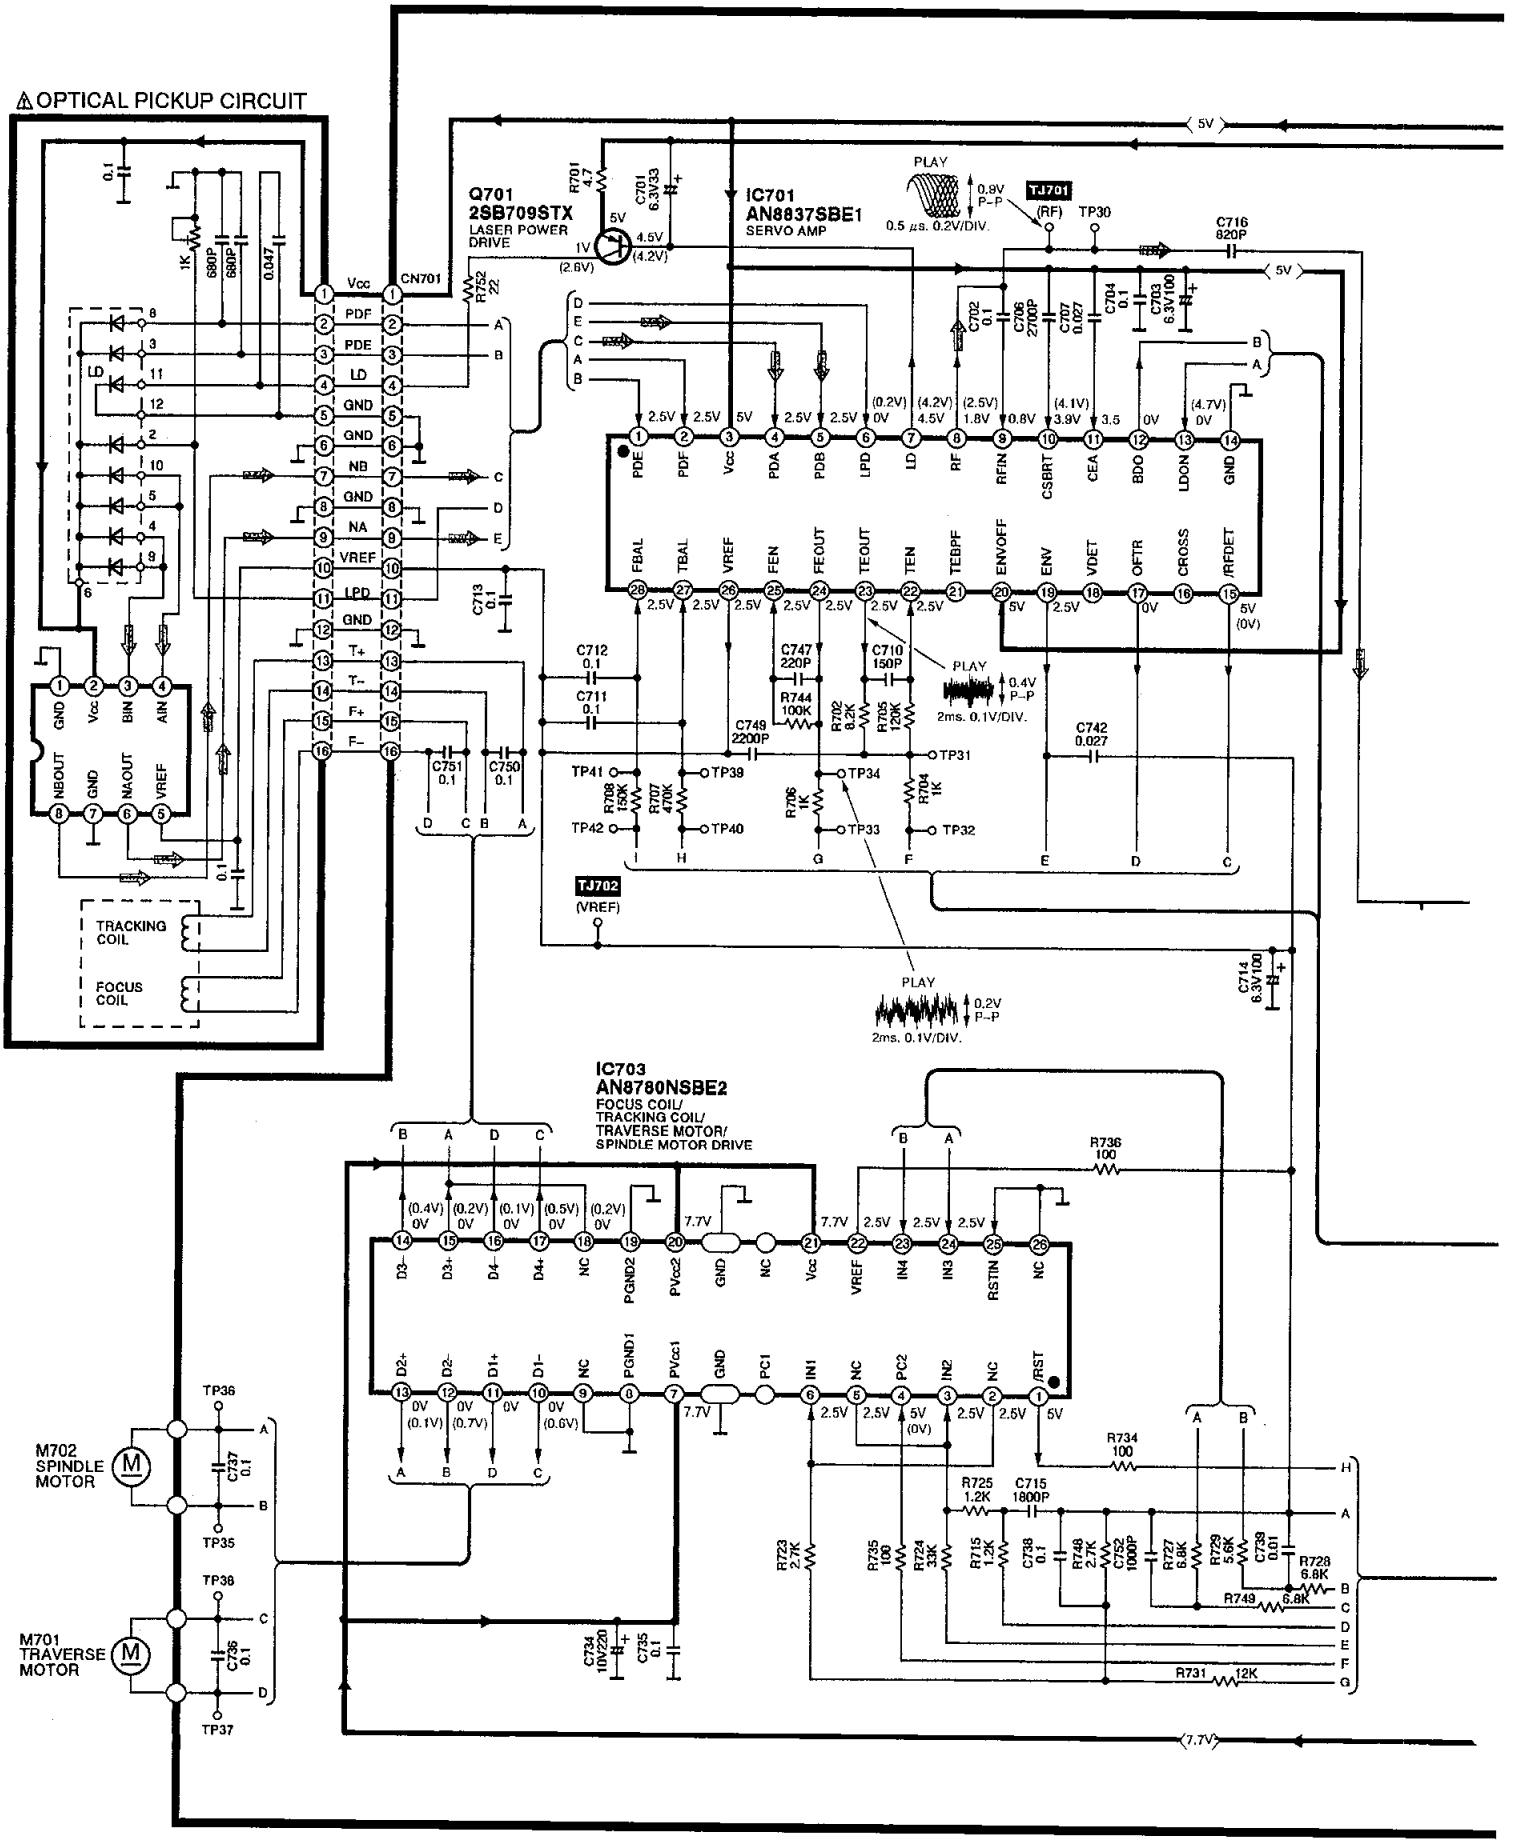

: +B line : CD signal line

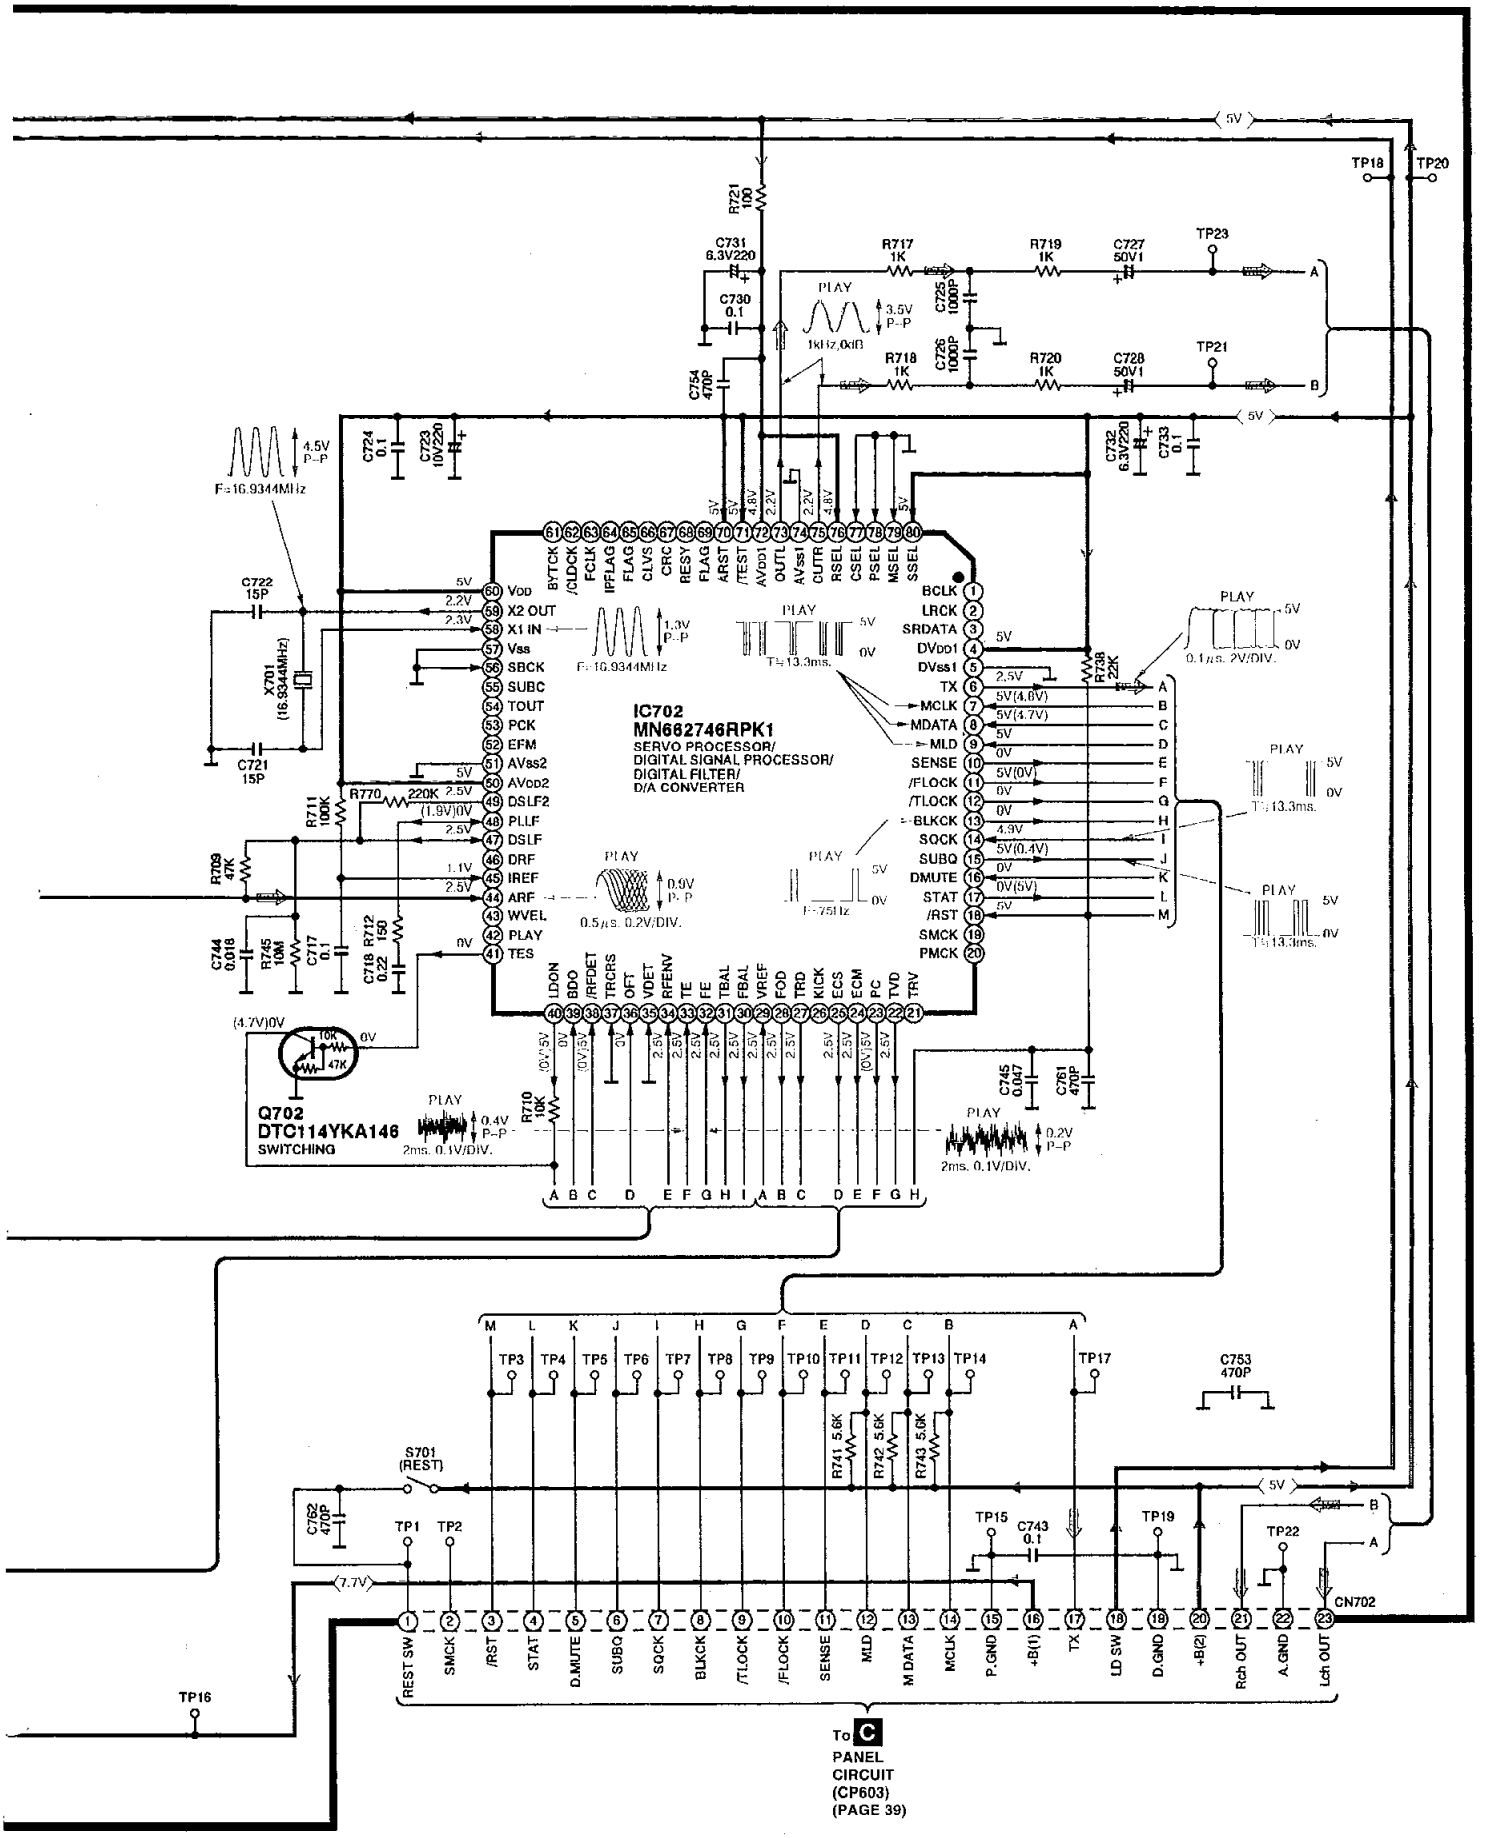

: +B Line : Playback Signal Line : Record Signal Line

K DECK CIRCUIT (P.C.Board on page 50)

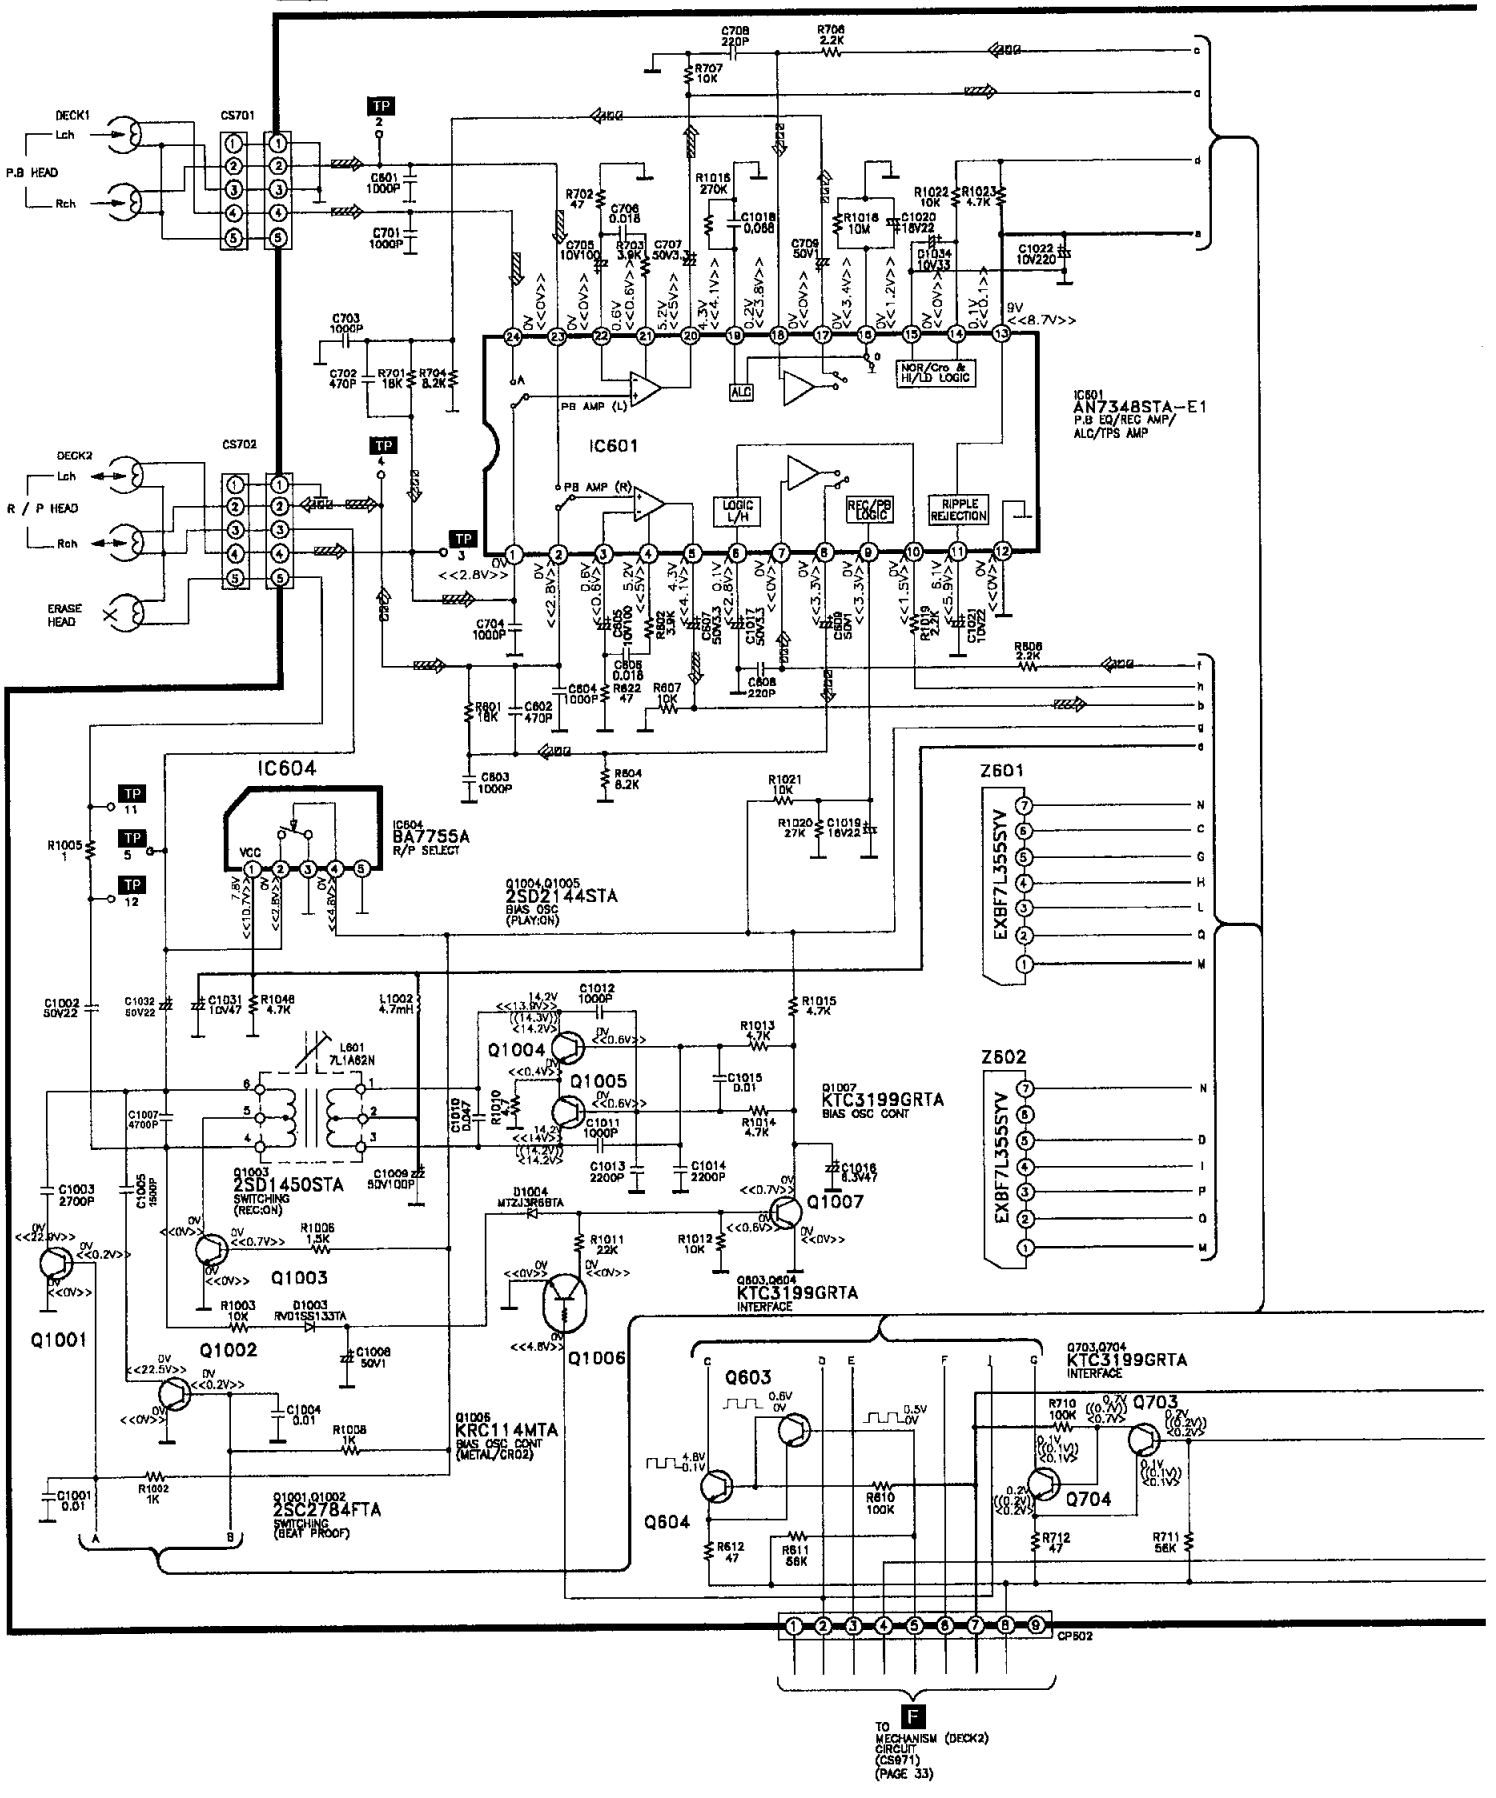

: +B Line : Playback Signal Line : Record Signal Line

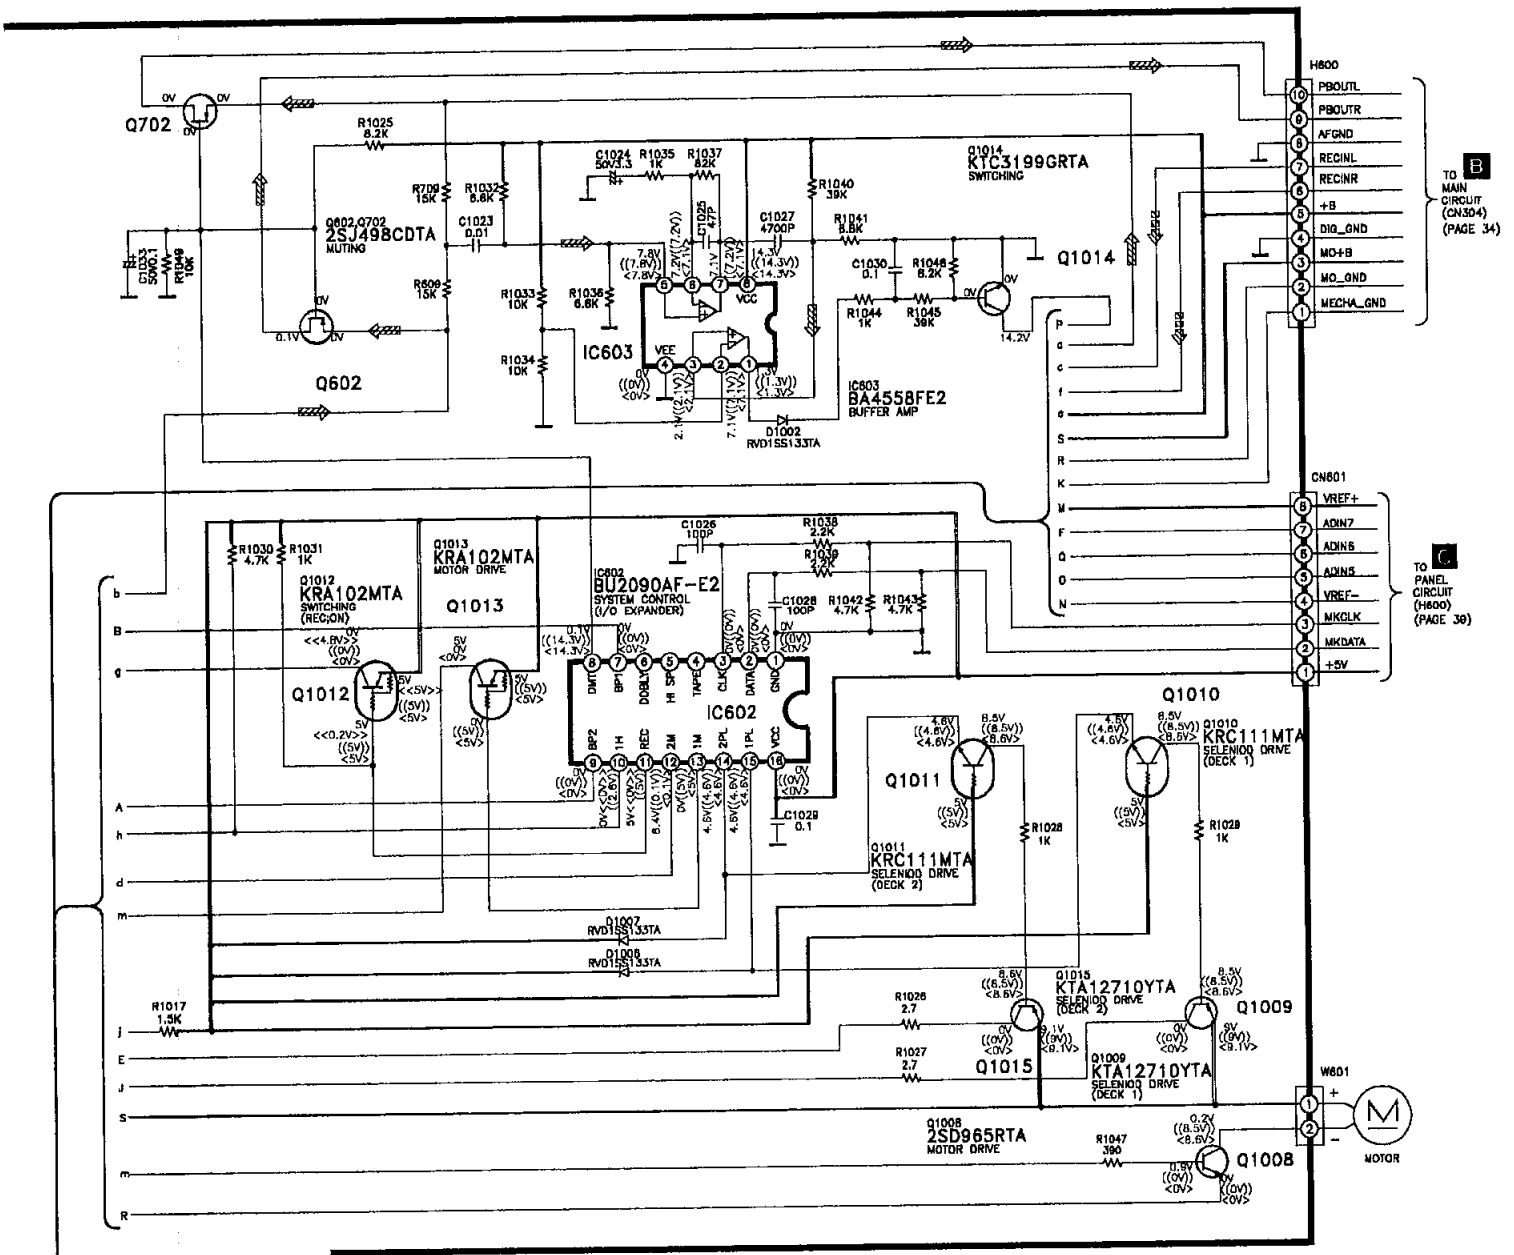

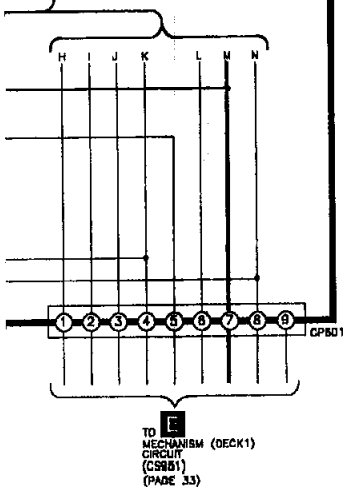

E MECHANISM (DECK 1) CIRCUIT (P.C.Board on page 49)

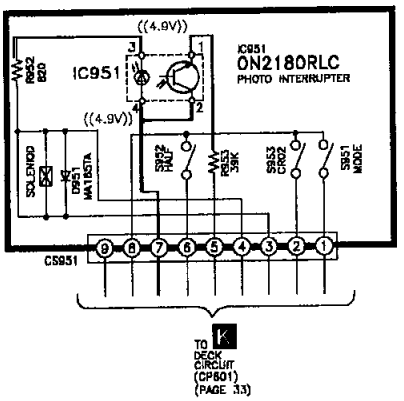

F MECHANISM (DECK 2) CIRCUIT (P.C.Board on page 49)

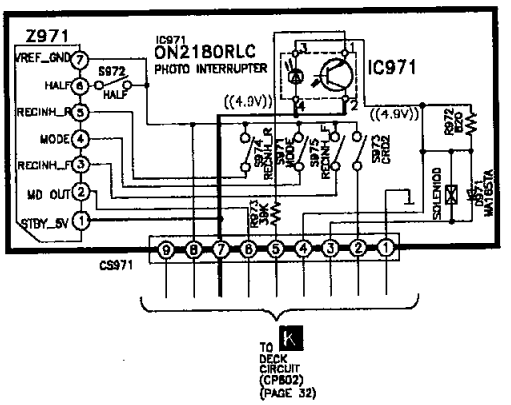

: +B Line
: –B Line
: Main Signal Line
: AUX Signal Line
: Playback Signal Line
: CD Signal Line
: FM/AM Signal Line
: Record Signal Line

B MAIN CIRCUIT (P.C.Board on page 44)

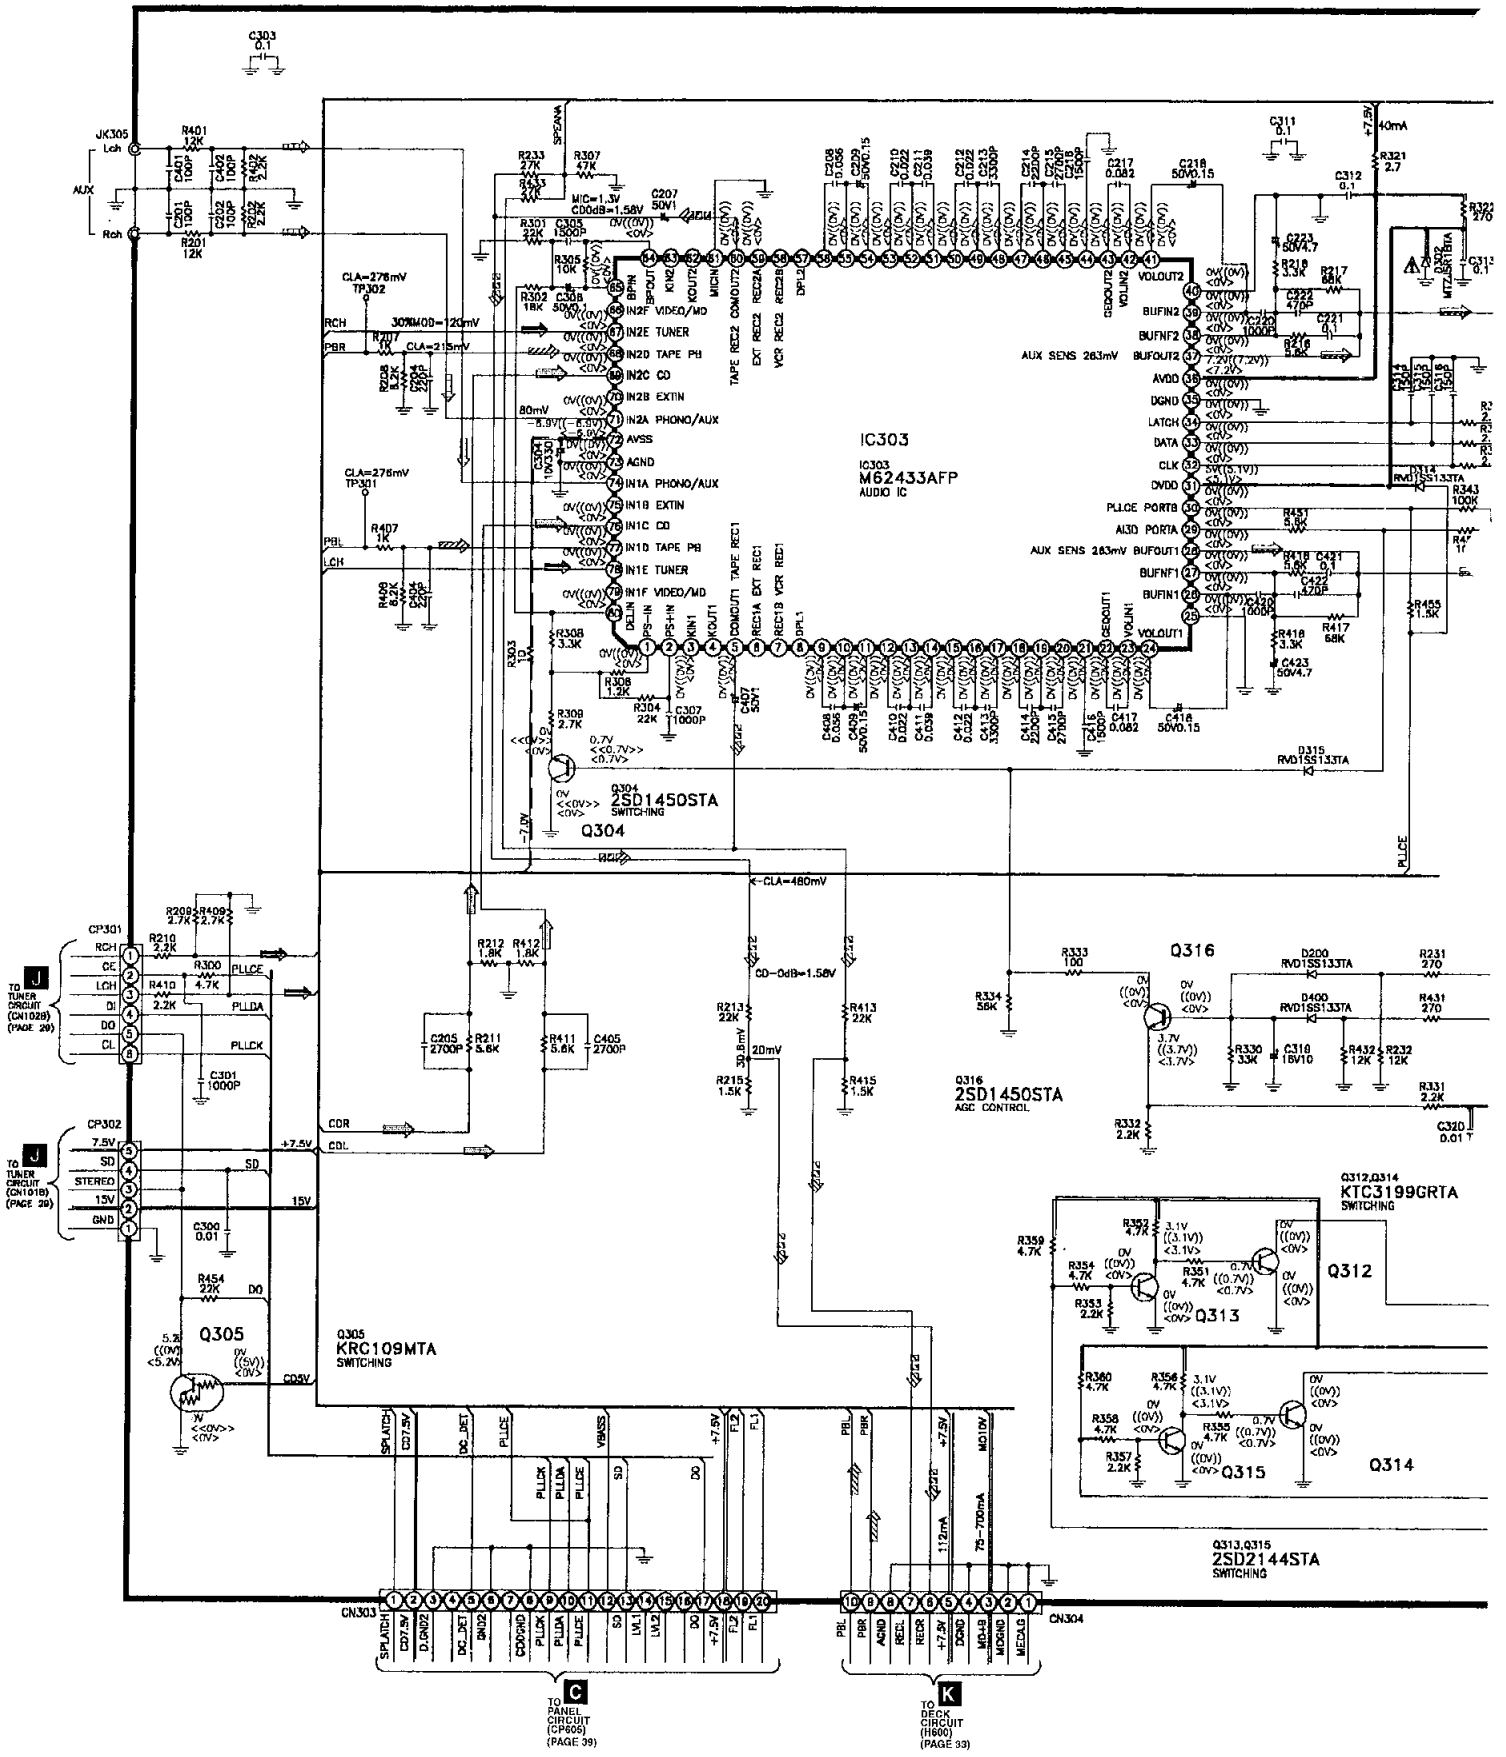

——— : +B Line
– – – : –B Line

⇨ : Main Signal Line
⇨ : CD Signal Line

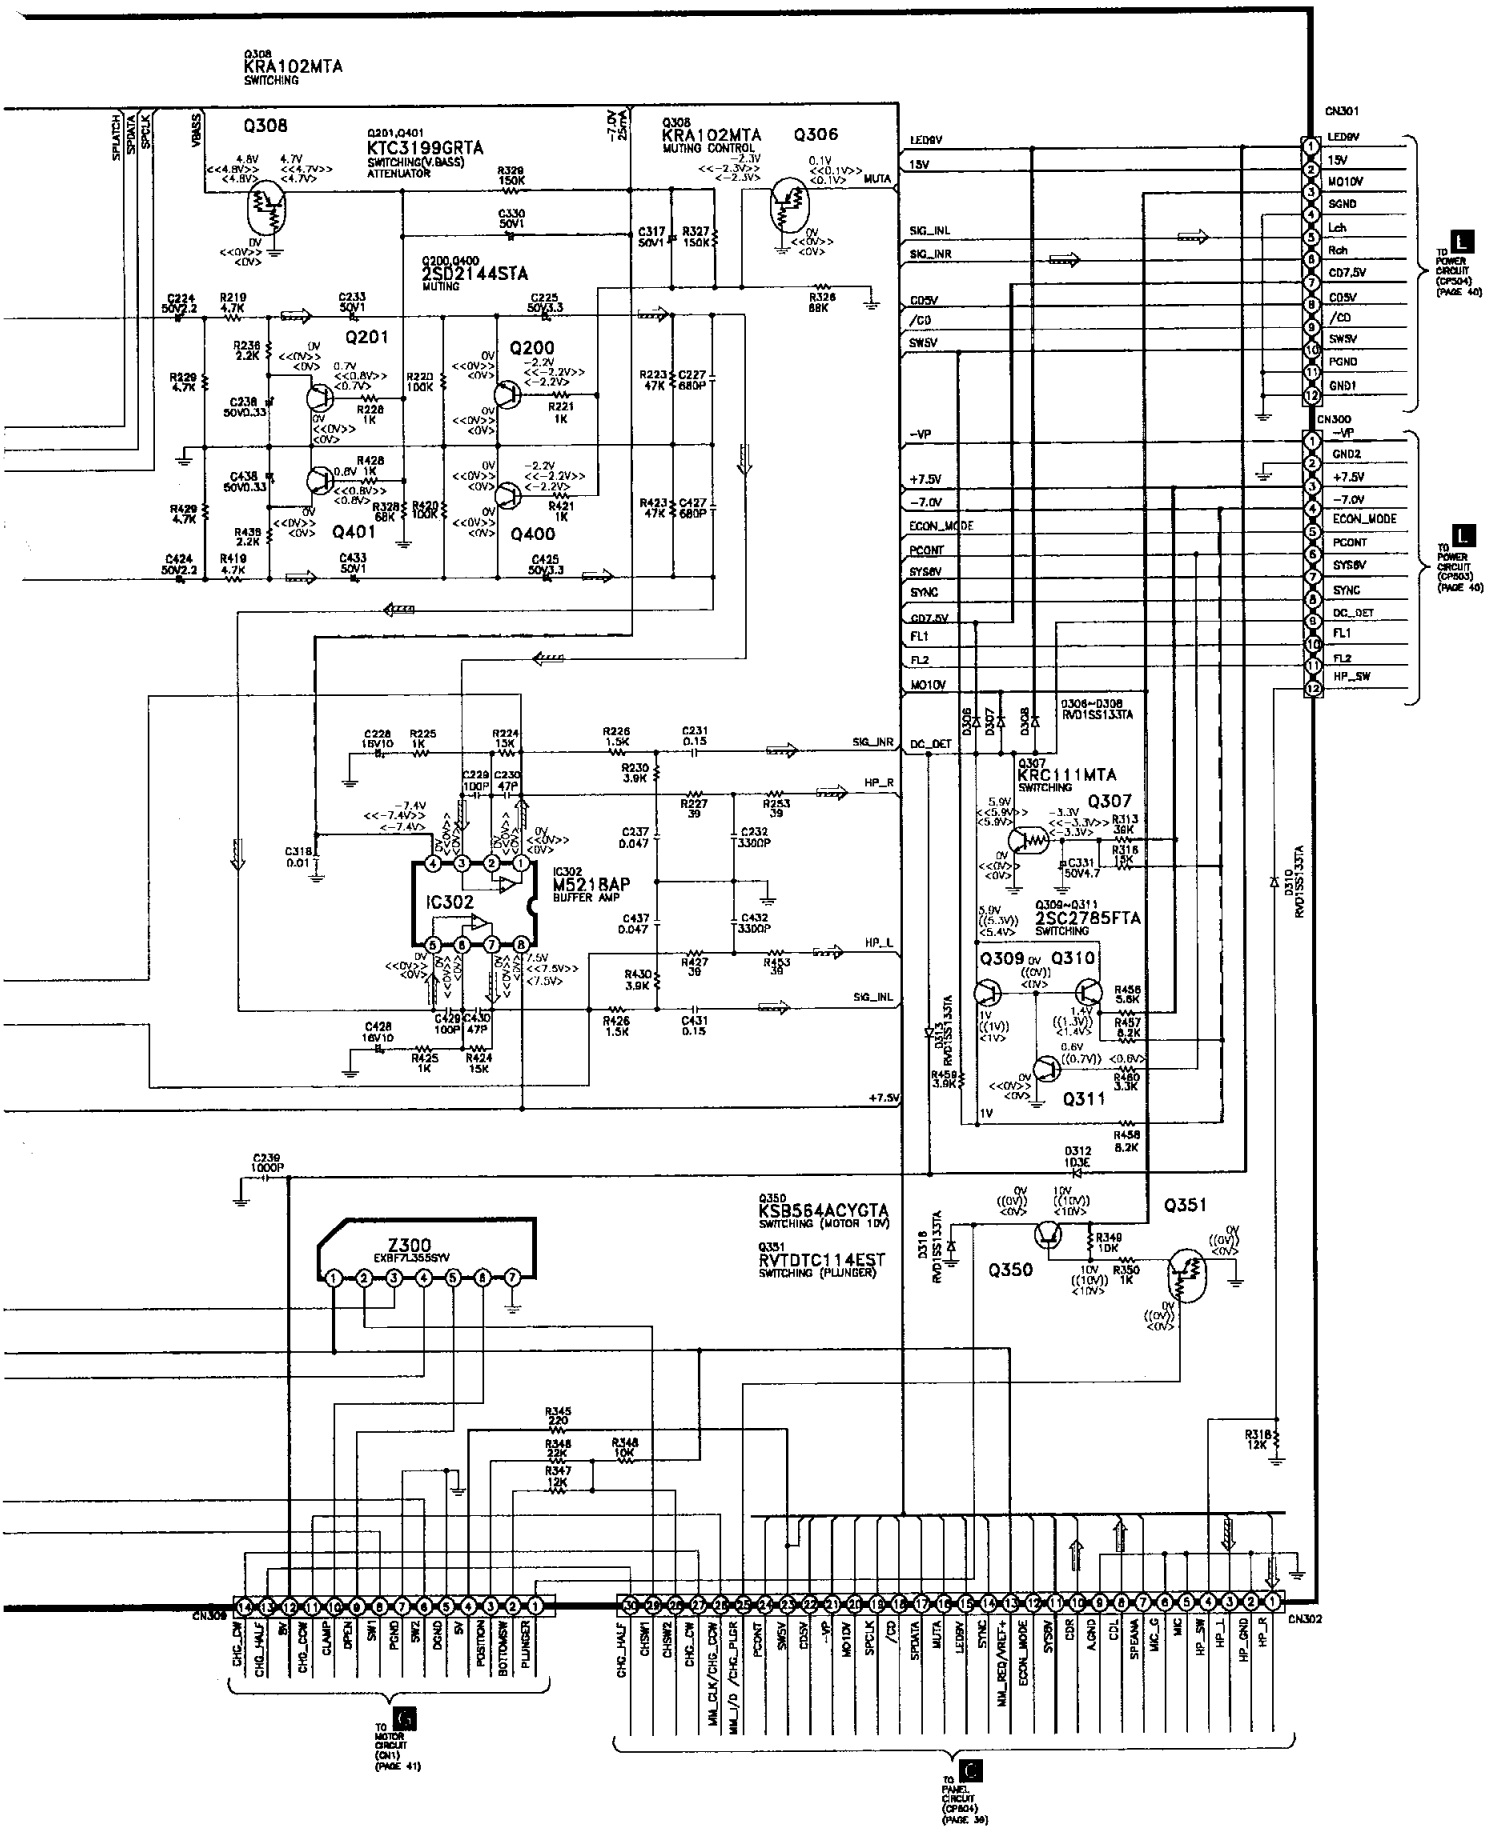

——— : +B Line

⇨ : Main Signal Line

C PANEL CIRCUIT (P.C.Board on page 46)

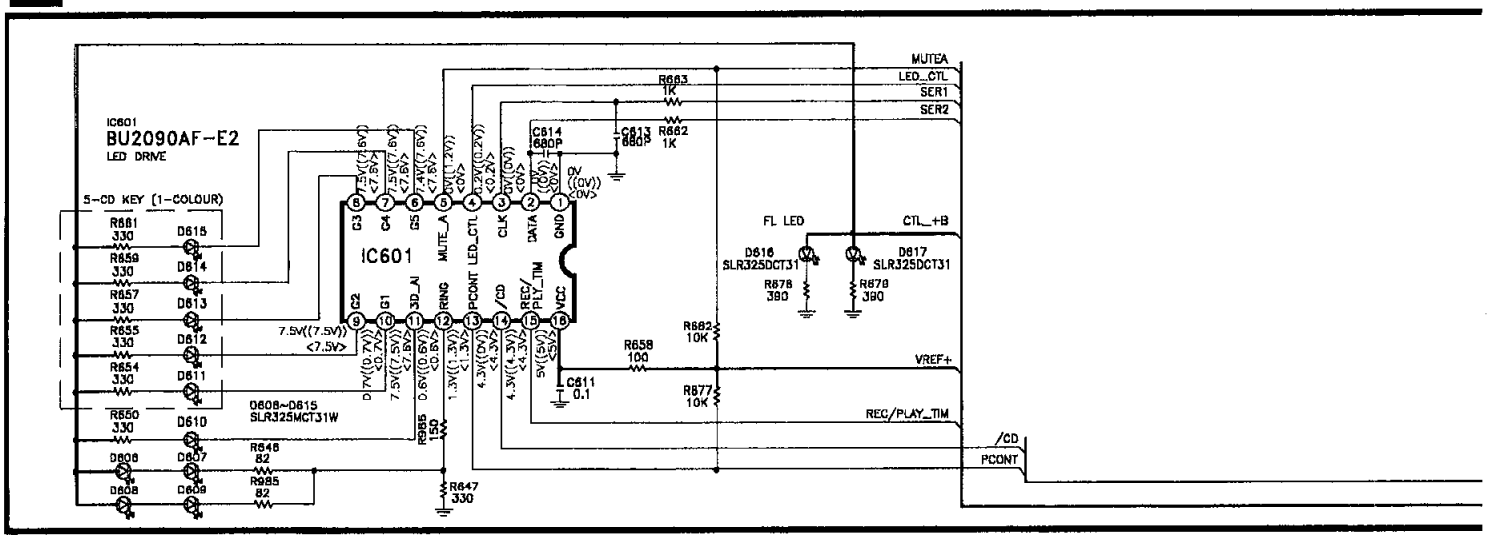

D TACT SWITCH CIRCUIT (P.C.Board on page 48)

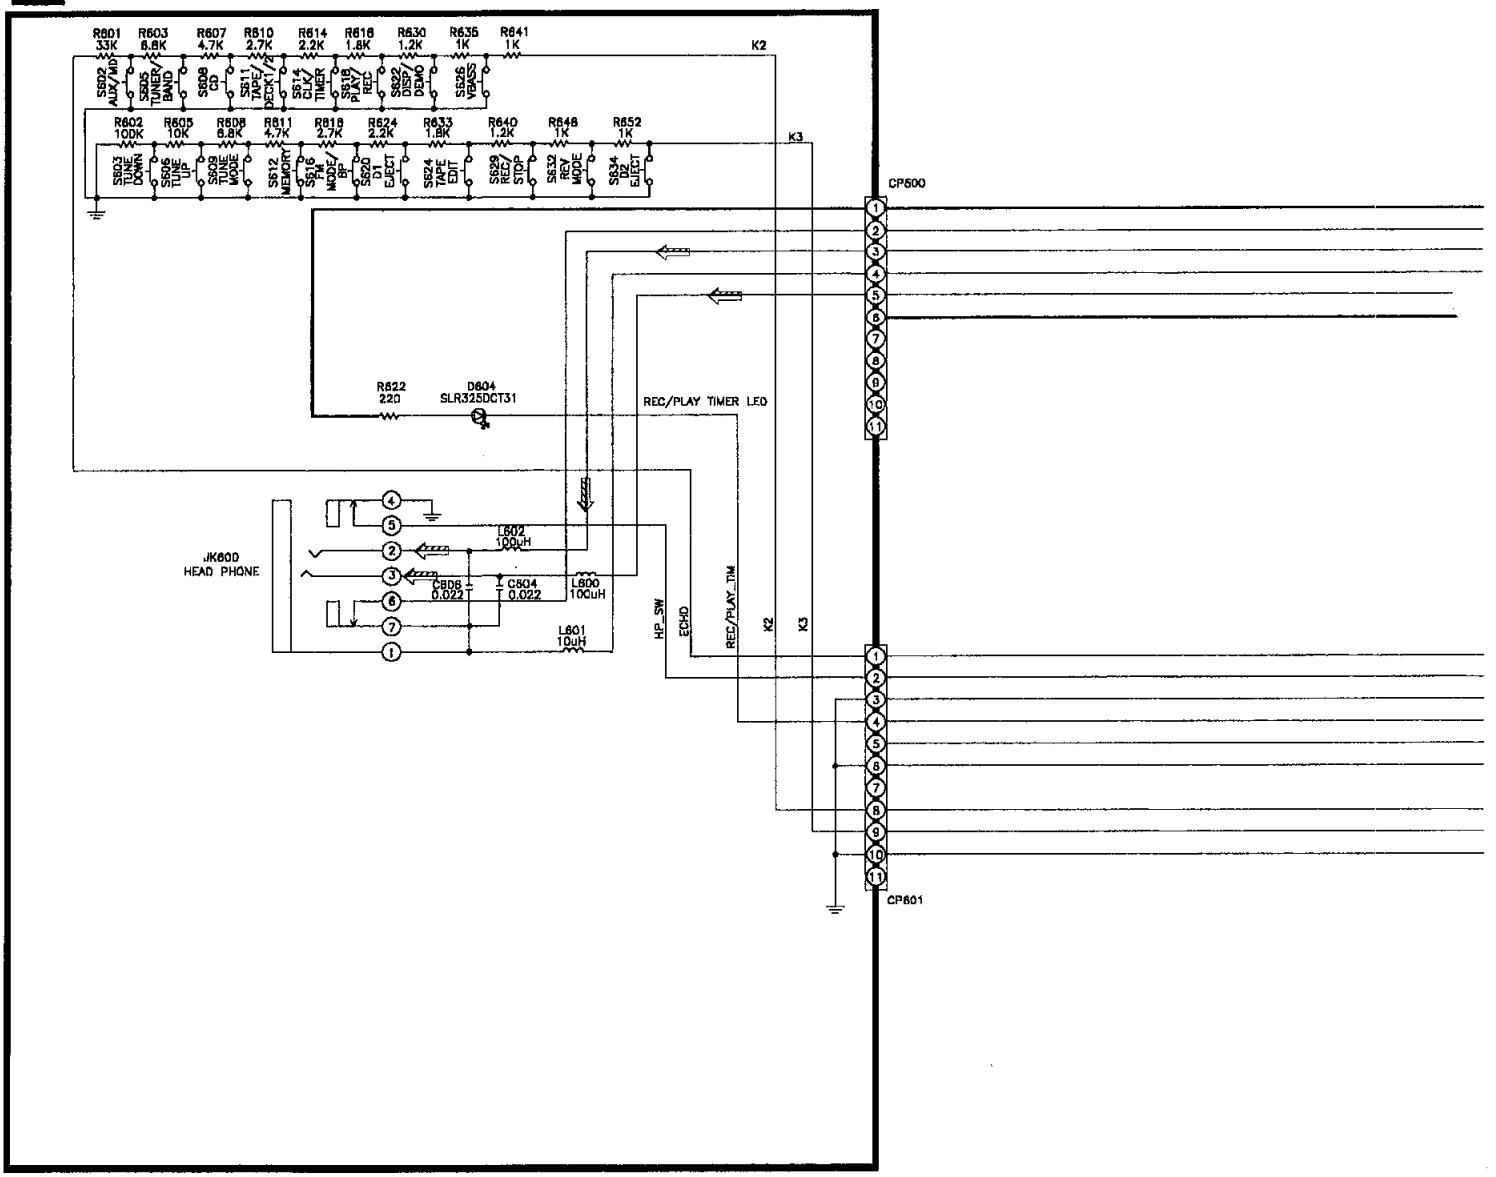

: +B Line : -B Line : Main Signal Line

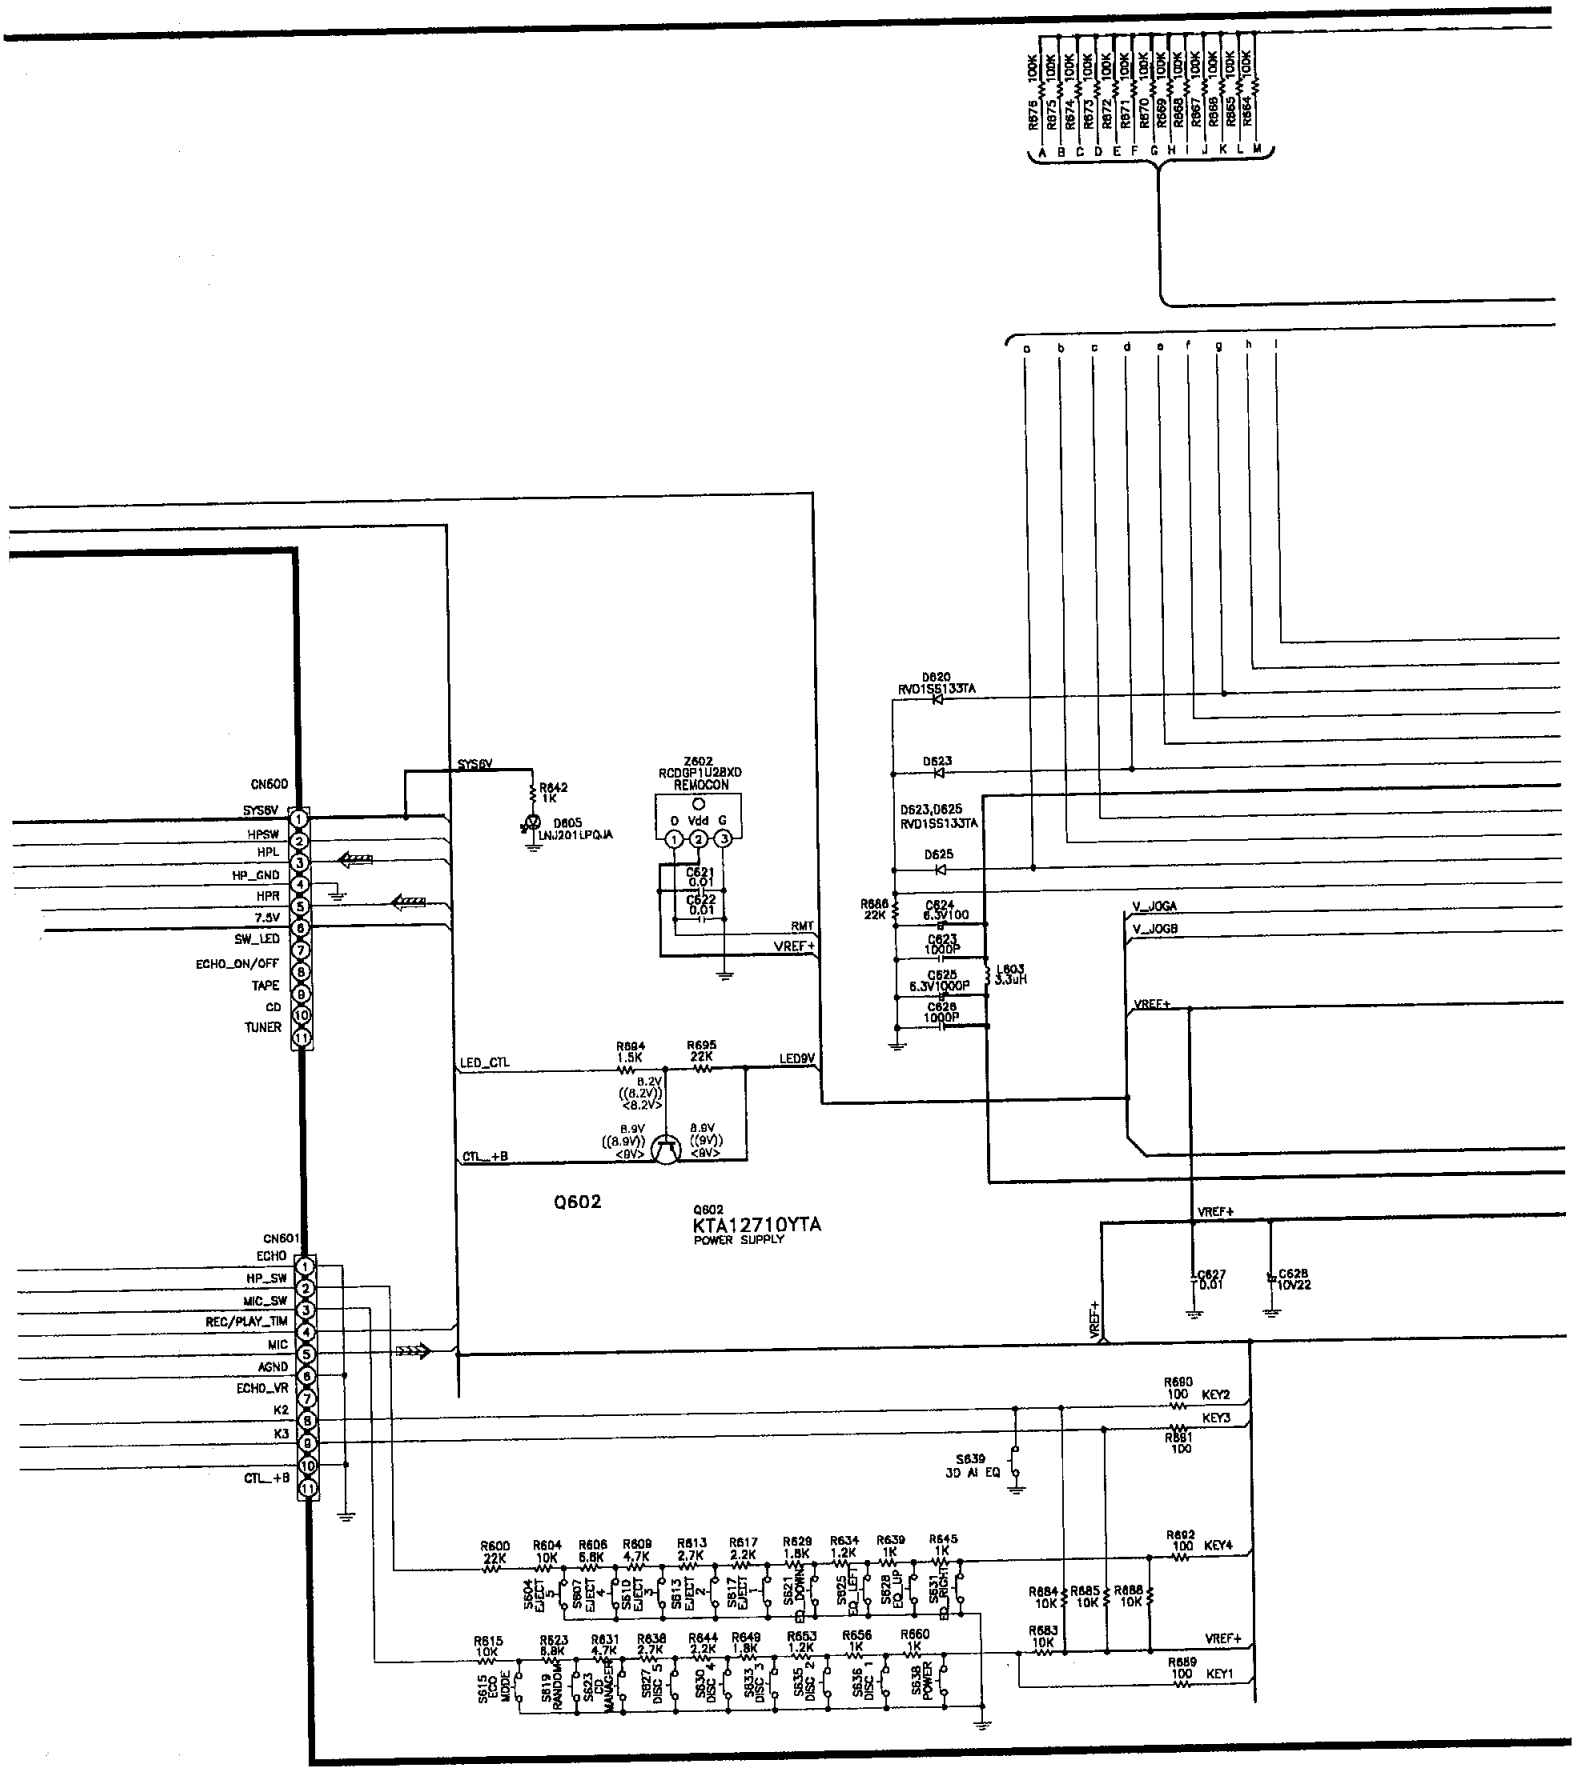

: +B Line

: -B Line

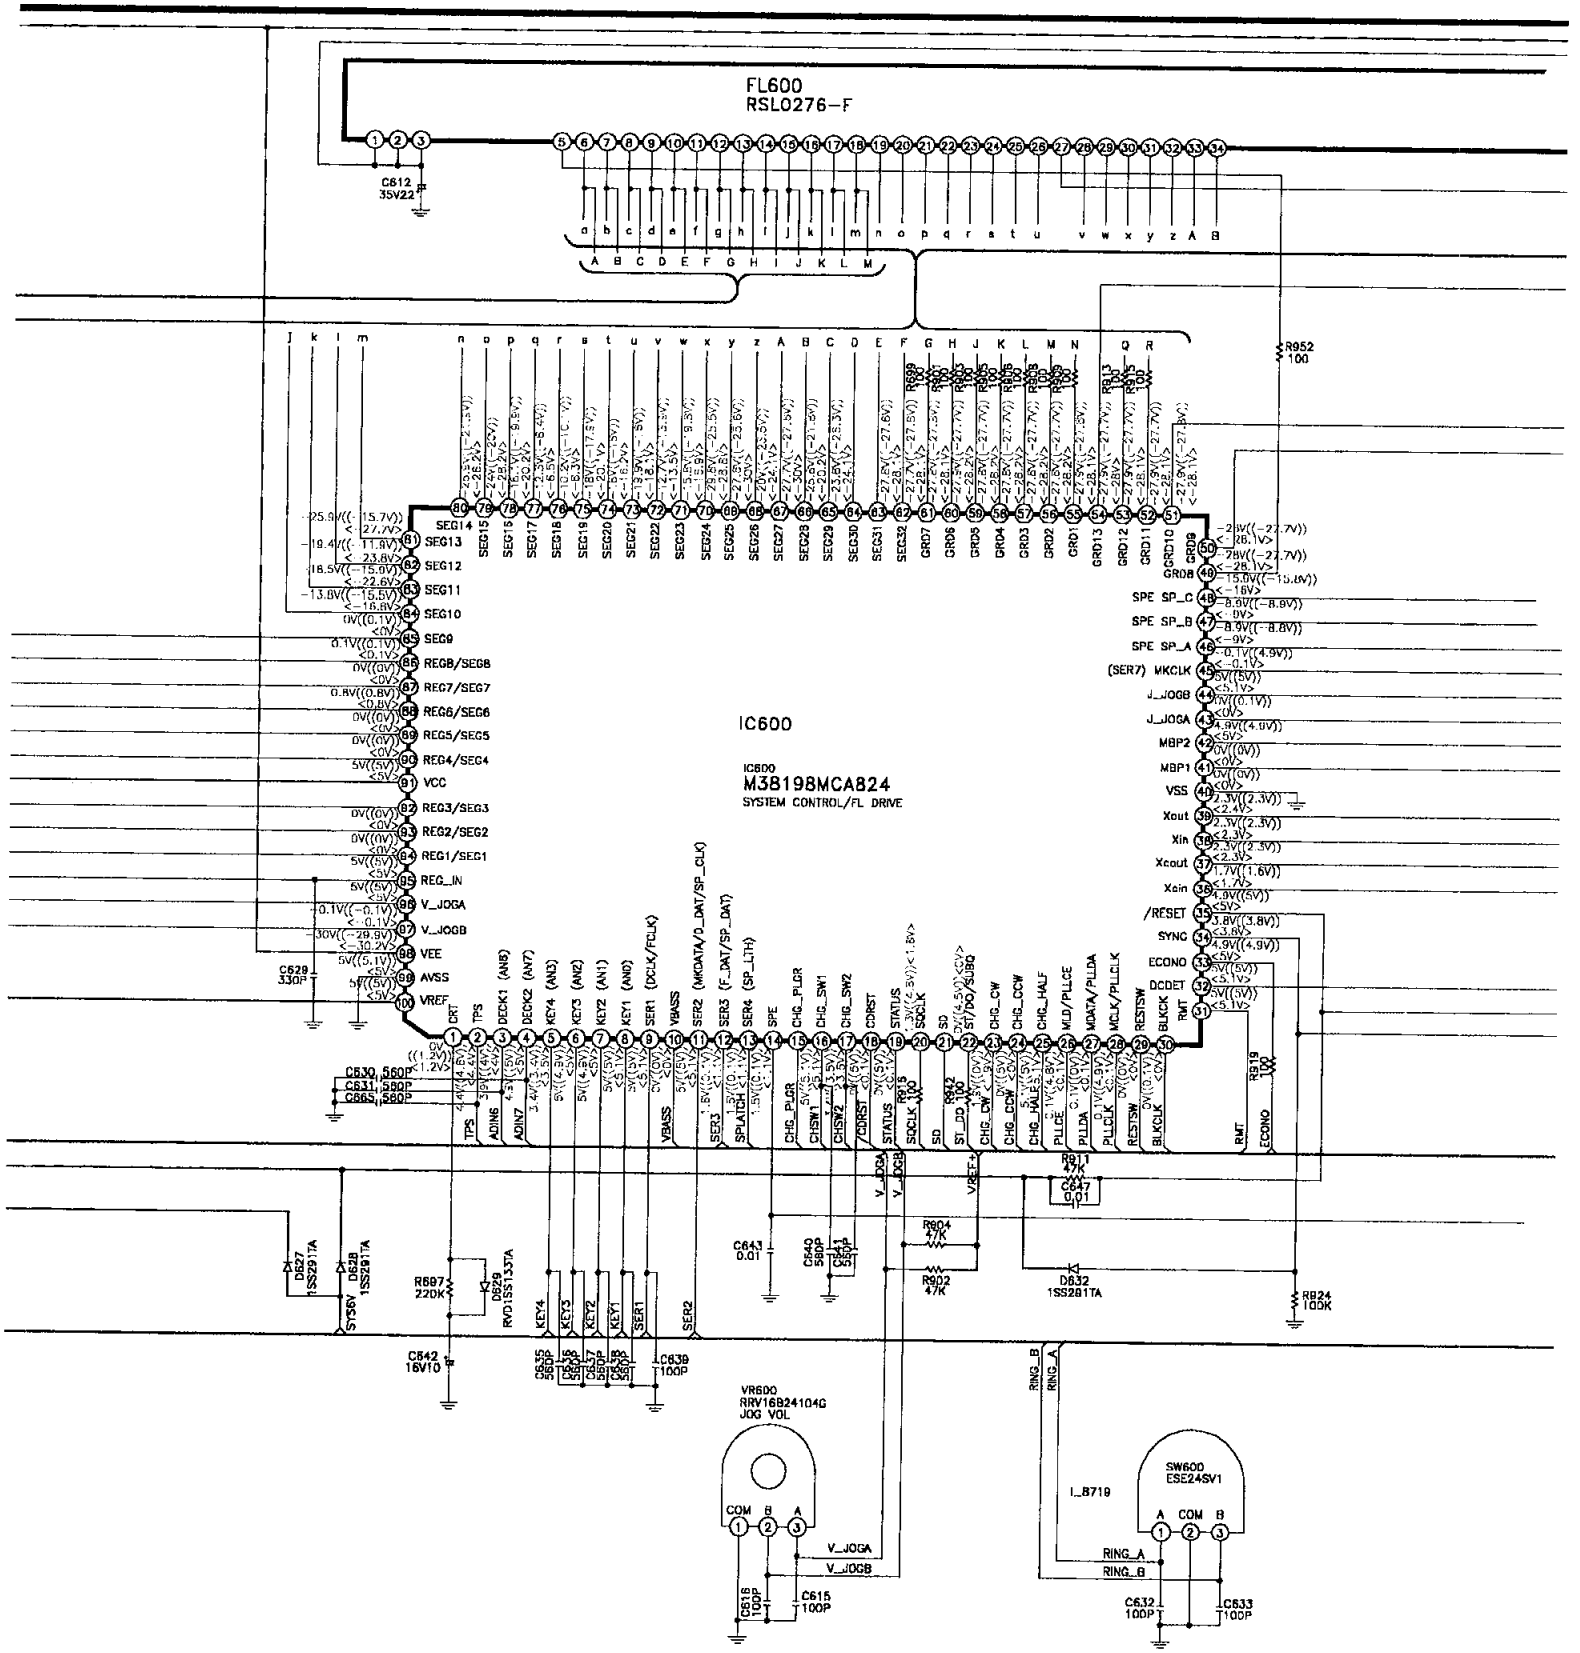
FL600
RSL0276-F
IC600
IC600
M38198MCA824
SYSTEM CONTROL/FL DRIVE
VR600
RRV16B24104G
JOG VOL
SW600
ESE24SV1
D632
1SS2811TA
D627
1SS2811TA
D628
1SS2811TA
D629
RVD1SS133TA
R952
100
R911
47K
C647
0.01
R904
47K
R902
47K
R824
100K
R697
220K
C642
16V10
C641
0.01
C639
100P
C615
100P
C616
100P
C632
100PT
C633
100PT
C629
330P
C630 560P
C631 560P
C635 560P
SPE SP_C
SPE SP_B
SPE SP_A
(SER7) MKCLK
J_JOGB
J_JOGA
MBP2
MBP1
VSS
Xout
Xin
Xcout
Xcin
/RESET
SYNC
ECONO
DCDET
RMT
BLKCK
RESTSW
PLLCLK
PLLDA
PLLCE
CHG_HALF
CHG_CCW
CHG_CW
ST/DO/SUBQ
SD
SQCLK
STATUS
CDRST
CHSW2
CHSW1
CHG_PLGR
SPE
SER4 (SP_LTH)
SER3 (F_DAT/SP_DAT)
SER2 (MKDATA/D_DAT/SP_CLK)
SER1 (DCLK/FCLK)
VBASS
KEY4 (AN3)
KEY3 (AN2)
KEY2 (AN1)
KEY1 (AN0)
DECK2 (ANT)
DECK1 (ANS)
TPS
CRT
VREF
AVSS
VEE
V_JOGB
V_JOGA
REG_IN
REG1/SEG1
REG2/SEG2
REG3/SEG3
VCC
REG4/SEG4
REG5/SEG5
REG6/SEG6
REG7/SEG7
REG8/SEG8
SEG9
SEG10
SEG11
SEG12
SEG13
SEG14
SEG15
SEG16
SEG17
SEG18
SEG19
SEG20
SEG21
SEG22
SEG23
SEG24
SEG25
SEG26
SEG27
SEG28
SEG29
SEG30
SEG31
SEG32
GRD7
GRD6
GRD5
GRD4
GRD3
GRD2
GRD1
GRD13
GRD12
GRD11
GRD10
GRD9
GRD8
RING_B
RING_A
I_B719
COM
B
A

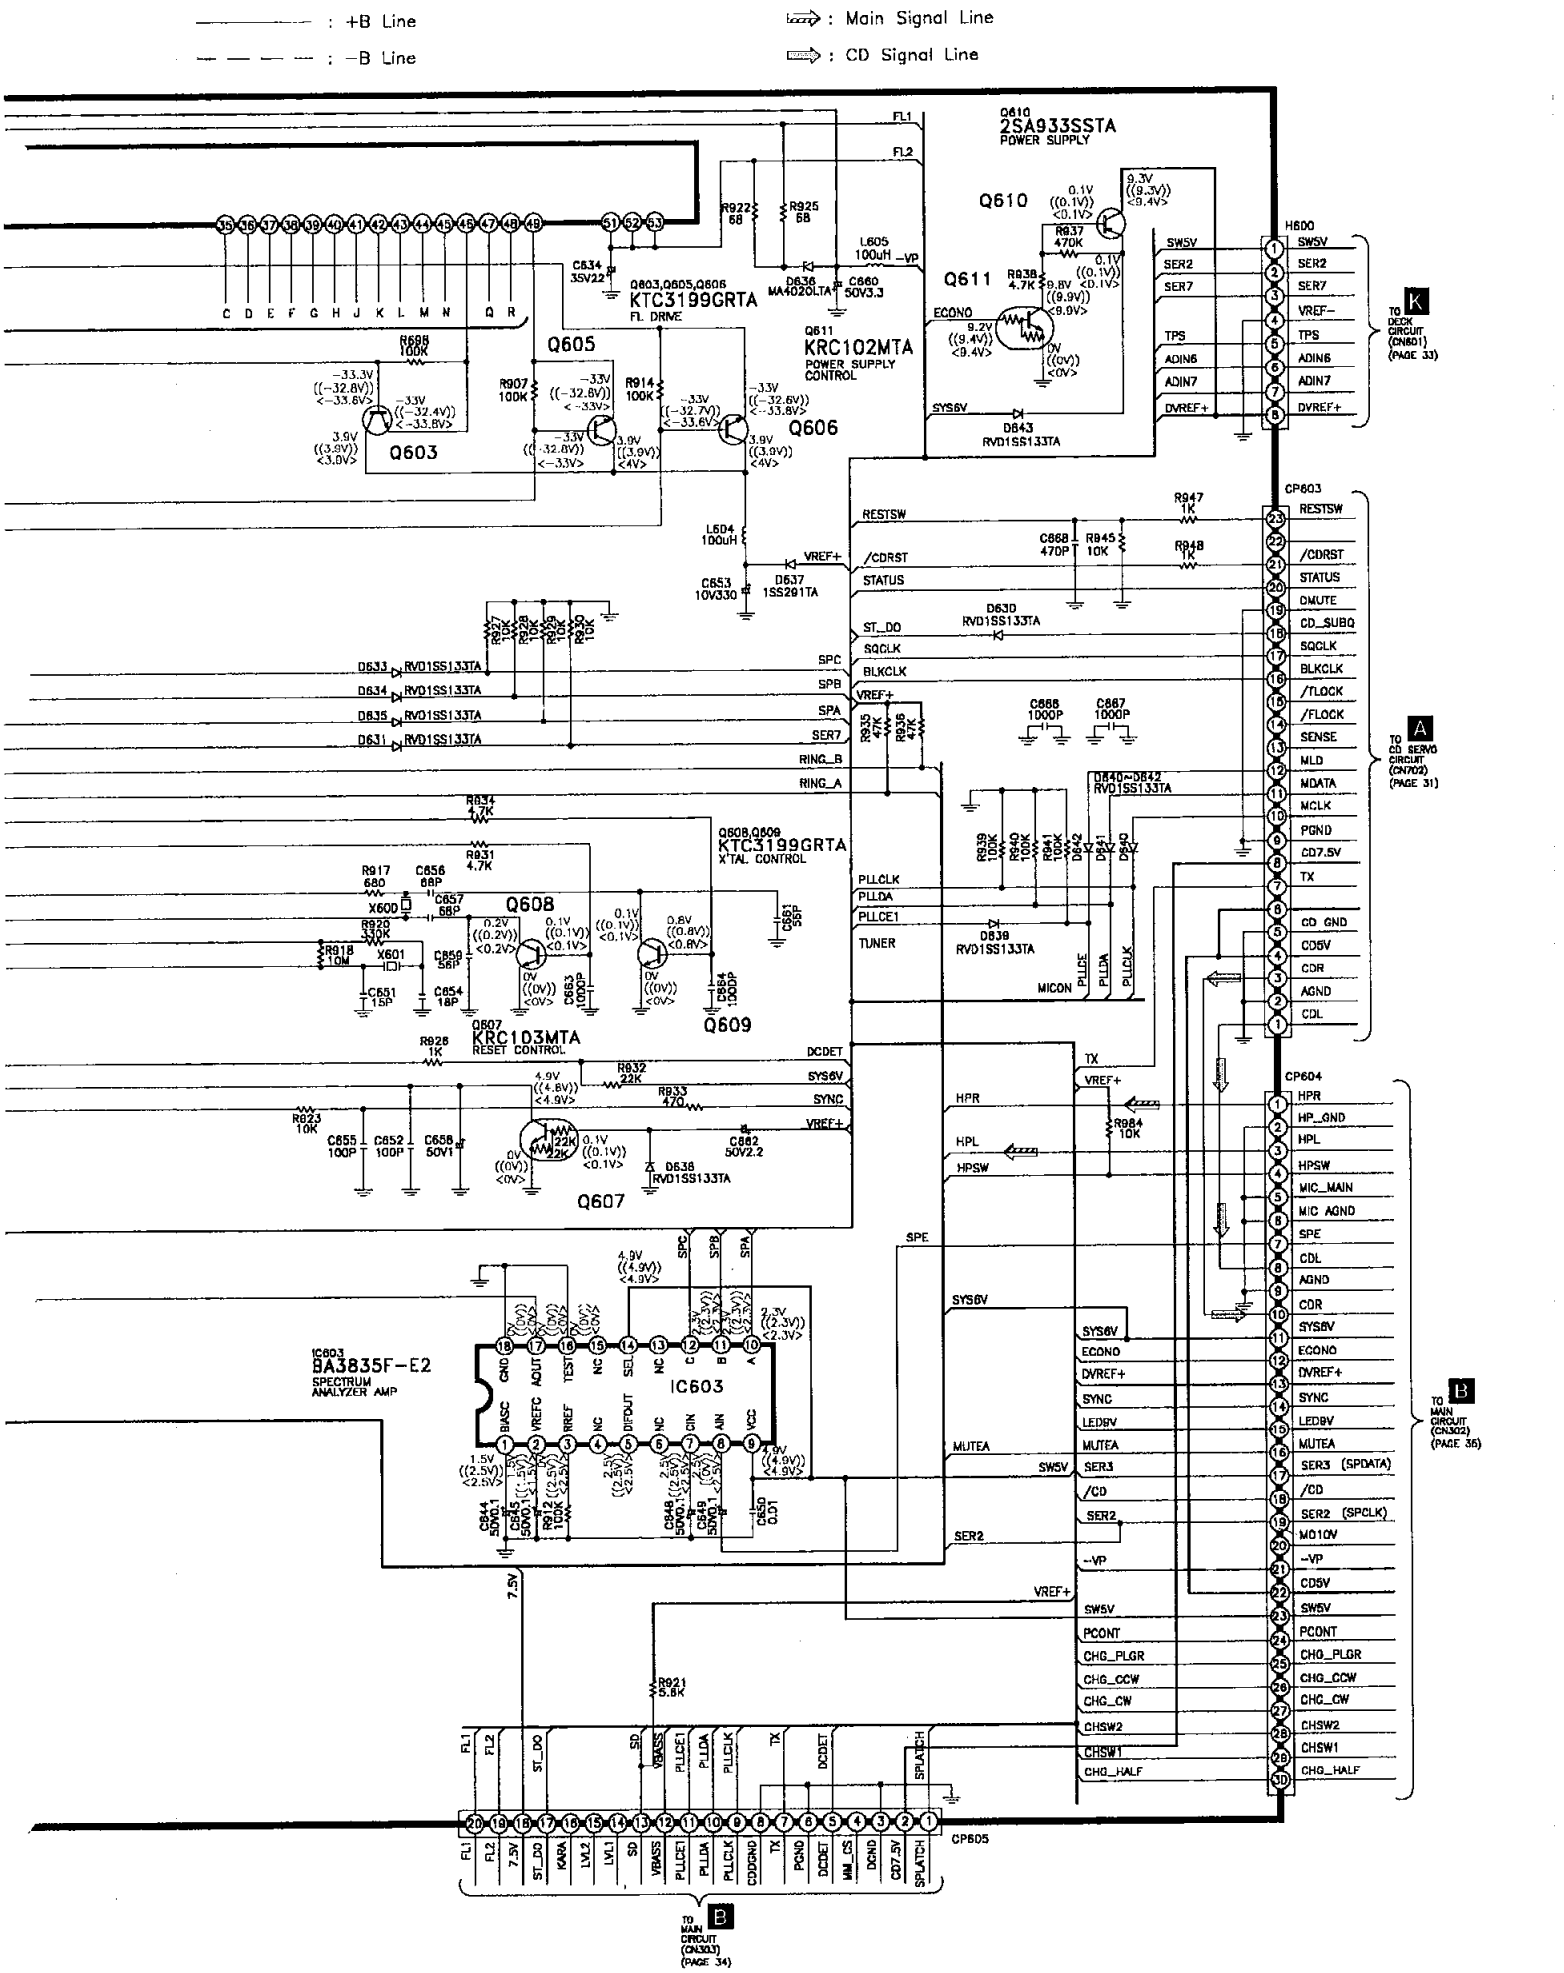
: +B Line
: -B Line
: Main Signal Line
: CD Signal Line
Q610
2SA933SSTA
POWER SUPPLY
Q611
KRC102MTA
POWER SUPPLY CONTROL
Q603,Q605,Q606
KTC3199GRTA
FL DRIVE
Q605
Q606
Q603
Q608,Q609
KTC3199GRTA
X'TAL CONTROL
Q608
Q609
Q607
KRC103MTA
RESET CONTROL
IC603
BA3835F-E2
SPECTRUM ANALYZER AMP
IC603
H600
CP603
CP604
CP605
TO K DECK CIRCUIT (CN601) (PAGE 33)
TO A CD SERVO CIRCUIT (CN702) (PAGE 31)
TO B MAIN CIRCUIT (CN302) (PAGE 35)
TO B MAIN CIRCUIT (CN303) (PAGE 34)
SW5V
SER2
SER7
VREF-
TPS
ADIN6
ADIN7
DVREF+
RESTSW
/CDRST
STATUS
CMUTE
CD_SUBQ
SQCLK
BLKCLK
/TLOCK
/FLOCK
SENSE
MLD
MDATA
MCLK
PGND
CD7.5V
TX
CD_GND
CD5V
CDR
AGND
CDL
HPR
HP_GND
HPL
HPSW
MIC_MAIN
MIC AGND
SPE
SYS6V
ECONO
SYNC
LED8V
MUTEA
SER3 (SPDATA)
/CD
SER2 (SPCLK)
MD10V
-VP
PCONT
CHG_PLGR
CHG_CCW
CHG_CW
CHSW2
CHSW1
CHG_HALF
FL1
FL2
7.5V
ST_DO
KARA
LVL2
LVL1
SD
VBASS
PLLCE1
PLLDA
PLLCLK
CDGND
TX
PGND
DCDET
MM_CS
DGND
CD7.5V
SPLATCH
SPC
SPB
SPA
BIASC
VREFC
VREFF
DIFOUT
CIN
AIN
VCC
GND
AOUT
TEST
NC
SEL
C
B
A
MICON
TUNER

——— : +B Line　— — — — : -B Line　⇨ : Main Signal Line

L POWER CIRCUIT (P.C.Board on page 51)

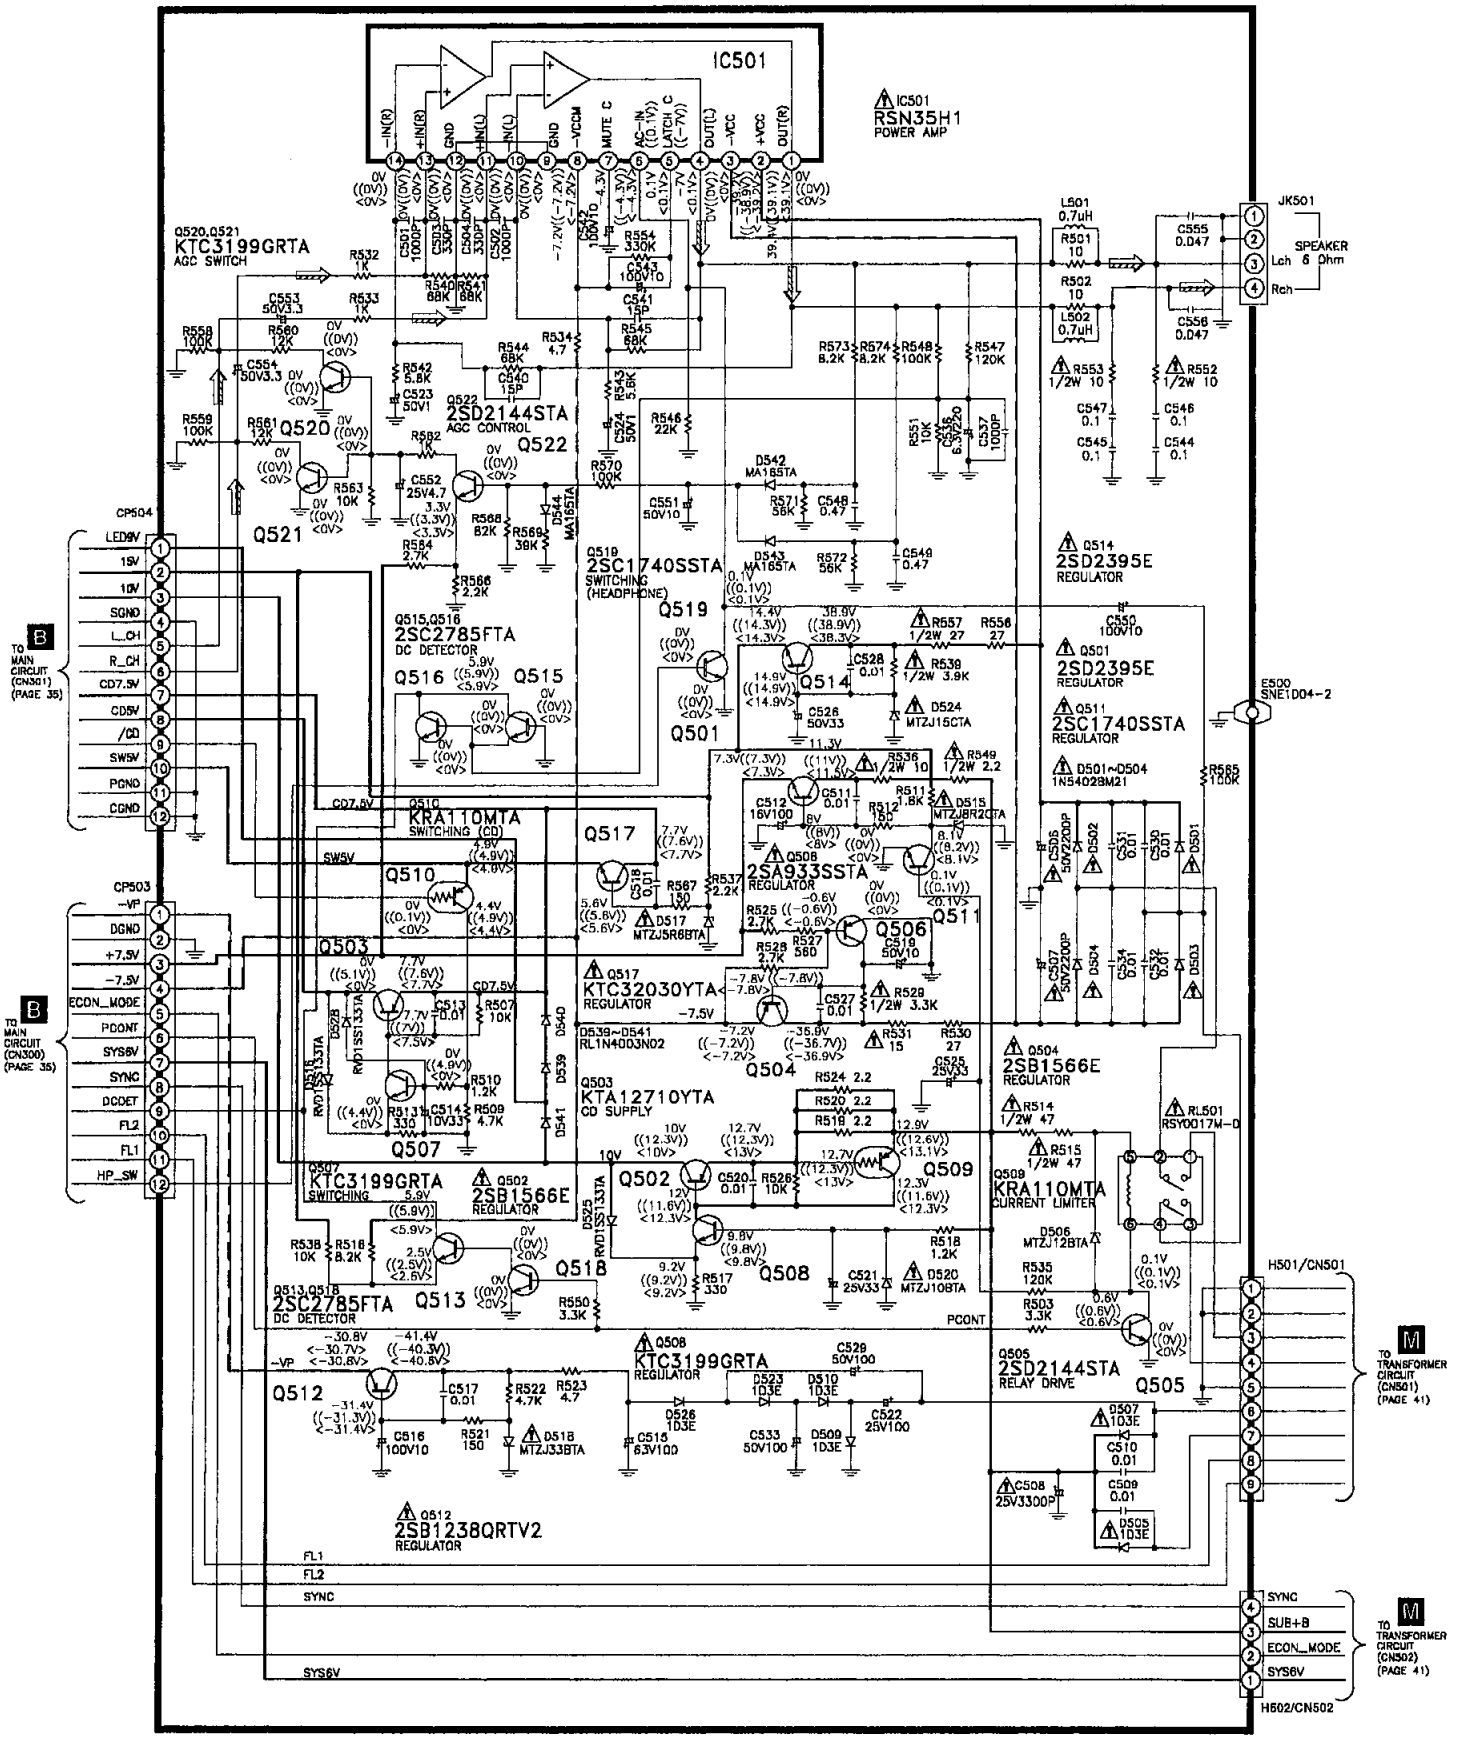

——— : +B Line

M TRANSFORMER CIRCUIT (P.C.Board on page 42)

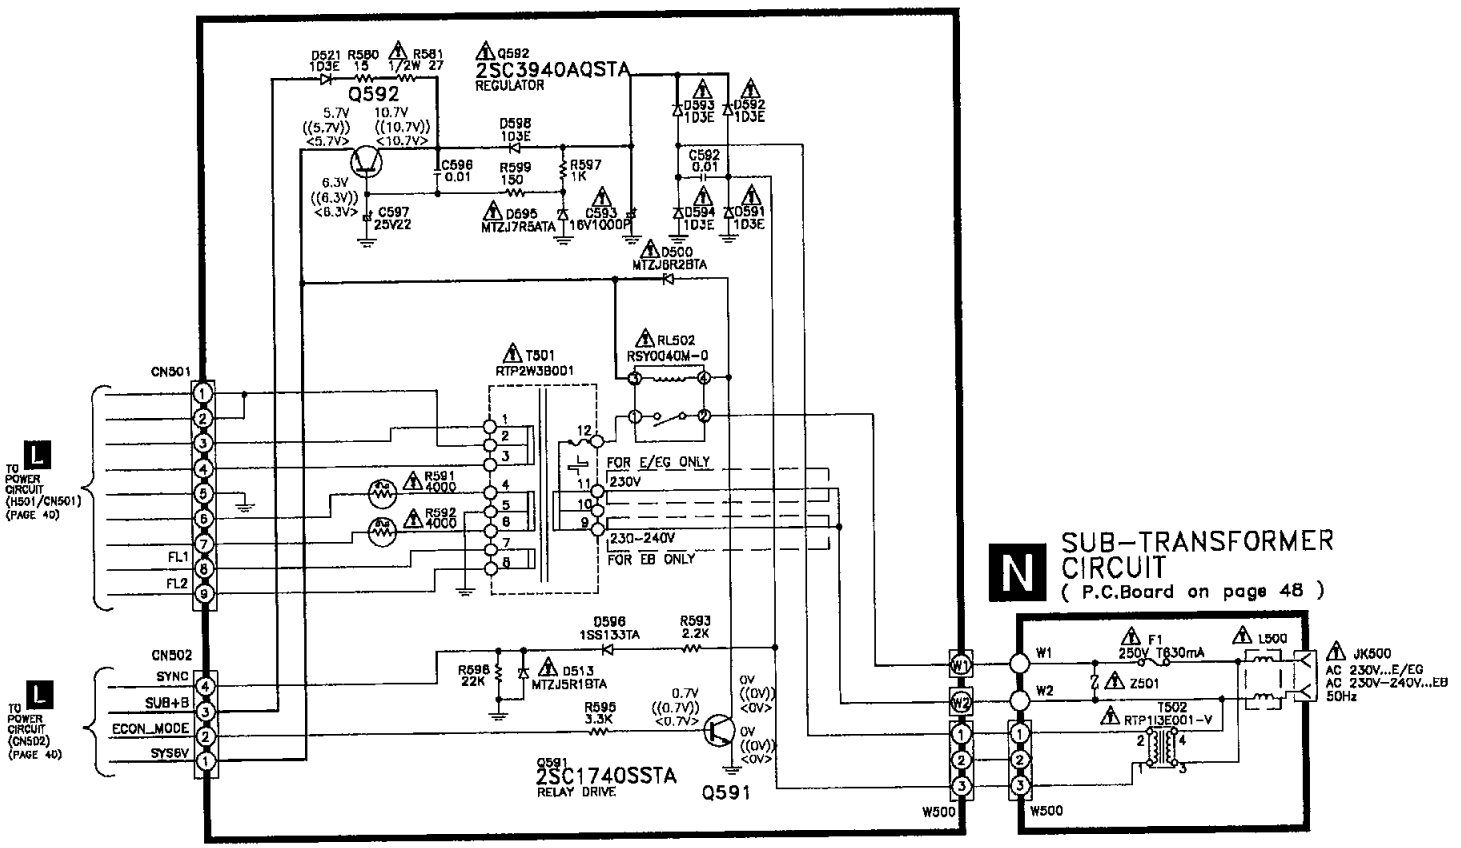

N SUB-TRANSFORMER CIRCUIT (P.C.Board on page 48)

G MOTOR CIRCUIT (P.C.Board on page 49)

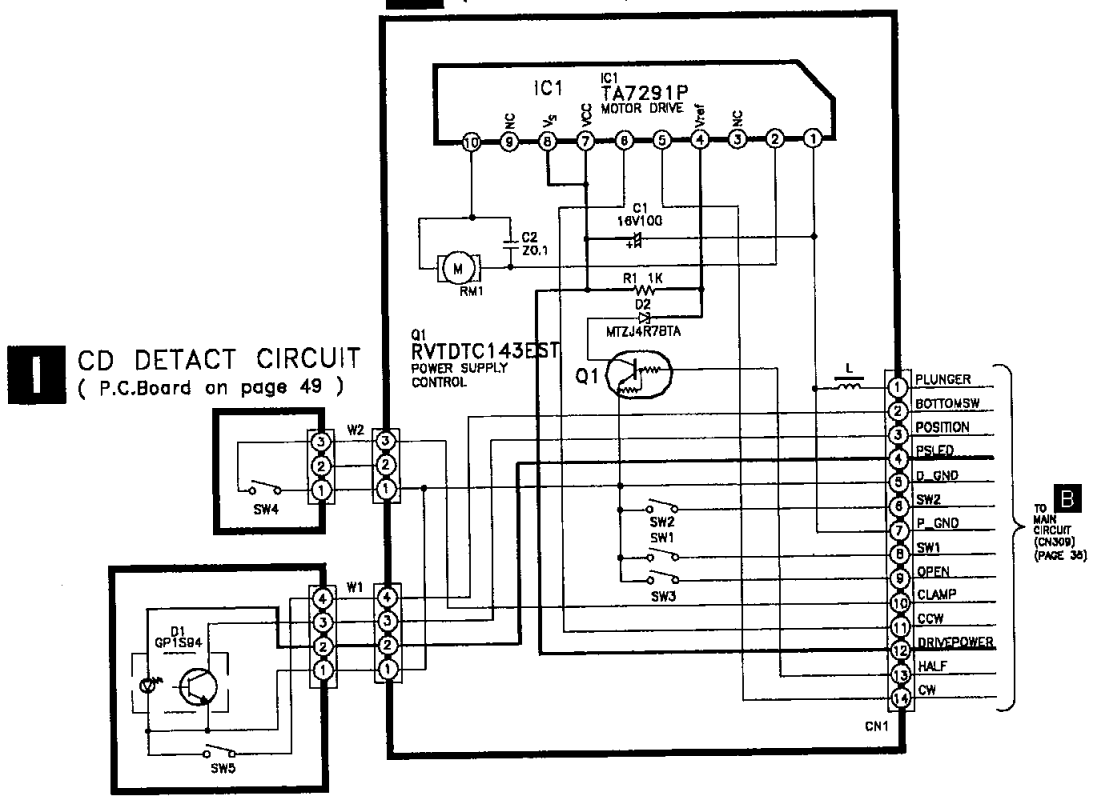

I CD DETACT CIRCUIT (P.C.Board on page 49)

H SPINDLE POSITION CIRCUIT (P.C.Board on page 49)

■ Printed Circuit Board

Note : Circuit board diagrams may be modified at any time with the development of new technology.

M TRANSFORMER P.C.B. (REPX0173S)...E,EG...Supplied by MAVD

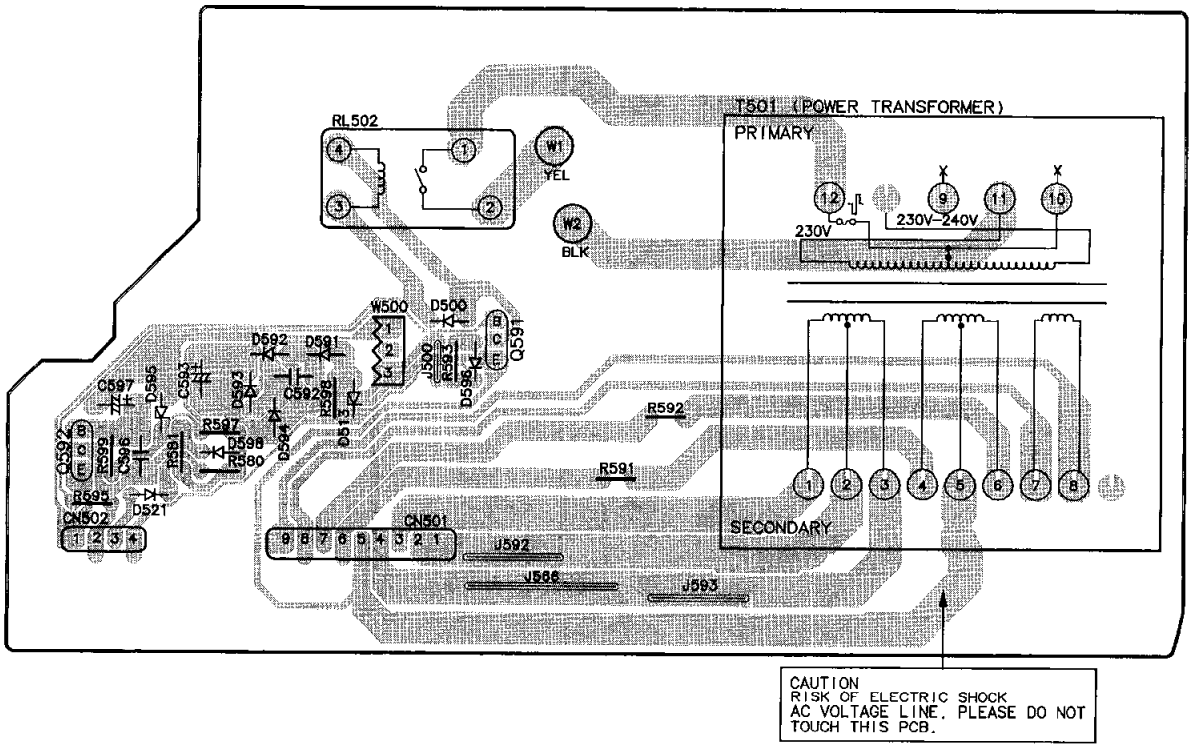

M TRANSFORMER P.C.B. (REPX0173T)...EB...Supplied by MAVD

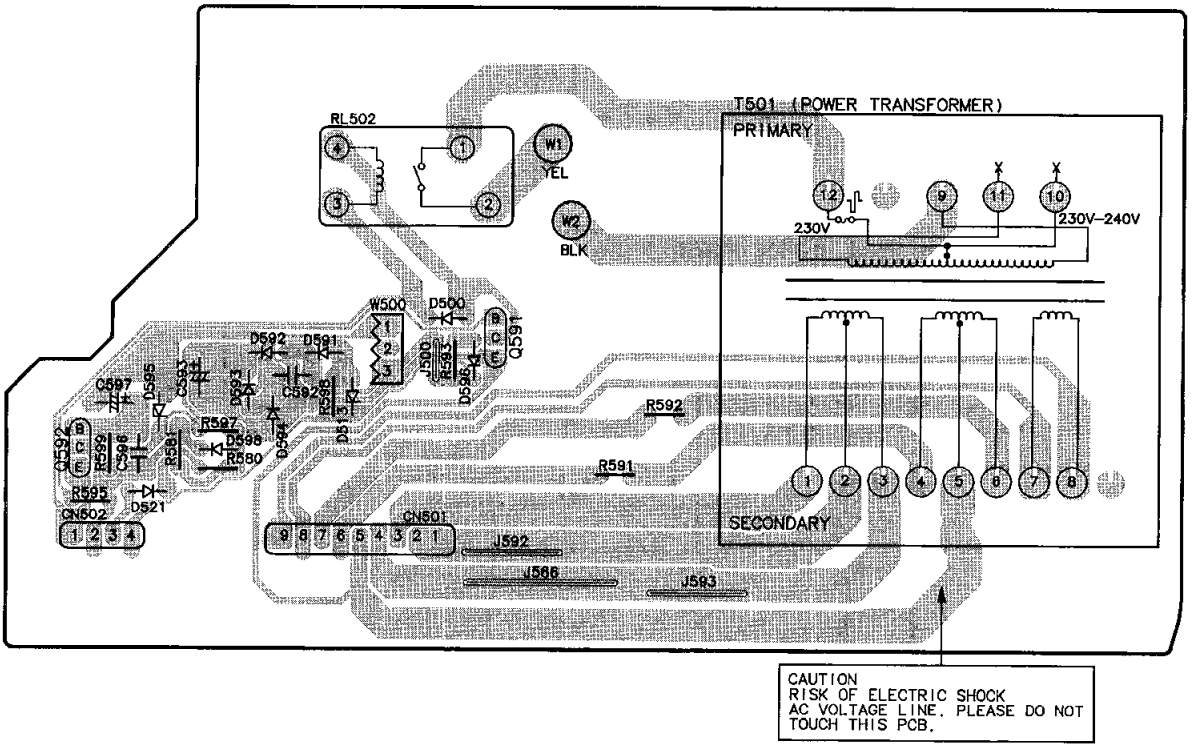

A SERVO P.C.B. (REPX0144)

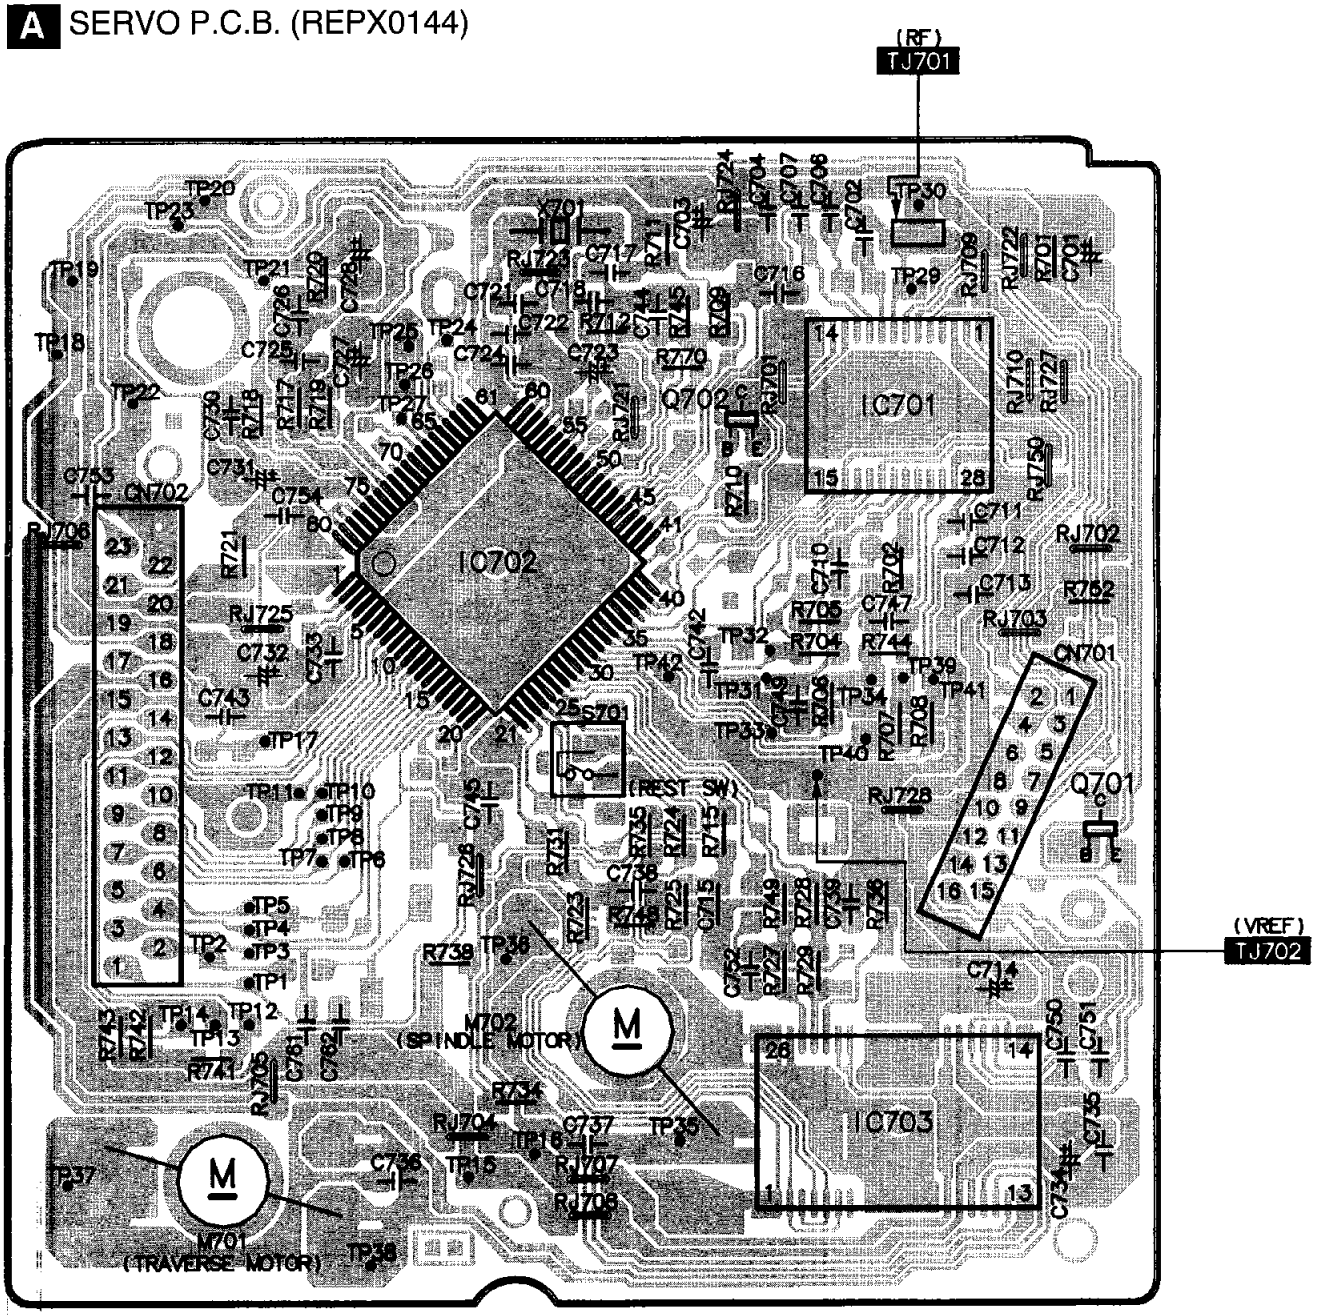

Ref. No.	Loc. No.
IC701	F3
IC702	D4
IC703	F7
Q701	G5
Q702	E3

B MAIN P.C.B. (REPX0187B)...Supplied by MAVD

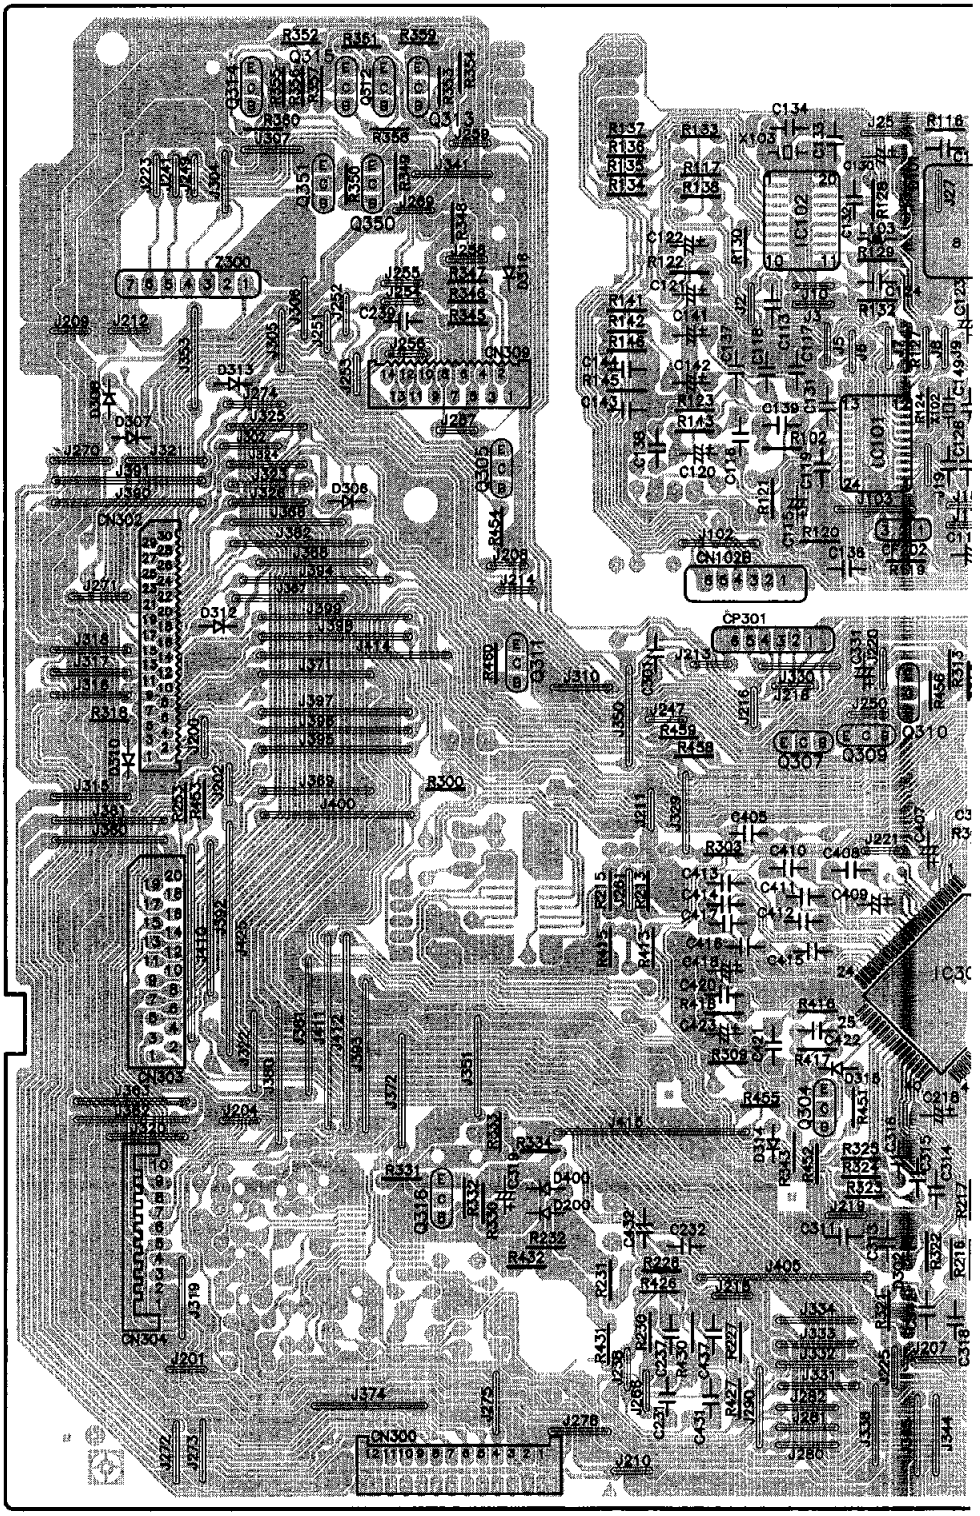

G H I J K L M

J TUNER P.C.B. (REPX0188B)...Supplied by MAVD

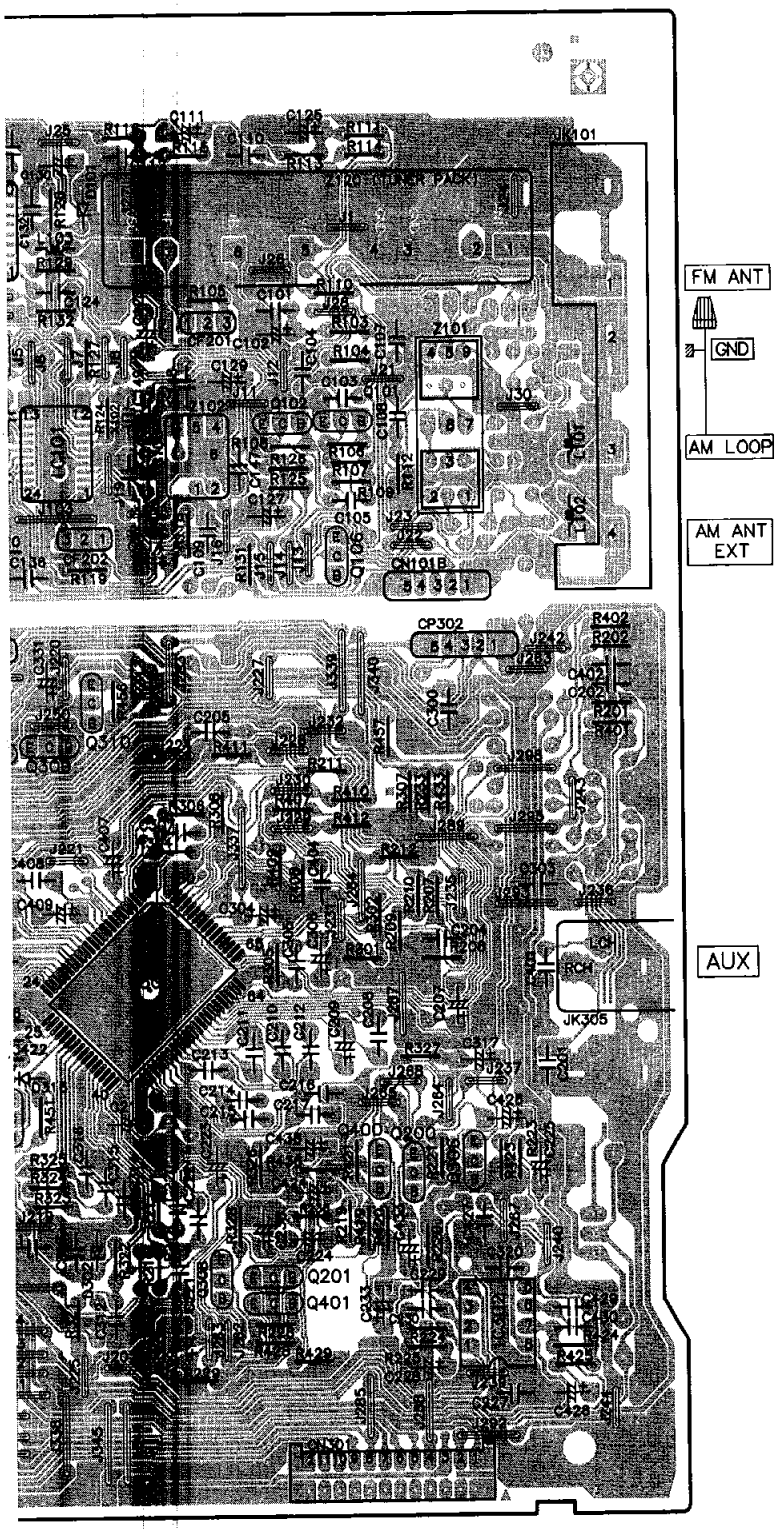

Ref. No.	Loc. No.
D101	F2
D200	D7
D302	F7
D306	C3
D307	B3
D308	B3
D310	B4
D312	C4
D313	C3
D314	F6
D315	F6
D316	D2
D400	D7
IC101	E3
IC102	E2
IC302	H7
IC303	D6
Q101	H3
Q106	H3
Q200	H7
Q201	G7
Q304	F6
Q305	D3
Q306	H7
Q307	F4
Q308	G7
Q309	F4
Q310	F4
Q311	D4
Q312	D1
Q313	D1
Q314	C1
Q315	C1
Q316	D7
Q350	C1
Q351	C1
Q400	H7
Q401	G7

C PANEL P.C.B. (REPX0172G)

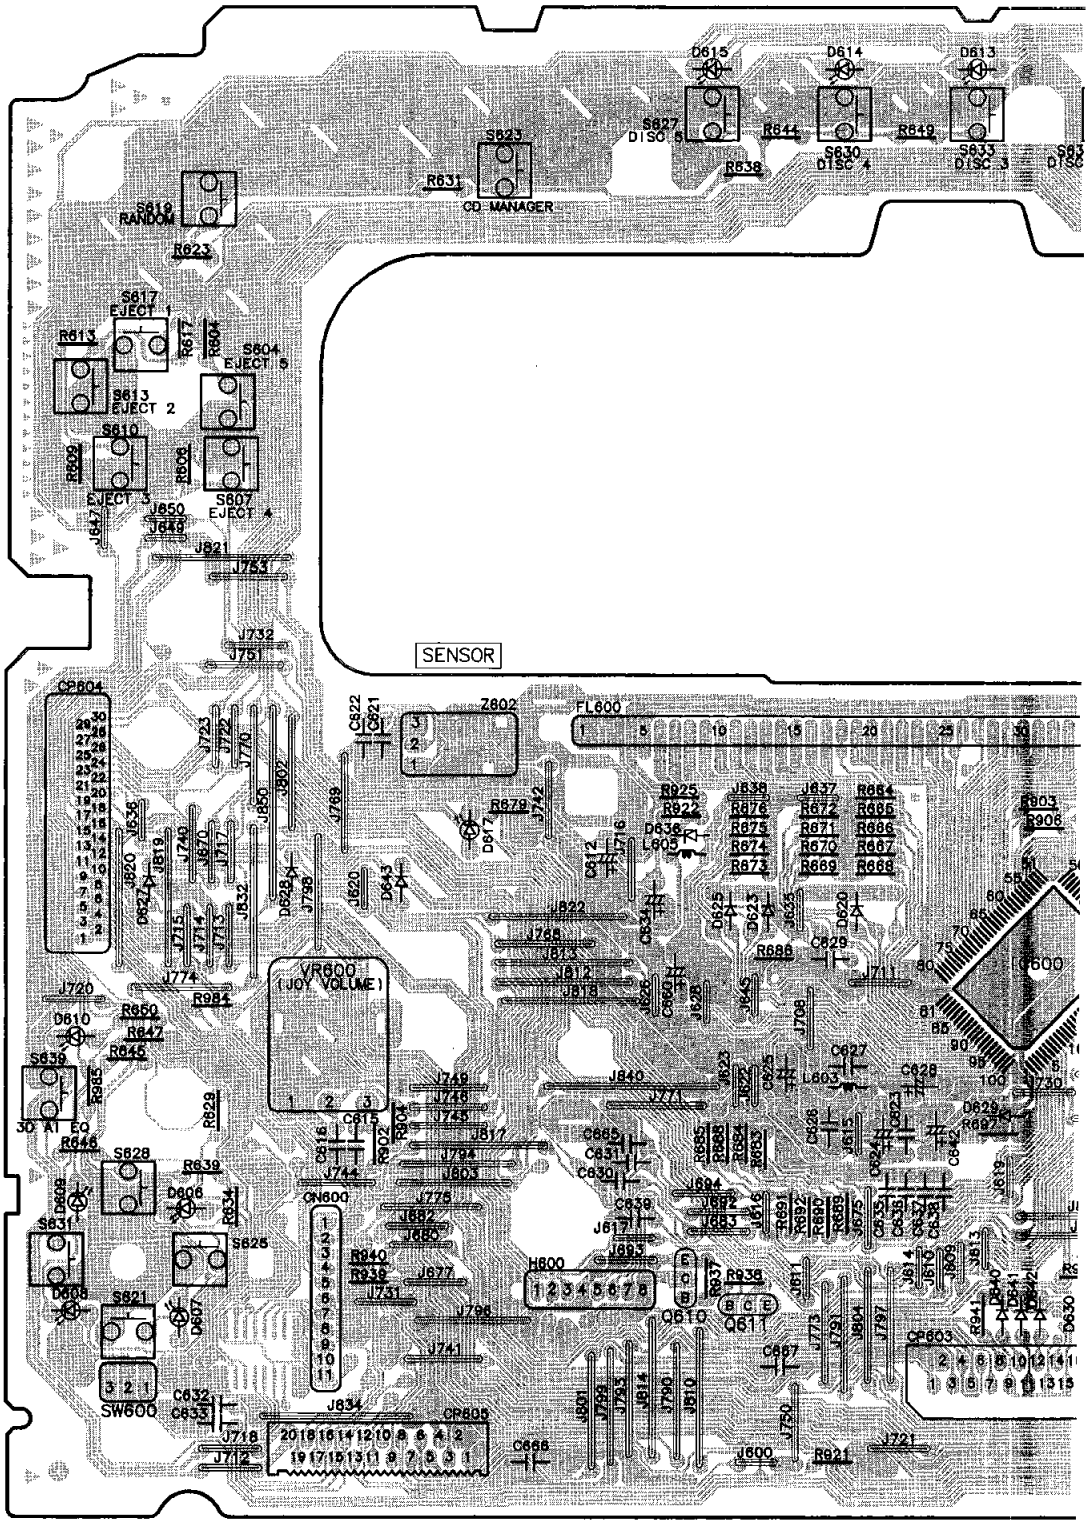

G H I J K L M

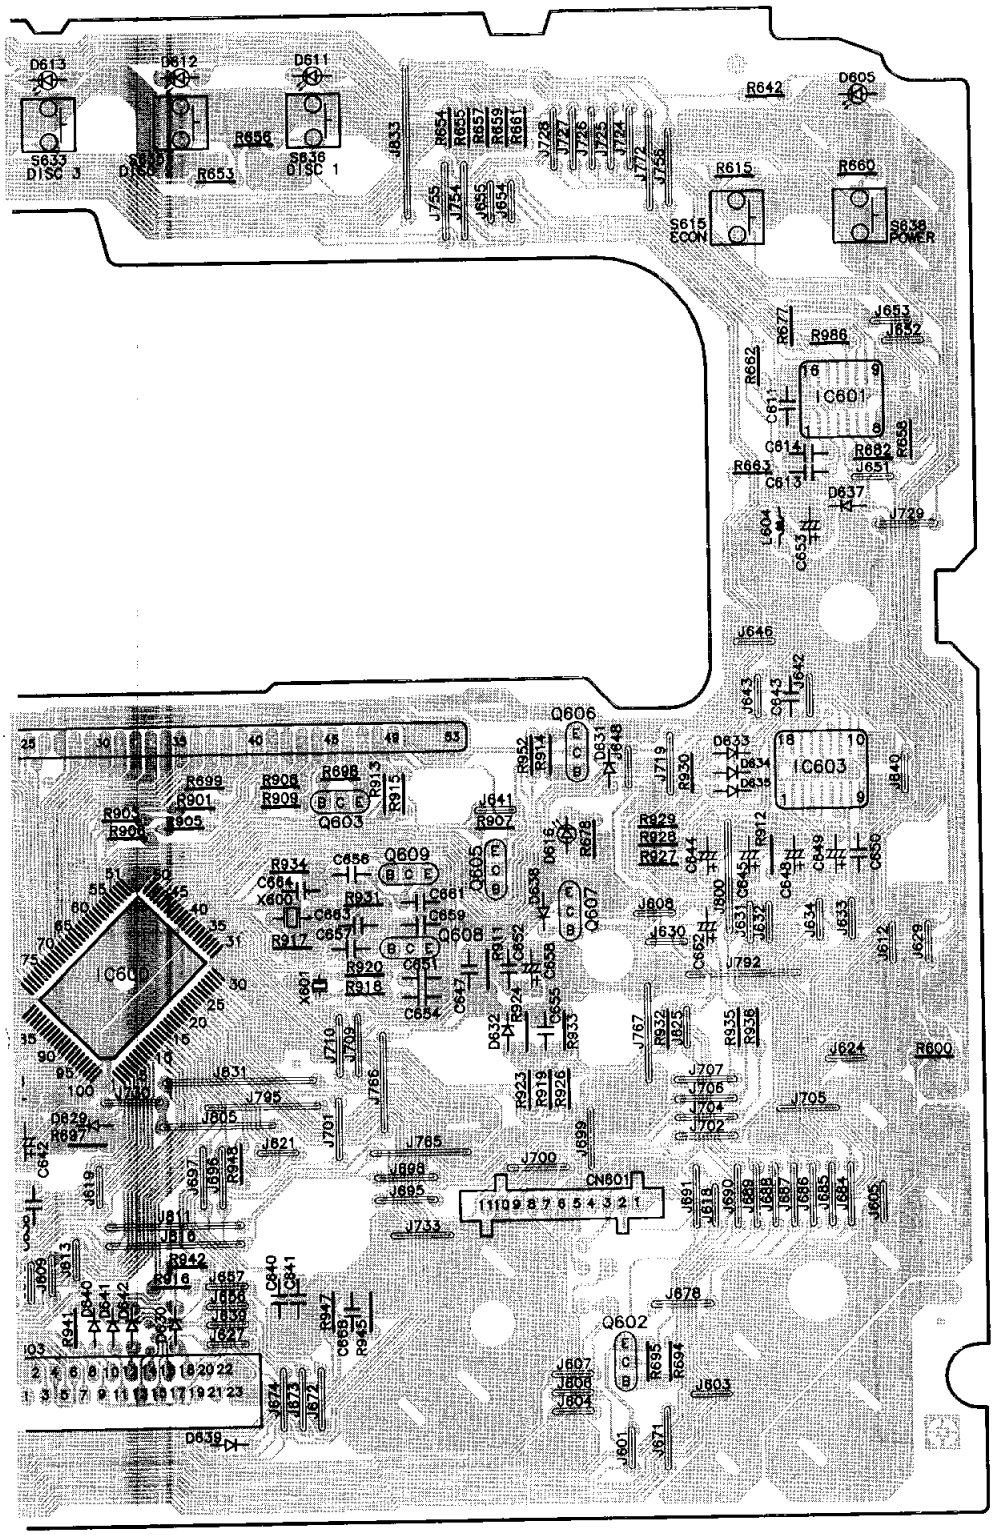

Ref. No.	Loc. No.
D605	K1
D606	B7
D607	B7
D608	B7
D609	B7
D610	B6
D611	H1
D612	G1
D613	G1
D614	F1
D615	E1
D616	I5
D617	D5
D620	F5
D622	F5
D623	E5
D624	E5
D625	E5
D627	B5
D628	C5
D629	G6
D630	G7
D631	J4
D632	I6

Ref. No.	Loc. No.
D633	J4
D634	J5
D635	J5
D636	E5
D637	K3
D638	I5
D639	G8
D640	G7
D641	G7
D642	G7
D643	D5
IC600	G6
IC601	C7
IC603	K5
Q602	J8
Q603	H5
Q605	I5
Q606	I4
Q607	I5
Q608	H5
Q609	H5
Q610	E7
Q611	E7

D TACT SWTICH P.C.B. (REPX0179E)

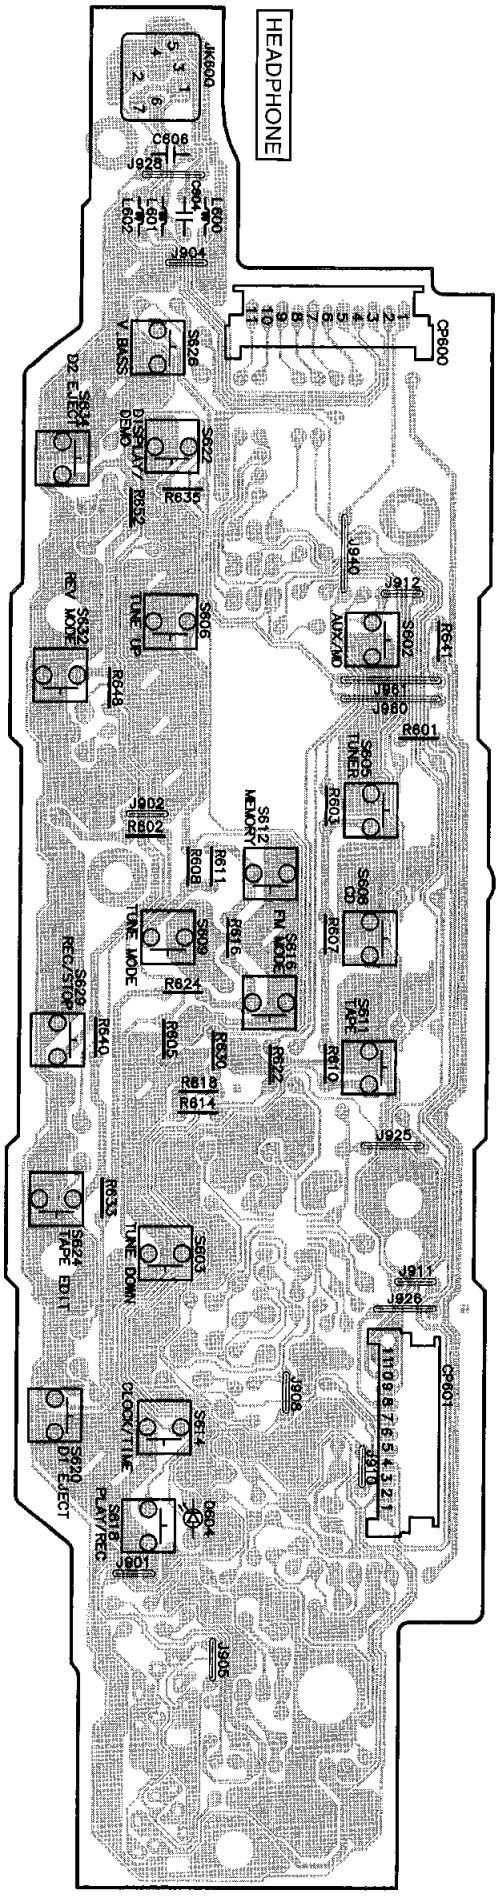

N SUB-TRANSFORMER P.C.B.
(REPX0173S)...E,EG...Supplied by MAVD
(REPX0173T)...EB...Supplied by MAVD

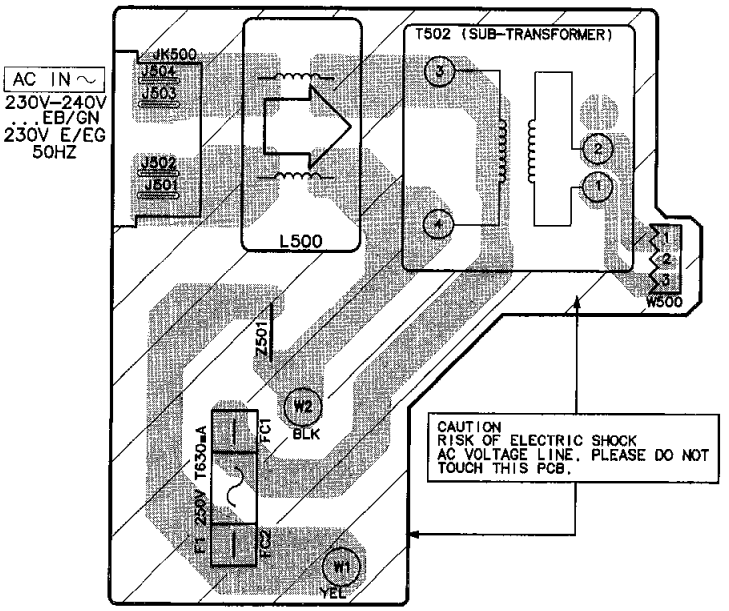

E MECHANISM (DECK 1) P.C.B. (REPX0108A)

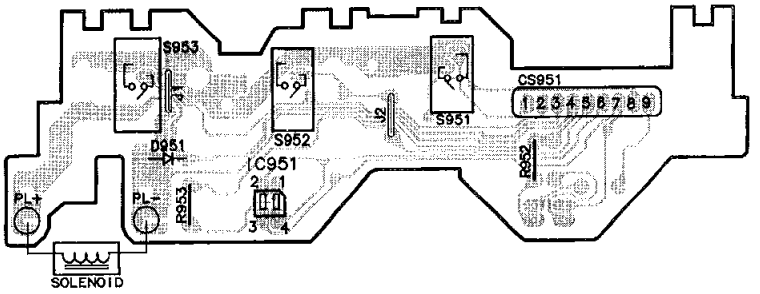

F MECHANISM (DECK 2) P.C.B. (REPX0108)

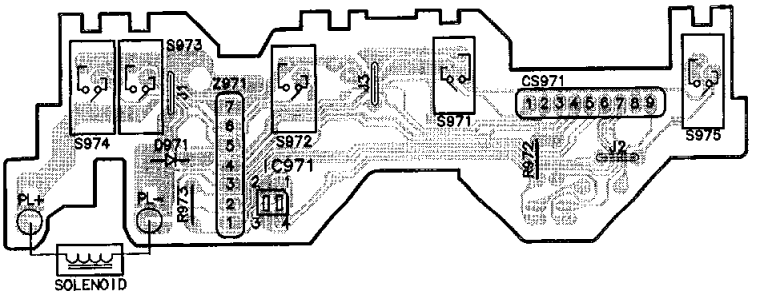

G MOTOR P.C.B. (REP2578A-N)

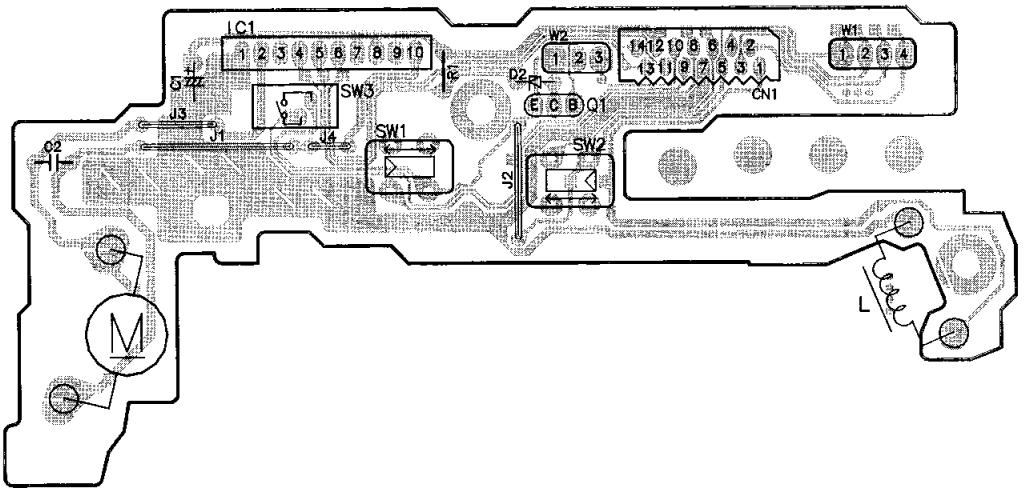

H SPINDLE POSITION P.C.B. (REP2578A-N)



I CD DETACT P.C.B. (REP2578A-N)

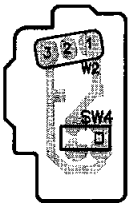

K DECK P.C.B. (REPX0157C)

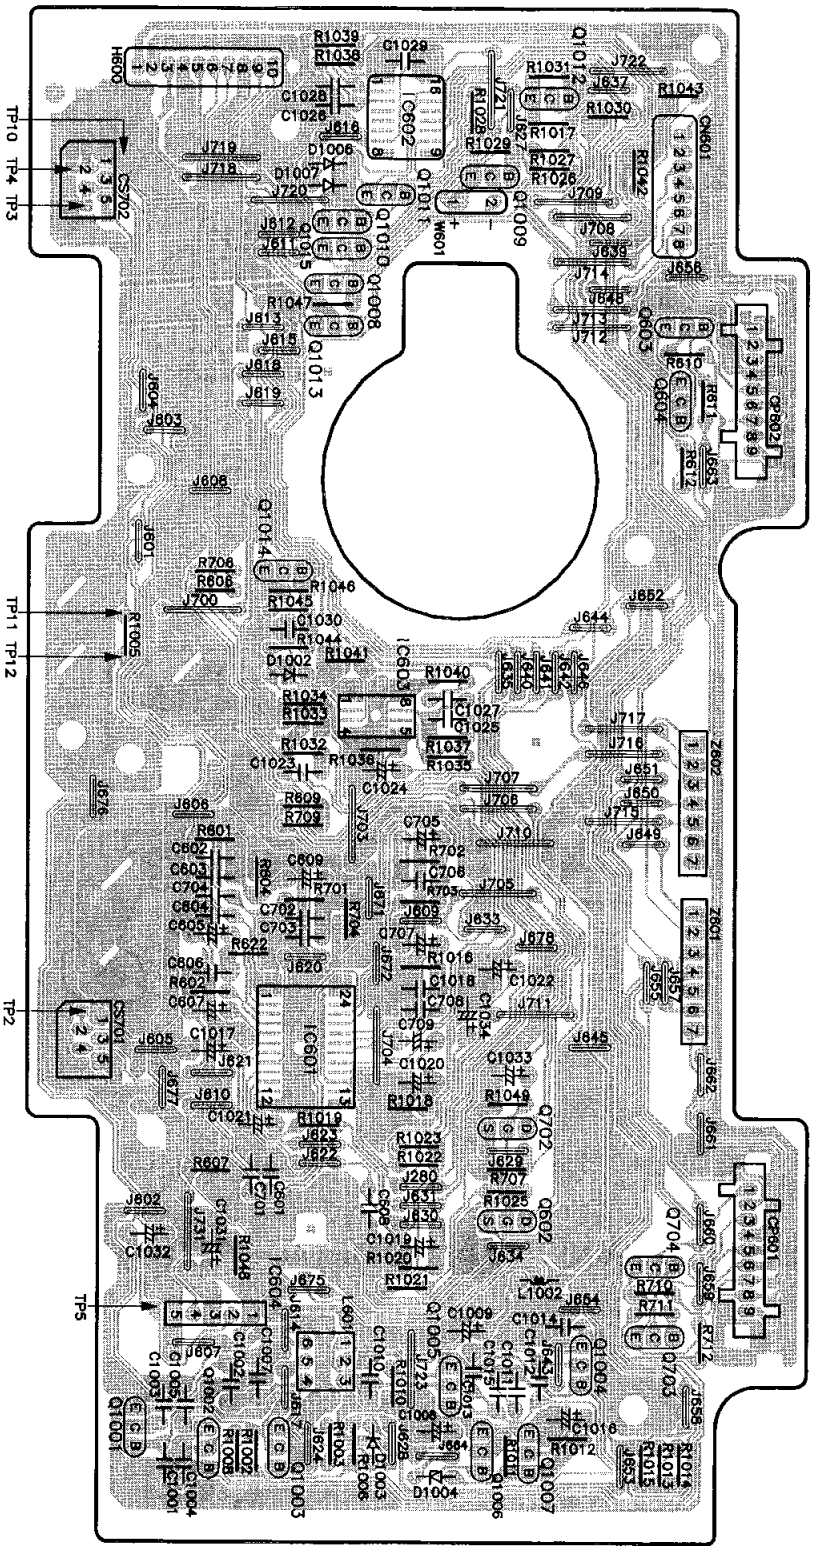

Ref. No.	Loc. No.
D1002	C5
D1003	C9
D1004	C9
D1006	C2
D1007	C2
IC601	C7
IC602	C2
IC603	C5
IC604	B8
Q1001	B9
Q1002	B9
Q1003	C9
Q1004	D8
Q1005	D8
Q1006	D9
Q1007	D9
Q1008	C3
Q1009	D2
Q1010	C2
Q1011	C2
Q1012	D1
Q1013	C3
Q1014	C4
Q1015	C2
Q602	D7
Q603	E3
Q604	E3
Q702	D7
Q703	E8
Q704	E8

L POWER P.C.B. (REPX0184F)...Supplied by MAVD

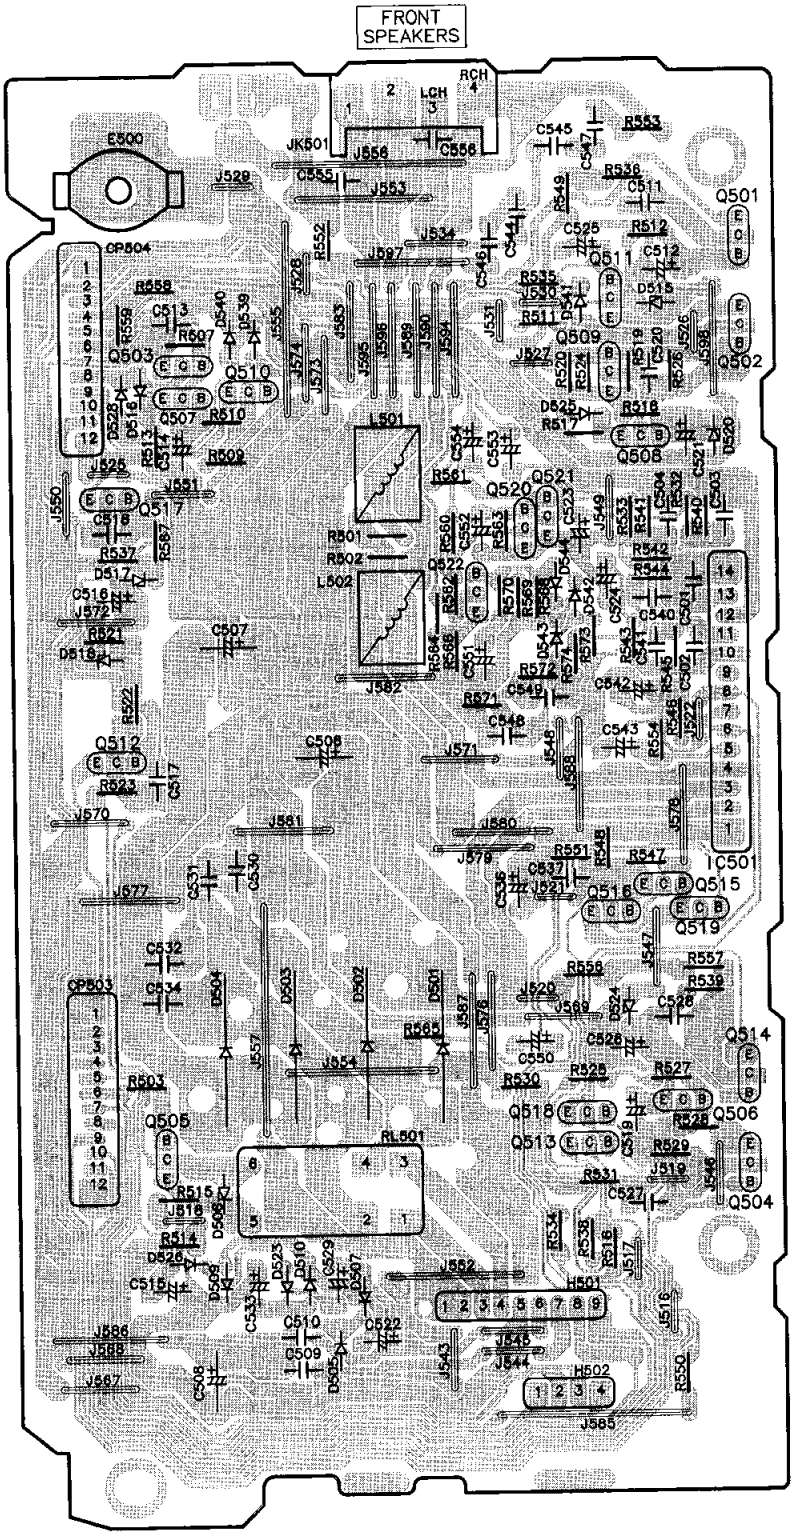

Ref. No.	Loc. No.
D501	D6
D502	C6
D503	C6
D504	C6
D505	C7
D506	C7
D507	C7
D509	C7
D510	C7
D515	E2
D516	B2
D517	B3
D518	B4
D520	E3
D523	C7
D524	E6
D525	E3
D526	B7
D528	B2
D539	C2
D540	C2
D541	E2
D542	D4
D543	D4
D544	D3
IC501	E4

Ref. No.	Loc. No.
Q501	E2
Q502	E2
Q503	B2
Q504	E7
Q505	B6
Q506	E6
Q507	B2
Q508	E3
Q509	E2
Q510	C2
Q511	E2
Q512	B4
Q513	D6
Q514	E6
Q515	E5
Q516	E5
Q517	B3
Q518	D6
Q519	E5
Q520	D3
Q521	D3
Q522	D4

■ Block Diagram

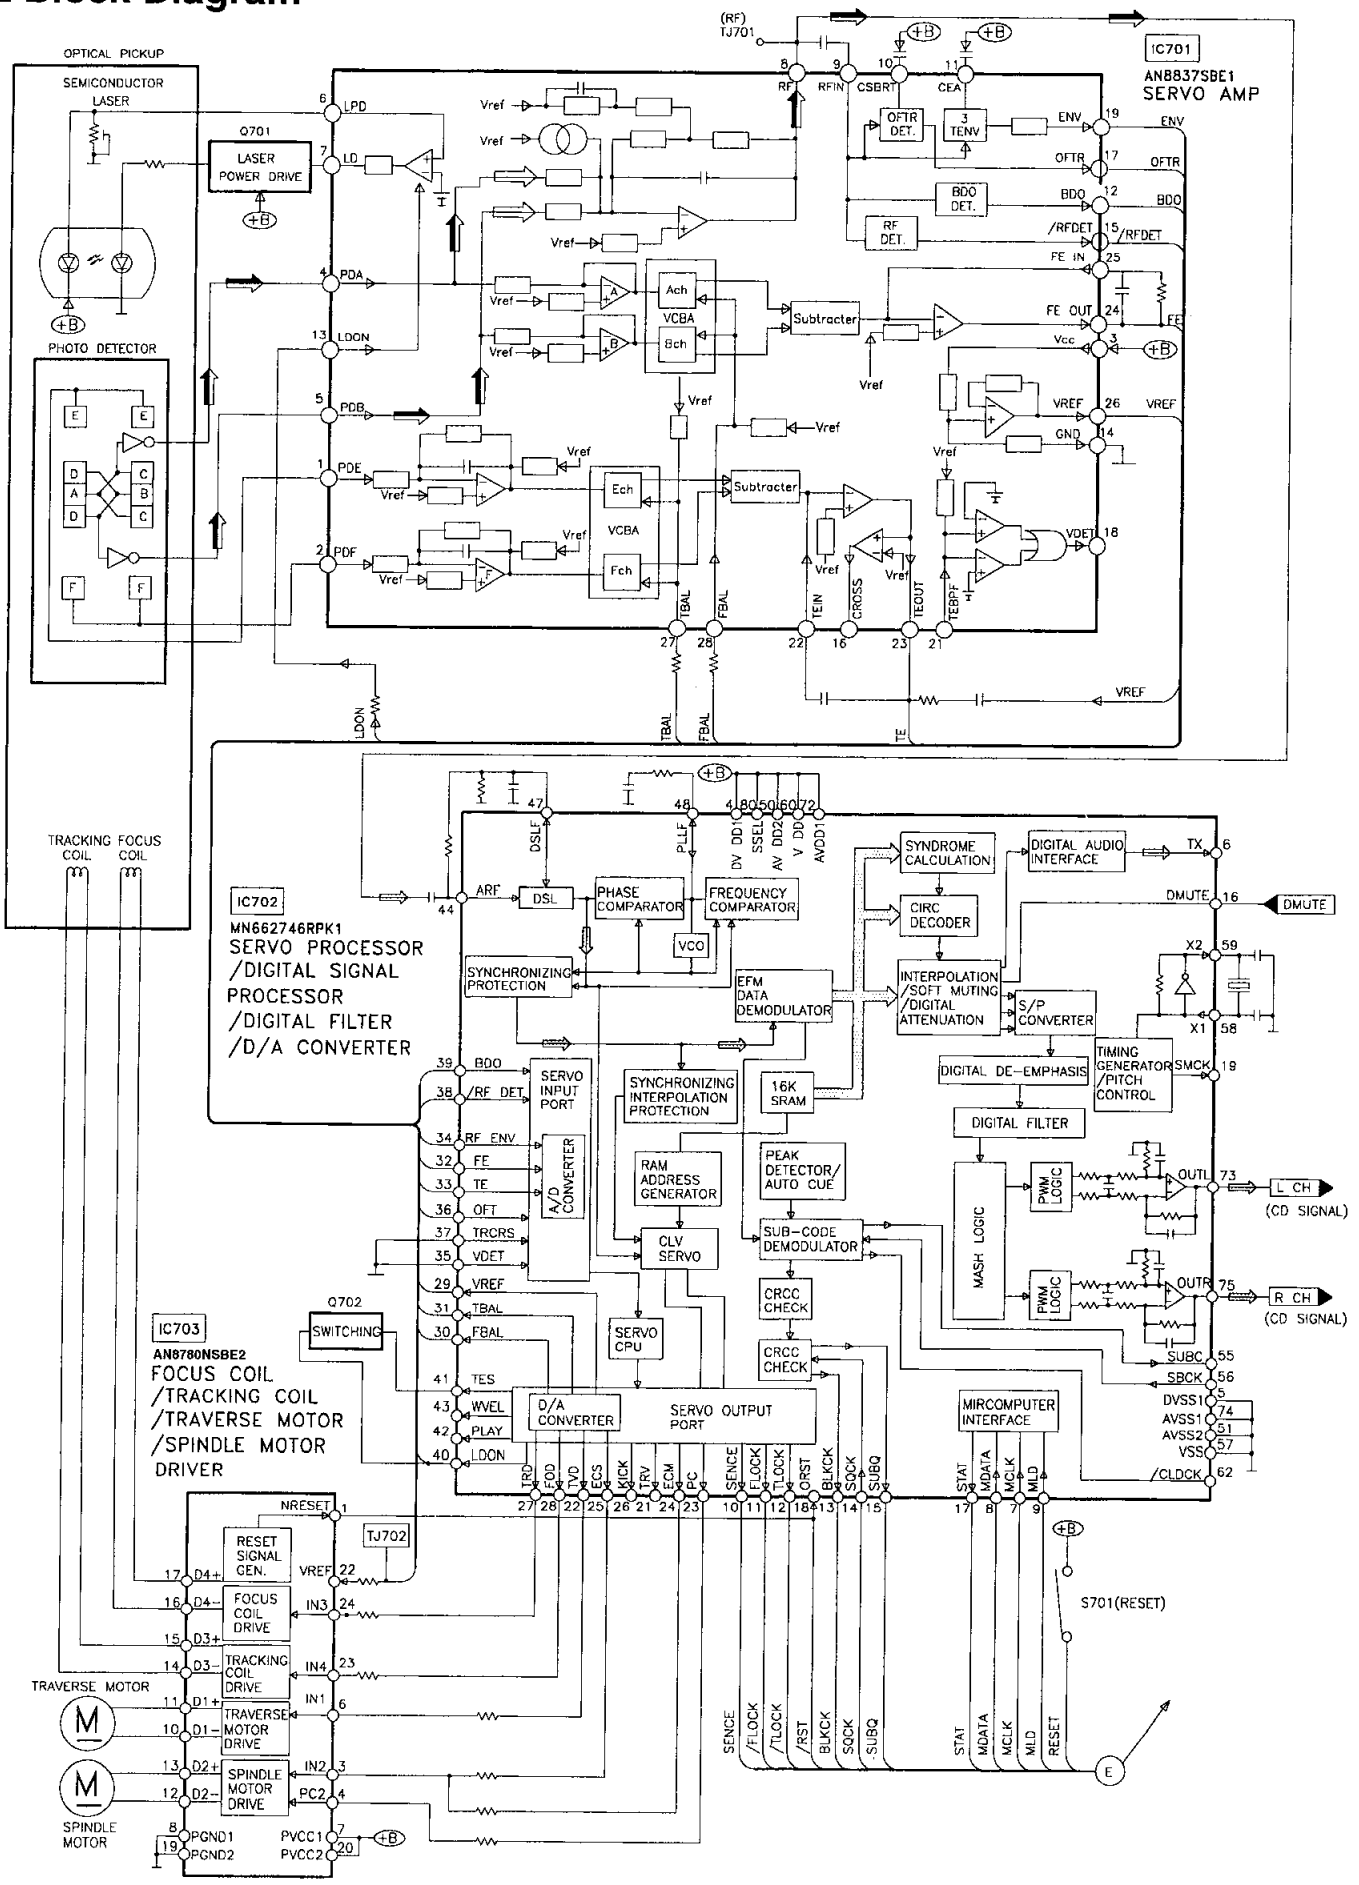

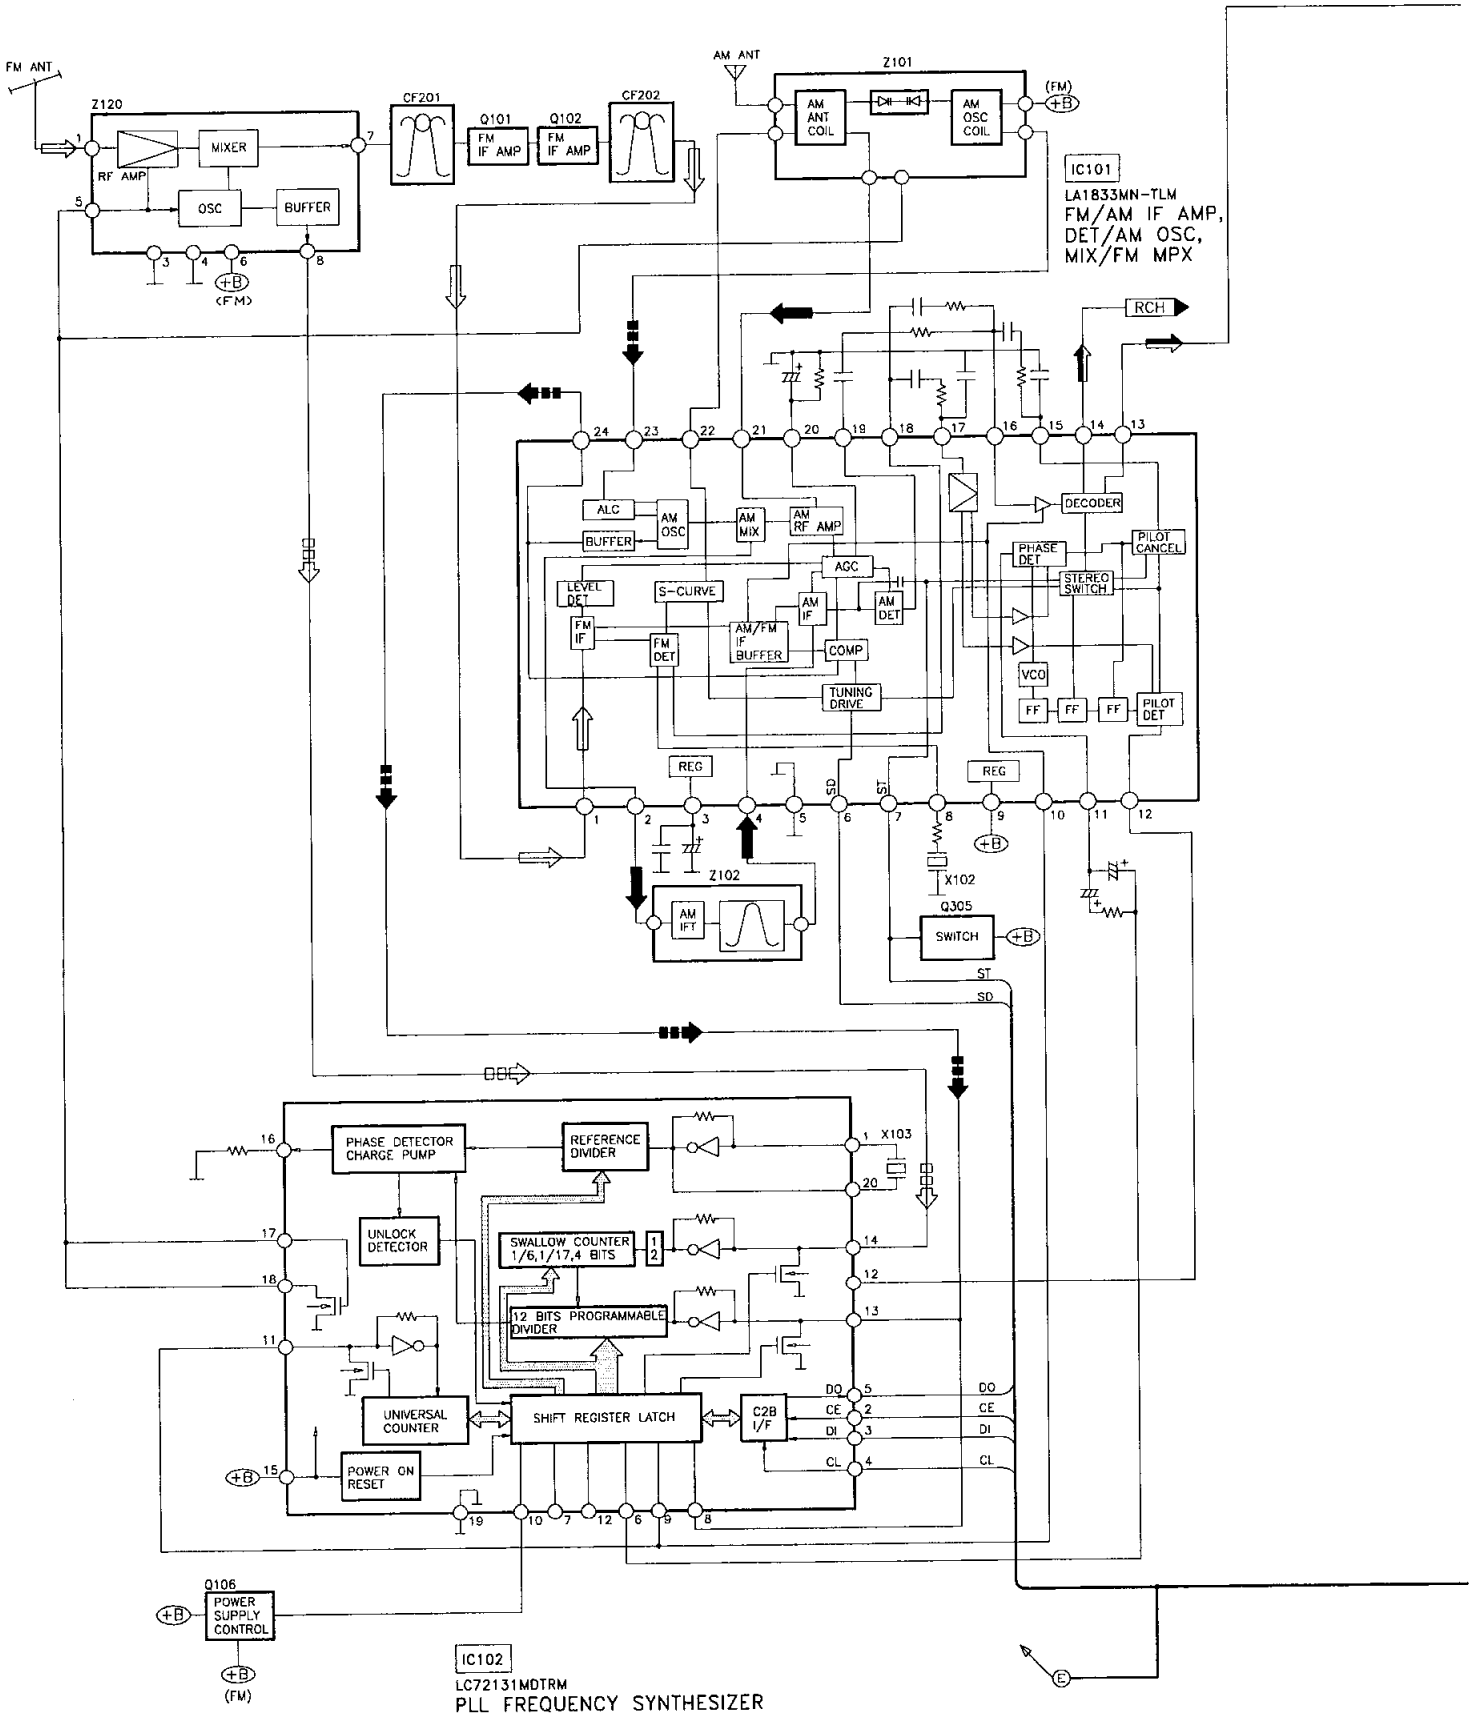
FM ANT
Z120
MIXER
RF AMP
OSC
BUFFER
(FM)
CF201
Q101
FM IF AMP
Q102
FM IF AMP
CF202
AM ANT
Z101
AM ANT COIL
AM OSC COIL
IC101
LA1833MN-TLM
FM/AM IF AMP, DET/AM OSC, MIX/FM MPX
RCH
ALC
AM OSC
BUFFER
AM MIX
AM RF AMP
AGC
DECODER
PHASE DET
PILOT CANCEL
STEREO SWITCH
LEVEL DET
S-CURVE
FM IF
FM DET
AM/FM IF BUFFER
AM IF
AM DET
COMP
TUNING DRIVE
VCO
FF
PILOT DET
REG
SD
ST
Z102
AM IFT
X102
Q305
SWITCH
PHASE DETECTOR CHARGE PUMP
REFERENCE DIVIDER
X103
UNLOCK DETECTOR
SWALLOW COUNTER 1/6,1/17,4 BITS
12 BITS PROGRAMMABLE DIVIDER
UNIVERSAL COUNTER
SHIFT REGISTER LATCH
C2B I/F
DO
CE
DI
CL
POWER ON RESET
Q106
POWER SUPPLY CONTROL
IC102
LC72131MDTRM
PLL FREQUENCY SYNTHESIZER

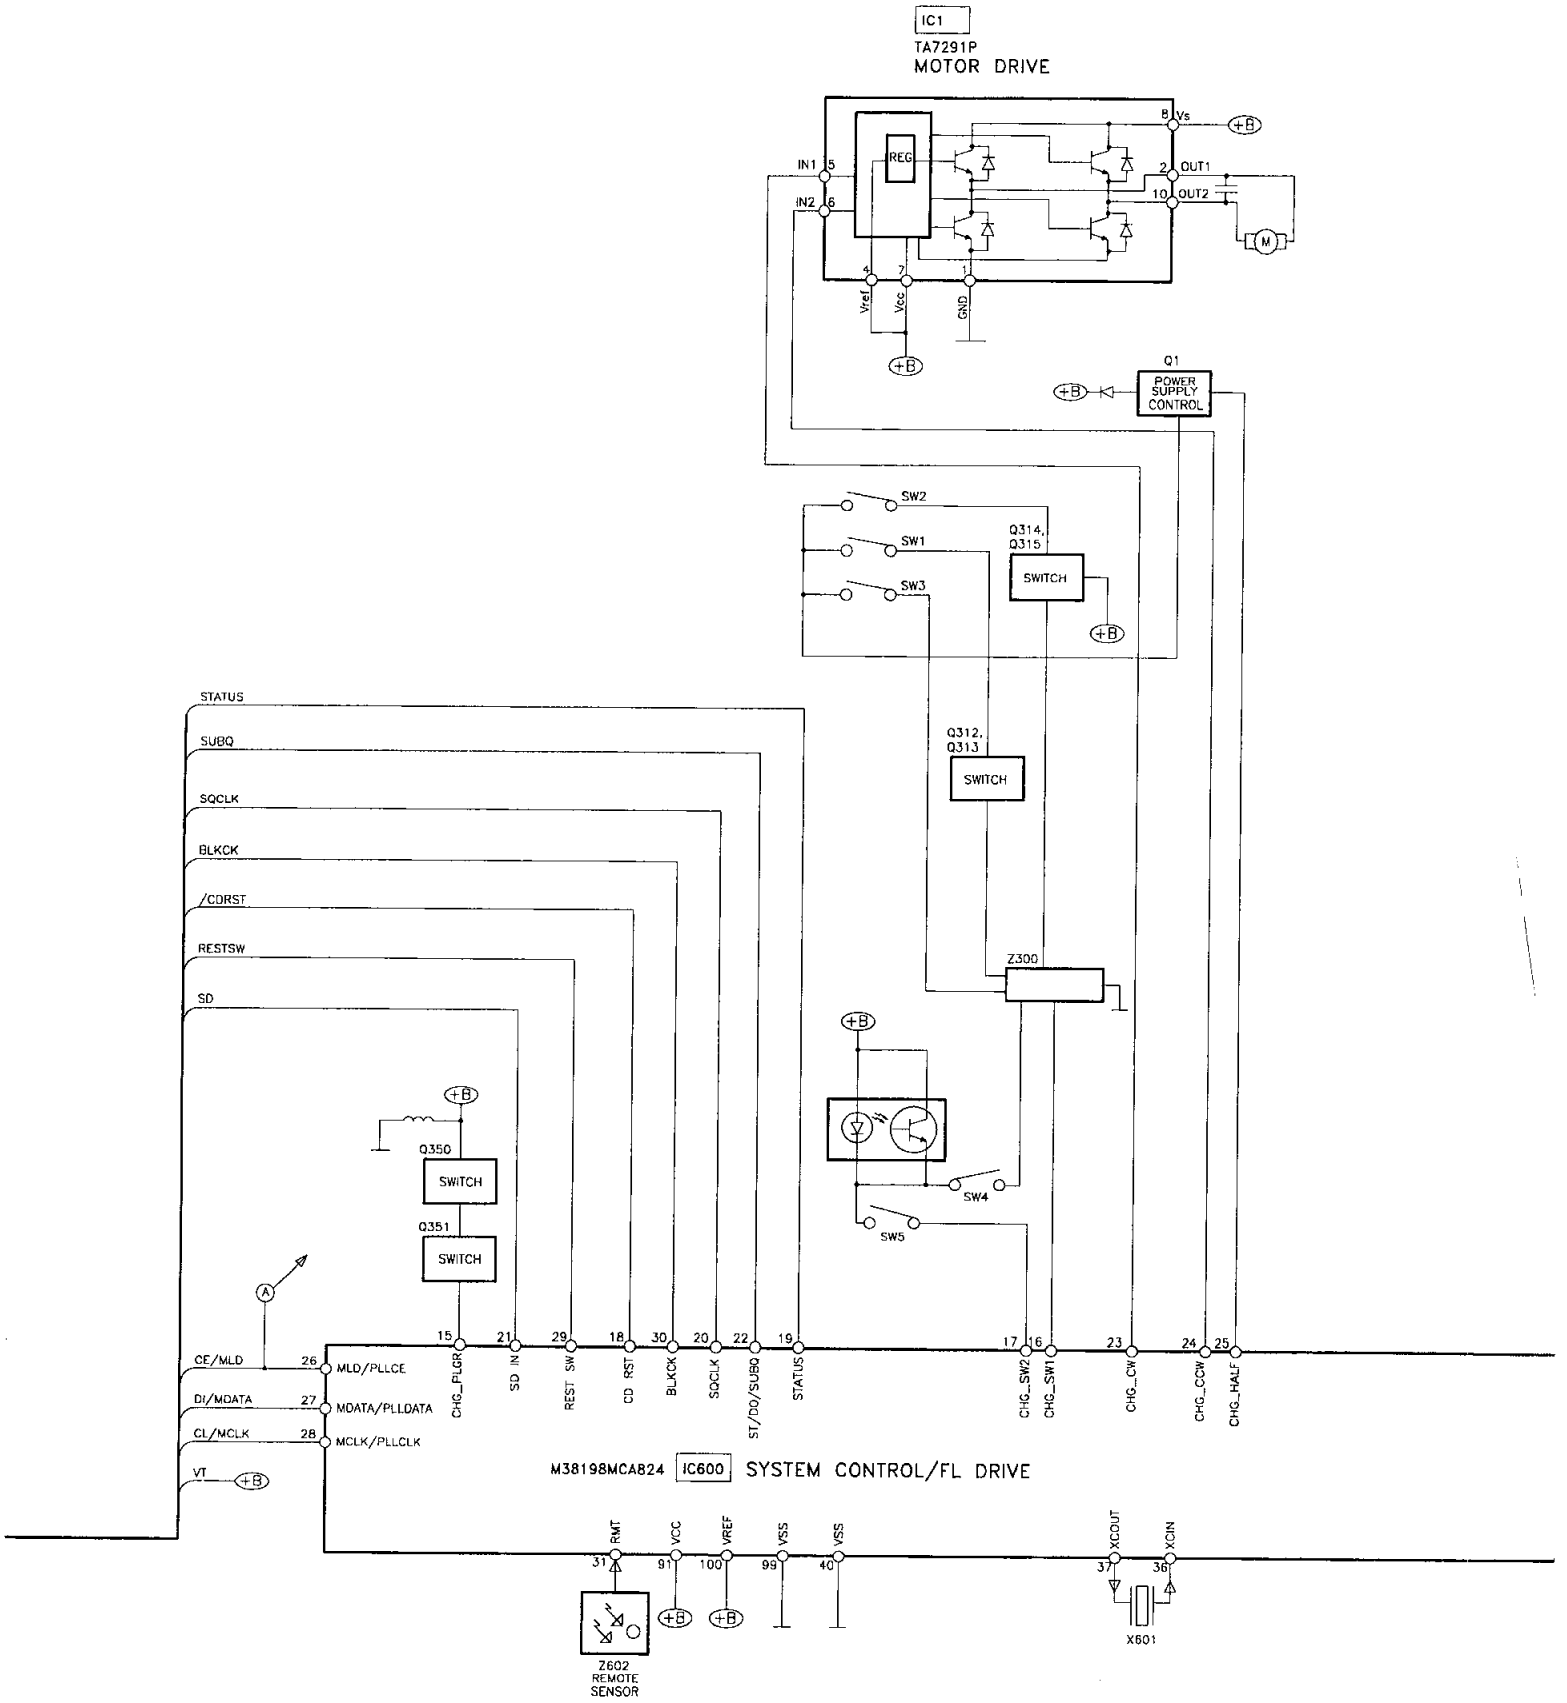
IC1
TA7291P
MOTOR DRIVE
REG
IN1
IN2
OUT1
OUT2
Vs
Vref
Vcc
GND
+B
M
Q1
POWER SUPPLY CONTROL
SW1
SW2
SW3
Q314, Q315
SWITCH
Q312, Q313
SWITCH
Z300
SW4
SW5
Q350
SWITCH
Q351
SWITCH
STATUS
SUBQ
SQCLK
BLKCK
/CDRST
RESTSW
SD
CE/MLD
DI/MDATA
CL/MCLK
VT
MLD/PLLCE
MDATA/PLLDATA
MCLK/PLLCLK
CHG_FLGR
SD IN
REST SW
CD RST
BLKCK
SQCLK
ST/DO/SUBQ
STATUS
CHG_SW2
CHG_SW1
CHG_CW
CHG_CCW
CHG_HALF
M38198MCA824
IC600
SYSTEM CONTROL/FL DRIVE
RMT
VCC
VREF
VSS
VSS
XCOUT
XCIN
X601
Z602
REMOTE SENSOR

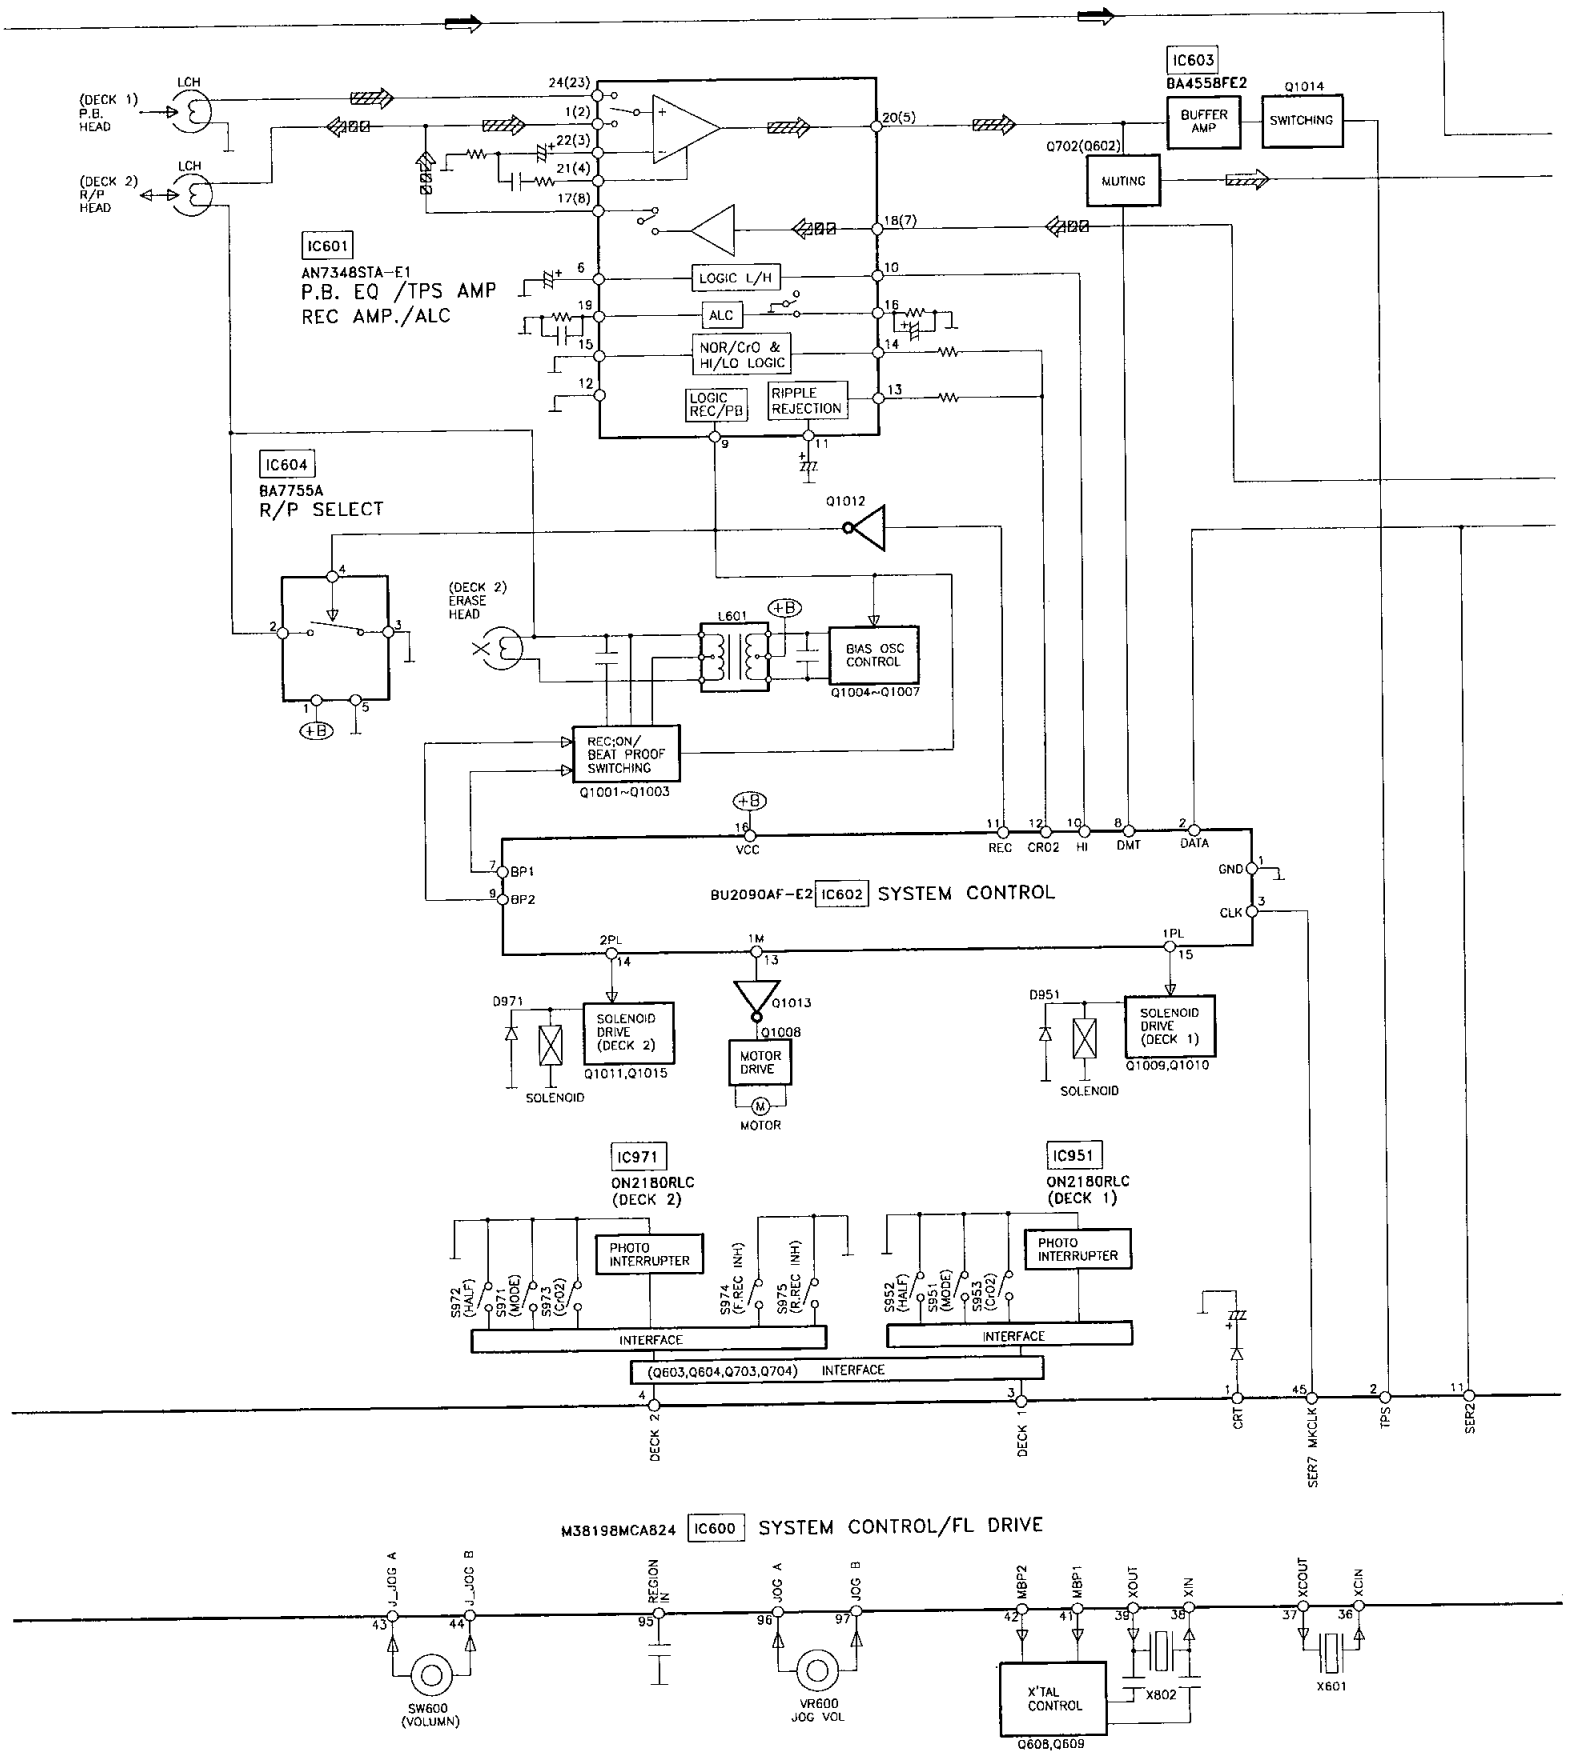
(DECK 1) P.B. HEAD
(DECK 2) R/P HEAD
LCH
IC601
AN7348STA-E1
P.B. EQ /TPS AMP
REC AMP./ALC
LOGIC L/H
ALC
NOR/CrO & HI/LO LOGIC
LOGIC REC/PB
RIPPLE REJECTION
IC603
BA4558FE2
BUFFER AMP
Q1014
SWITCHING
Q702(Q602)
MUTING
IC604
BA7755A
R/P SELECT
Q1012
(DECK 2) ERASE HEAD
L601
BIAS OSC CONTROL
Q1004~Q1007
REC;ON/ BEAT PROOF SWITCHING
Q1001~Q1003
BU2090AF-E2 IC602 SYSTEM CONTROL
VCC
REC
CR02
HI
DMT
DATA
BP1
BP2
GND
CLK
2PL
1M
1PL
D971
SOLENOID DRIVE (DECK 2)
Q1011,Q1015
SOLENOID
Q1013
Q1008
MOTOR DRIVE
MOTOR
D951
SOLENOID DRIVE (DECK 1)
Q1009,Q1010
IC971
ON2180RLC
(DECK 2)
IC951
ON2180RLC
(DECK 1)
PHOTO INTERRUPTER
S972 (HALF)
S971 (MODE)
S973 (CrO2)
S974 (F.REC INH)
S975 (R.REC INH)
S952 (HALF)
S951 (MODE)
S953 (CrO2)
INTERFACE
(Q603,Q604,Q703,Q704) INTERFACE
DECK 2
DECK 1
CRT
SER7 MKCLK
TPS
SER2
M38198MCA824 IC600 SYSTEM CONTROL/FL DRIVE
J_JOG A
J_JOG B
REGION IN
JOG A
JOG B
MBP2
MBP1
XOUT
XIN
XCOUT
XCIN
SW600 (VOLUMN)
VR600 JOG VOL
X'TAL CONTROL
Q608,Q609
X802
X601

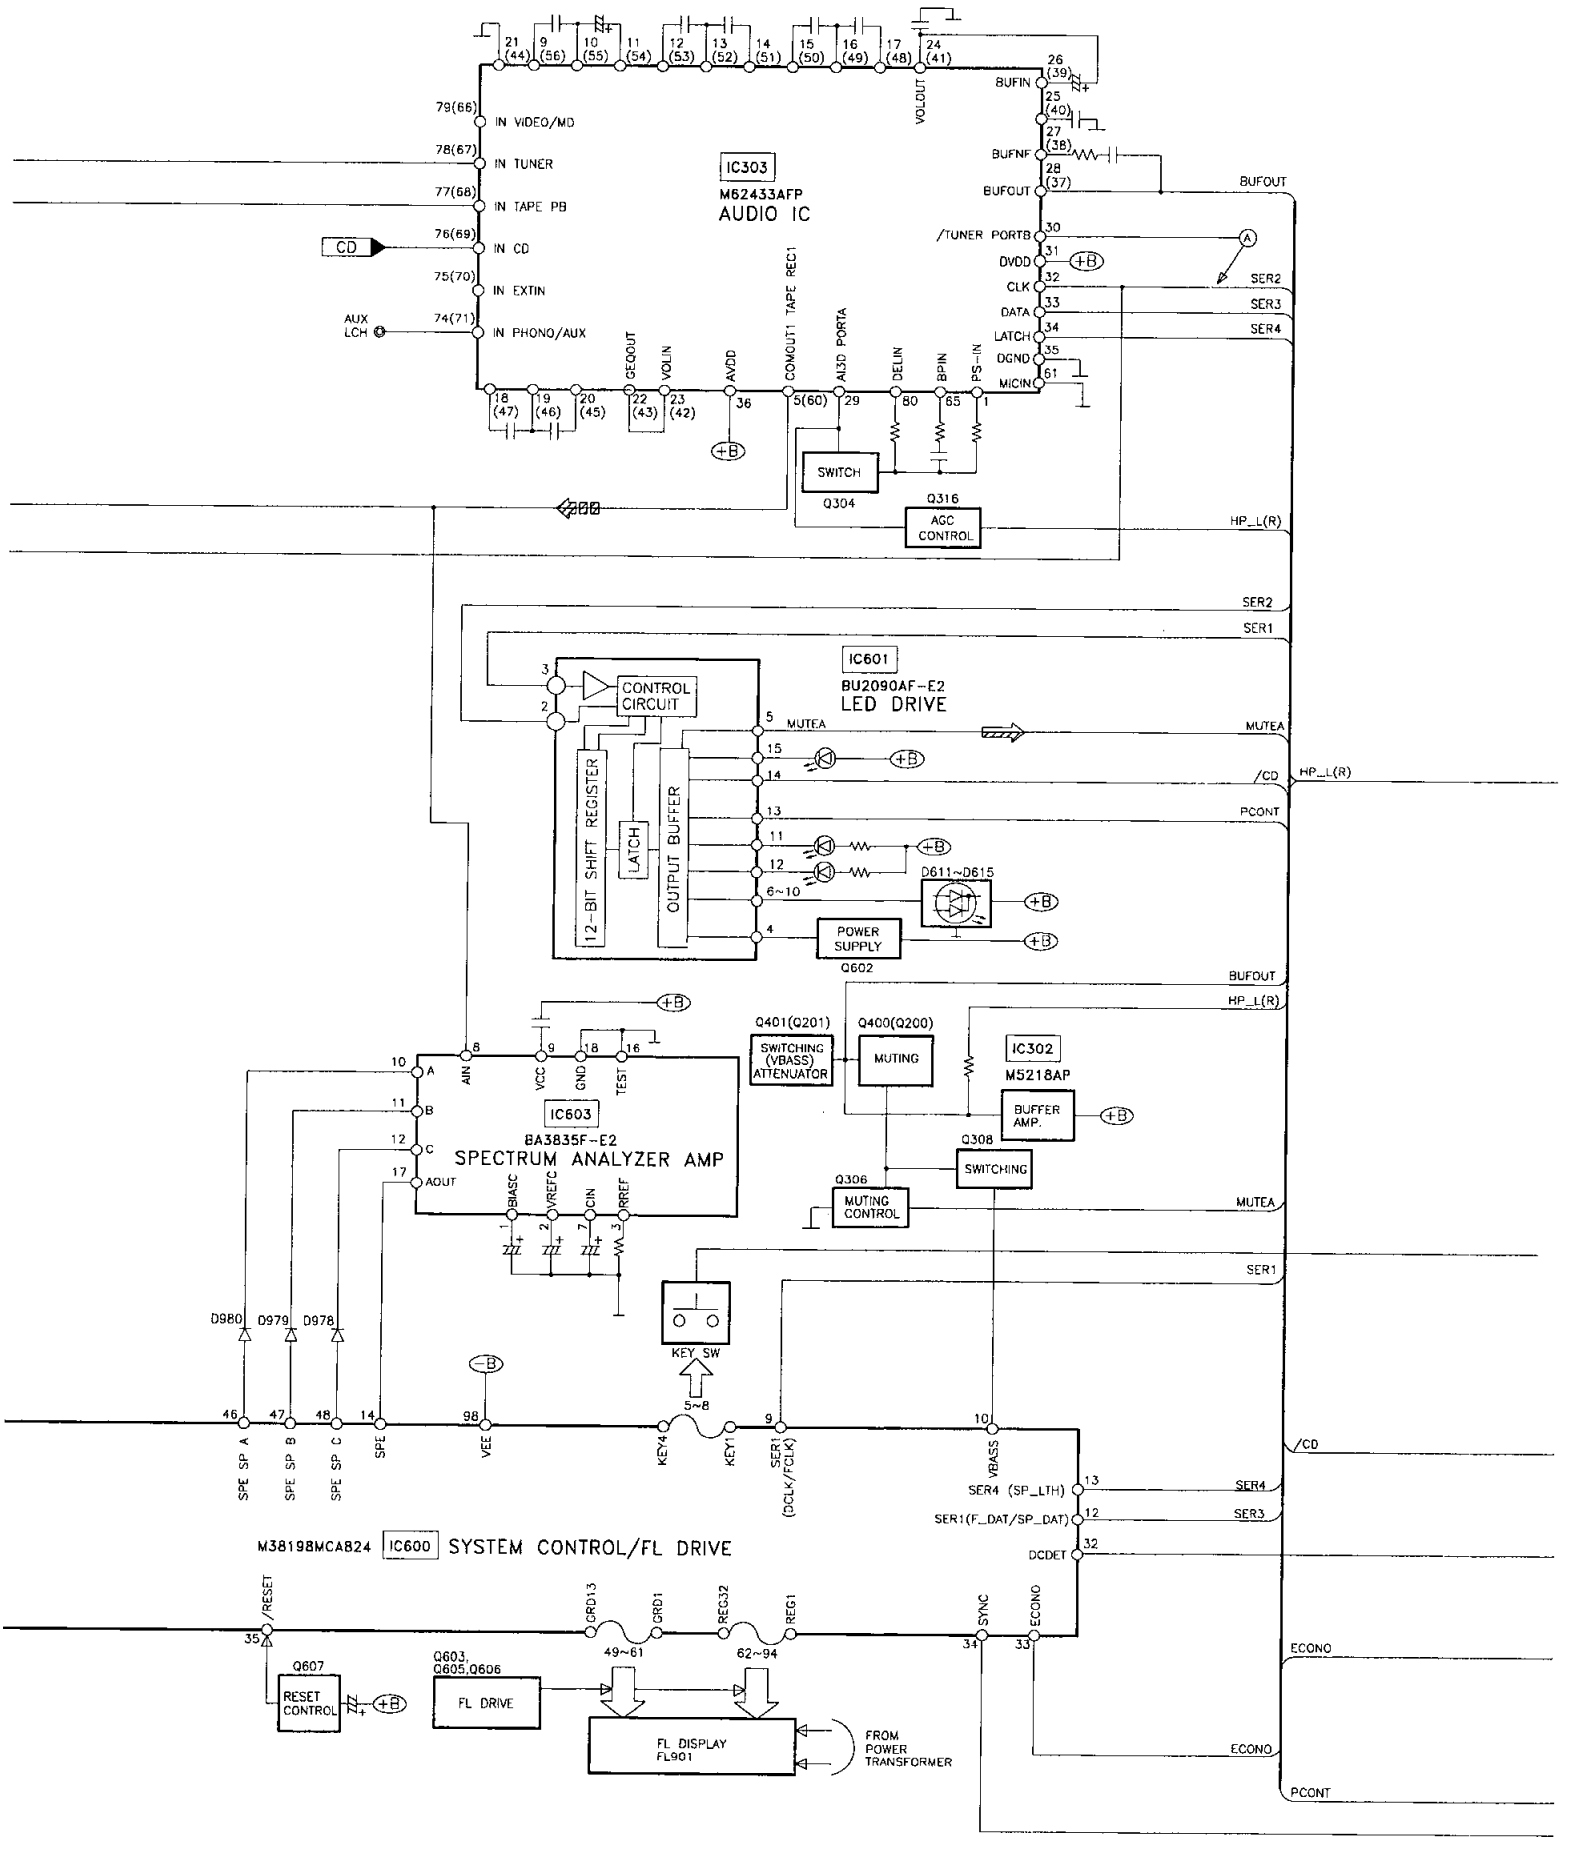
IC303
M62433AFP
AUDIO IC
IN VIDEO/MD
IN TUNER
IN TAPE PB
IN CD
IN EXTIN
IN PHONO/AUX
CD
AUX LCH
BUFIN
BUFNF
BUFOUT
/TUNER PORTB
DVDD
CLK
DATA
LATCH
DGND
MICIN
SER2
SER3
SER4
SWITCH
Q304
Q316
AGC CONTROL
HP_L(R)
IC601
BU2090AF-E2
LED DRIVE
CONTROL CIRCUIT
12-BIT SHIFT REGISTER
LATCH
OUTPUT BUFFER
MUTEA
/CD
PCONT
D611~D615
POWER SUPPLY
Q602
IC603
BA3835F-E2
SPECTRUM ANALYZER AMP
Q401(Q201)
SWITCHING (VBASS) ATTENUATOR
Q400(Q200)
MUTING
IC302
M5218AP
BUFFER AMP.
Q308
SWITCHING
Q306
MUTING CONTROL
KEY SW
D980
D979
D978
SPE SP A
SPE SP B
SPE SP C
SPE
VEE
KEY4
KEY1
SER1 (DCLK/FCLK)
VBASS
SER4 (SP_LTH)
SER1(F_DAT/SP_DAT)
DCDET
M38198MCA824
IC600
SYSTEM CONTROL/FL DRIVE
/RESET
Q607
RESET CONTROL
Q603, Q605, Q606
FL DRIVE
FL DISPLAY FL901
FROM POWER TRANSFORMER
SYNC
ECONO

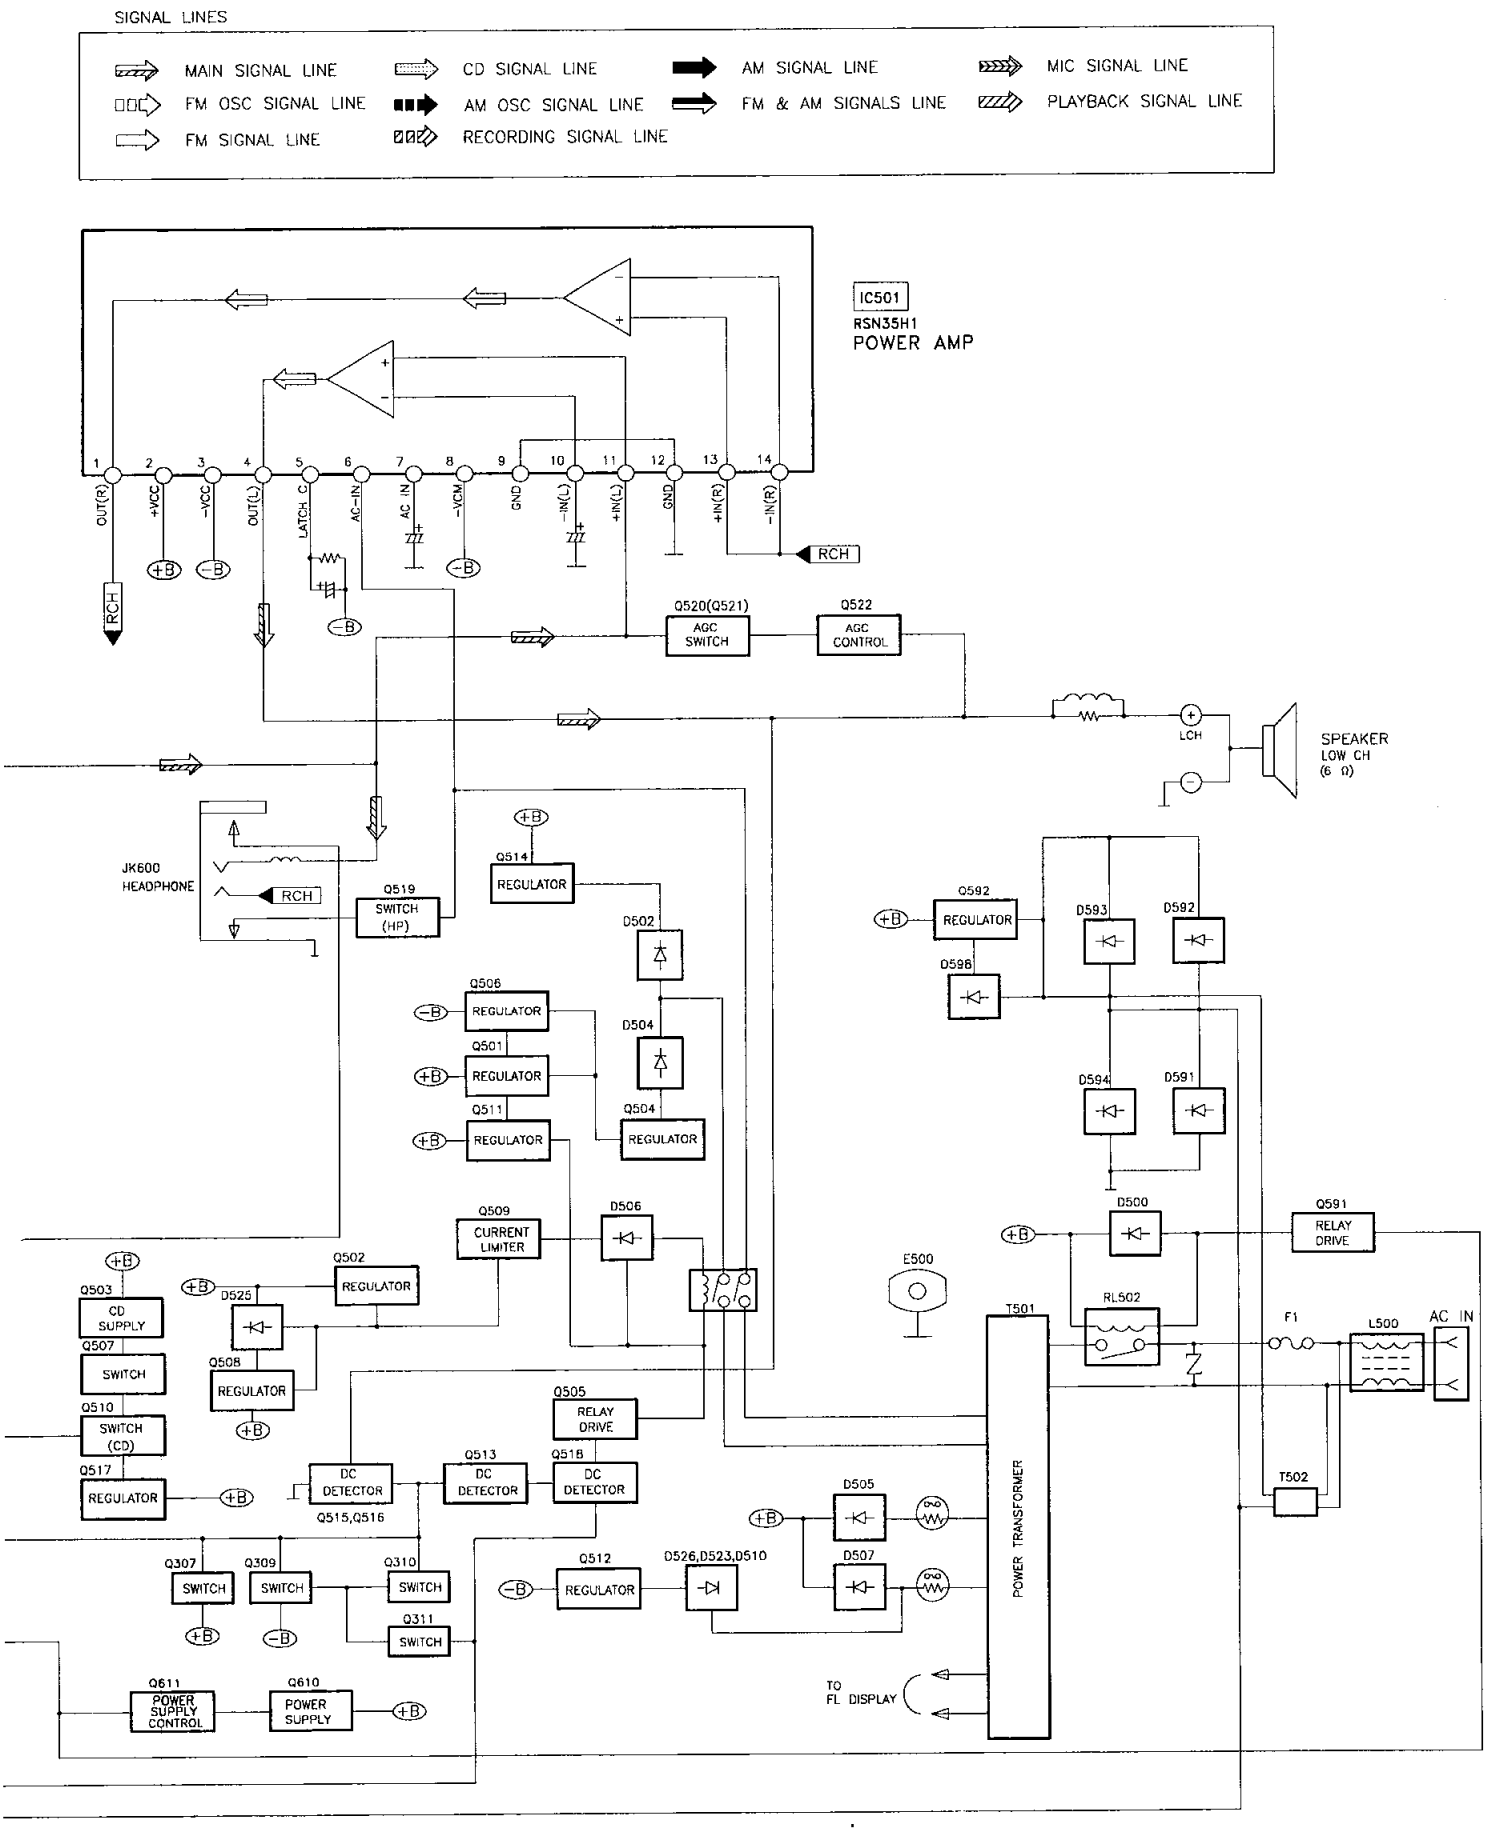
SIGNAL LINES
MAIN SIGNAL LINE
CD SIGNAL LINE
AM SIGNAL LINE
MIC SIGNAL LINE
FM OSC SIGNAL LINE
AM OSC SIGNAL LINE
FM & AM SIGNALS LINE
PLAYBACK SIGNAL LINE
FM SIGNAL LINE
RECORDING SIGNAL LINE
IC501
RSN35H1
POWER AMP
OUT(R)
+VCC
-VCC
OUT(L)
LATCH C
AC-IN
AC IN
-VCM
GND
-IN(L)
+IN(L)
GND
+IN(R)
-IN(R)
RCH
Q520(Q521)
AGC SWITCH
Q522
AGC CONTROL
LCH
SPEAKER
LOW CH
(6 Ω)
JK600
HEADPHONE
Q519
SWITCH (HP)
Q514
REGULATOR
D502
Q506
D504
Q501
Q511
Q504
Q509
CURRENT LIMITER
D506
Q592
D593
D592
D598
D594
D591
D500
Q591
RELAY DRIVE
E500
RL502
T501
F1
L500
AC IN
T502
Q502
D525
Q503
CD SUPPLY
Q507
SWITCH
Q508
Q510
SWITCH (CD)
Q517
Q505
RELAY DRIVE
Q513
Q518
DC DETECTOR
Q515,Q516
D505
D507
Q512
D526,D523,D510
Q307
Q309
Q310
Q311
Q611
POWER SUPPLY CONTROL
Q610
POWER SUPPLY
TO FL DISPLAY
POWER TRANSFORMER

■ Wiring Connection Diagram

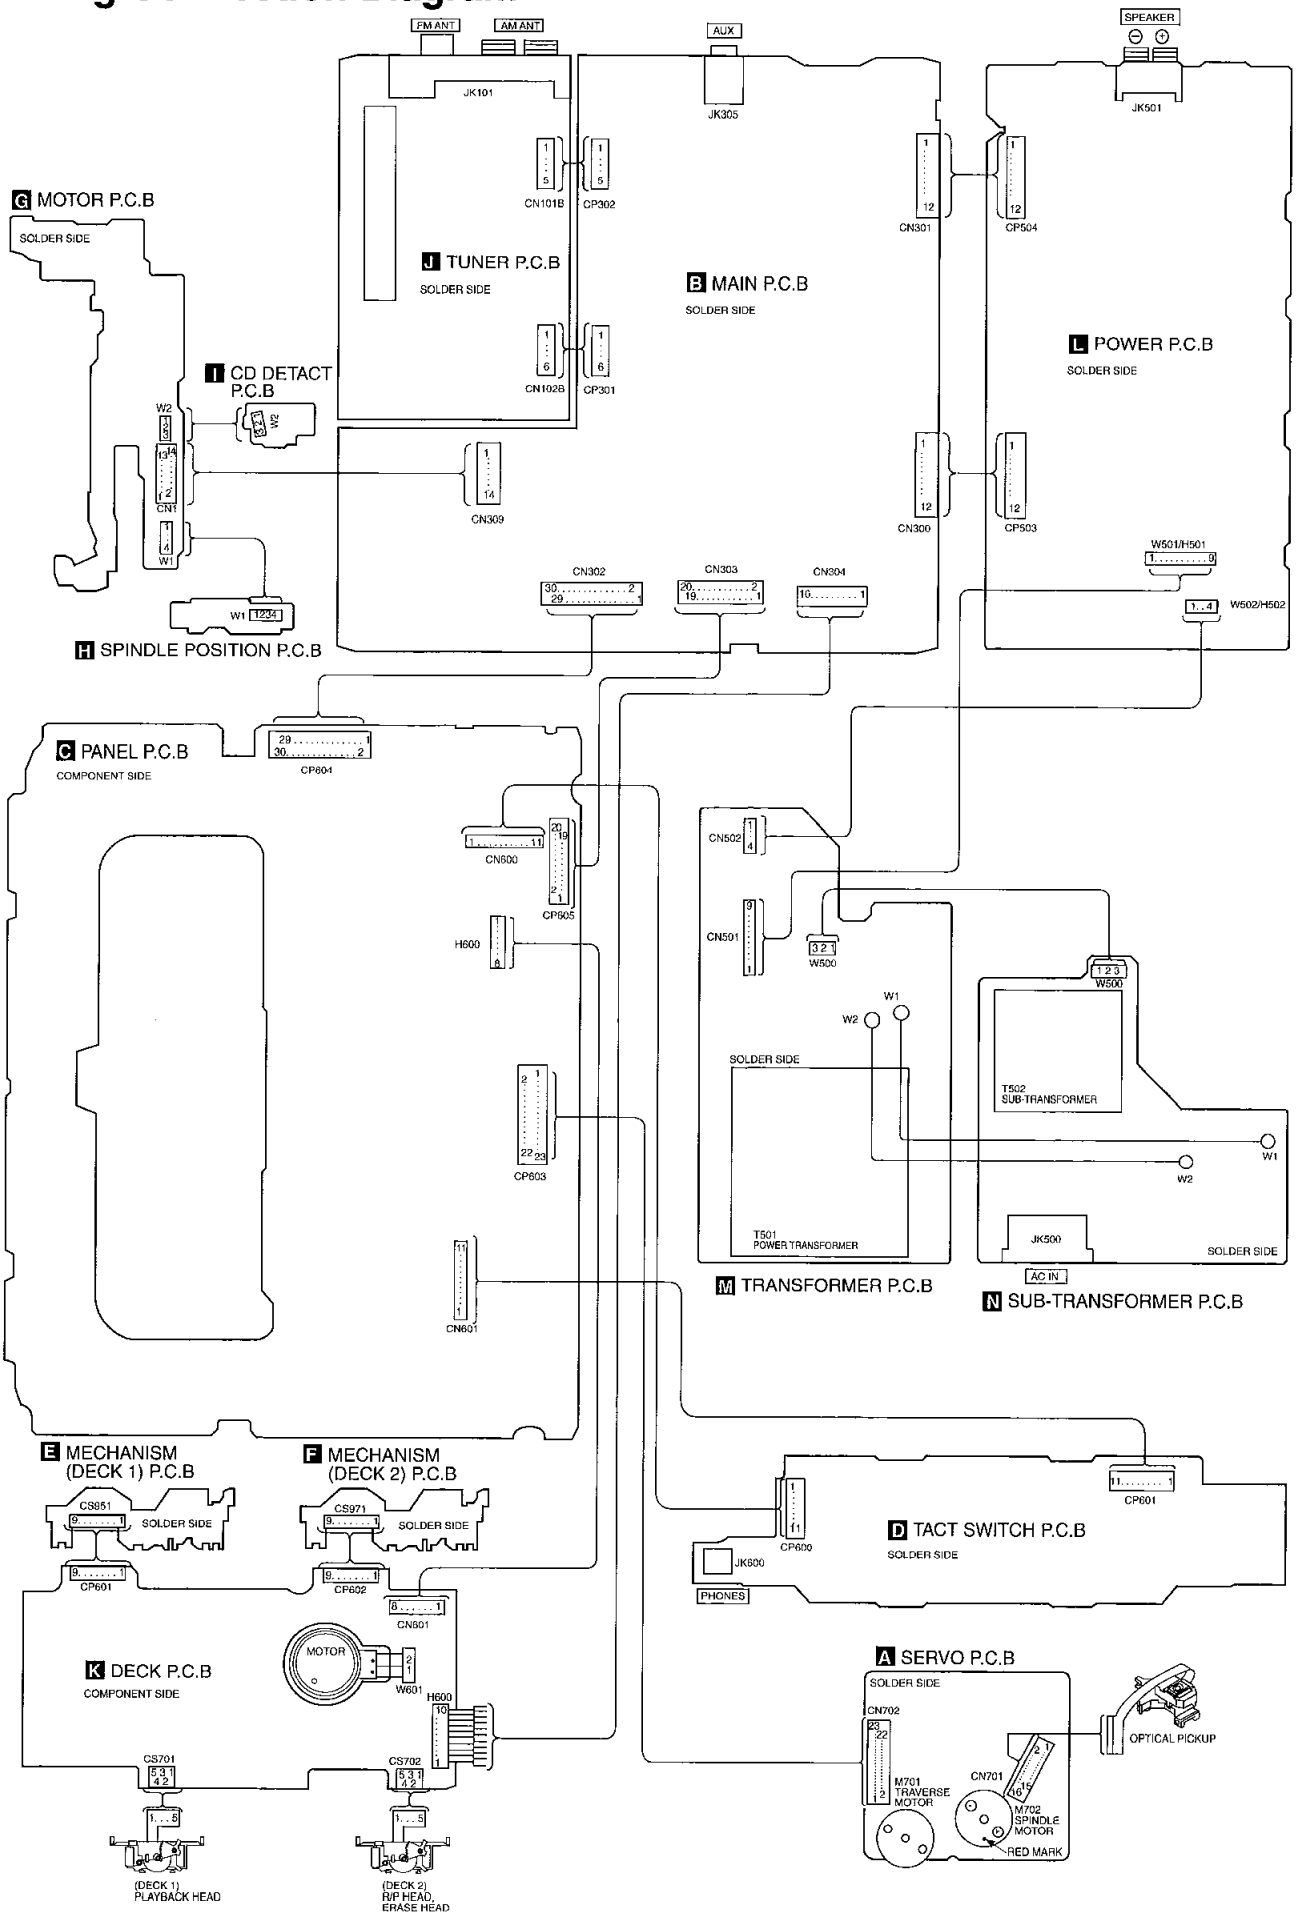

■ Troubleshooting Guide

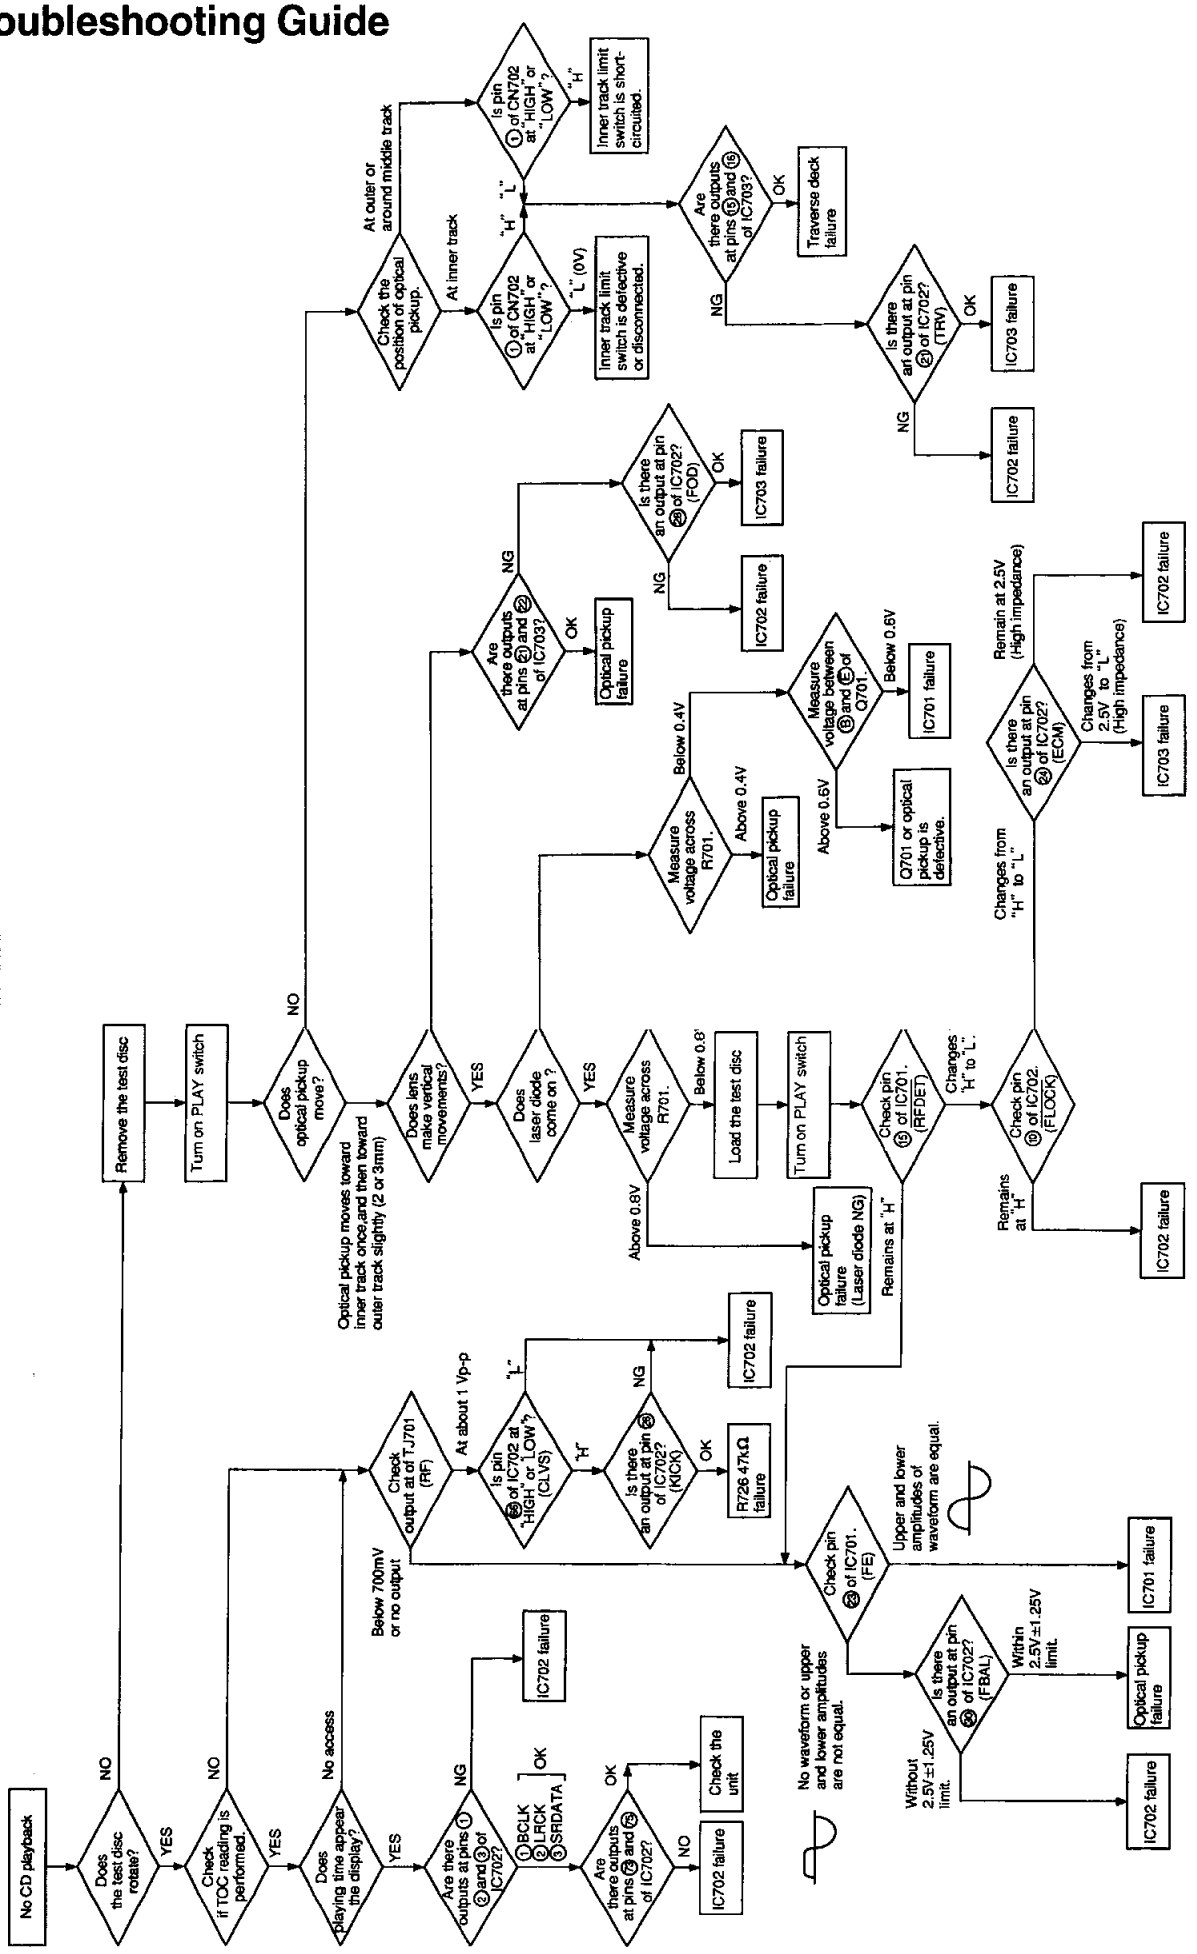
No CD playback
Does the test disc rotate?
NO
YES
Check if TOC reading is performed.
NO
YES
Does Playing time appear the display?
No access
YES
Are there outputs at pins ① and ③ of IC702?
NG
①BCLK ②LRCK ③SRDATA
OK
IC702 failure
Are there outputs at pins ⑦ and ⑧ of IC702?
OK
NO
Check the unit
IC702 failure
Remove the test disc
Turn on PLAY switch
Does optical pickup move?
NO
Optical pickup moves toward inner track once,and then toward outer track slightly (2 or 3mm)
Check the position of optical pickup.
At outer or around middle track
Is pin ① of CN702 at "HIGH" or "LOW"?
"H"
Inner track limit switch is short-circuited.
At inner track
Is pin ① of CN702 at "HIGH" or "LOW"?
"L" (0V)
Inner track limit switch is detective or disconnected.
"H" "L"
Are there outputs at pins ⑮ and ⑯ of IC703?
OK
Traverse deck failure
NG
Is there an output at pin ㉑ of IC702? (TRV)
OK
IC703 failure
NG
IC702 failure
Does lens make vertical movements?
YES
Are there outputs at pins ㉑ and ㉒ of IC703?
NG
Is there an output at pin ㉙ of IC702? (FOD)
OK
IC703 failure
NG
IC702 failure
OK
Optical pickup failure
Does laser diode come on ?
YES
Measure voltage across R701.
Below 0.4V
Measure voltage between ⑤ and ⑥ of Q701.
Below 0.6V
IC701 failure
Above 0.6V
Q701 or optical pickup is defective.
Above 0.4V
Optical pickup failure
Below 0.8V
Load the test disc
Turn on PLAY switch
Check pin ⑮ of IC701. (RFDET)
Changes "H" to "L"
Check pin ⑲ of IC702. (FLOCK)
Changes from "H" to "L"
Is there an output at pin ㉘ of IC702? (ECM)
Remain at 2.5V (High impedance)
IC702 failure
Changes from 2.5V to "L" (High impedance)
IC703 failure
Remains at "H"
IC702 failure
Above 0.8V
Optical pickup failure (Laser diode NG)
Remains at "H"
Check output at ot TJ701 (RF)
At about 1 Vp-p
Below 700mV or no output
Is pin ㉕ of IC702 at "HIGH" or "LOW"? (CLVS)
"H"
"L"
Is there an output at pin ㉖ of IC702? (KICK)
NG
IC702 failure
OK
R726 47kΩ failure
Check pin ㉔ of IC701. (FE)
Upper and lower amplitudes of waveform are equal.
No waveform or upper and lower amplitudes are not equal.
Is there an output at pin ㉗ of IC702? (FBAL)
Within 2.5V±1.25V limit.
Optical pickup failure
Without 2.5V±1.25V limit.
IC702 failure
IC701 failure

■ Mechanism Parts Location (RAA3408)

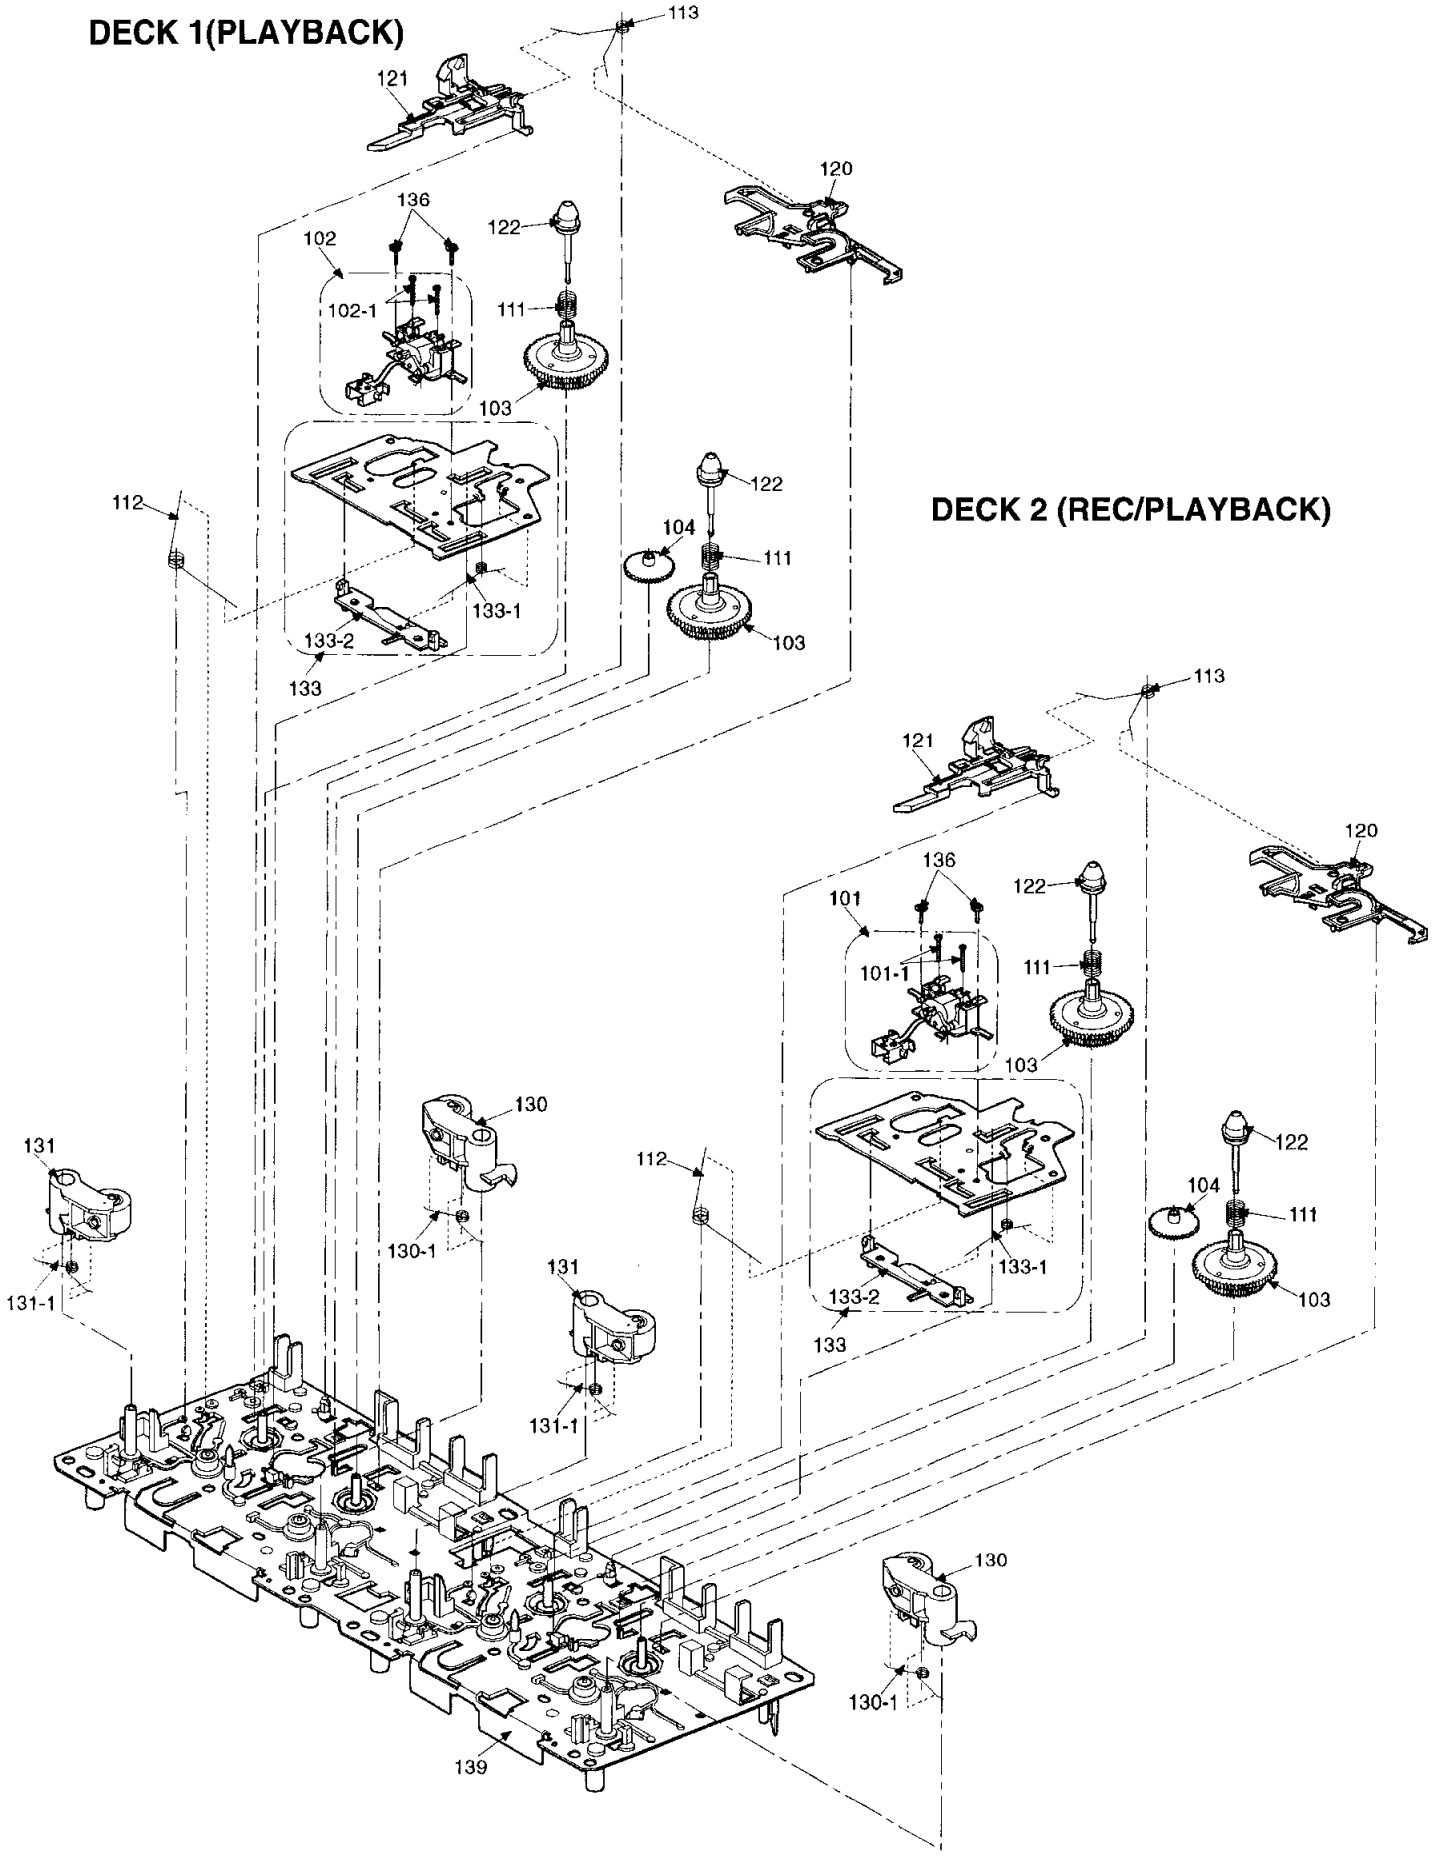

SPECIFICATION

Playback torque	20 ~ 60 g•cm
Fast forward torque	60 ~ 160 g•cm
Rewind torque	60 ~ 160 g•cm

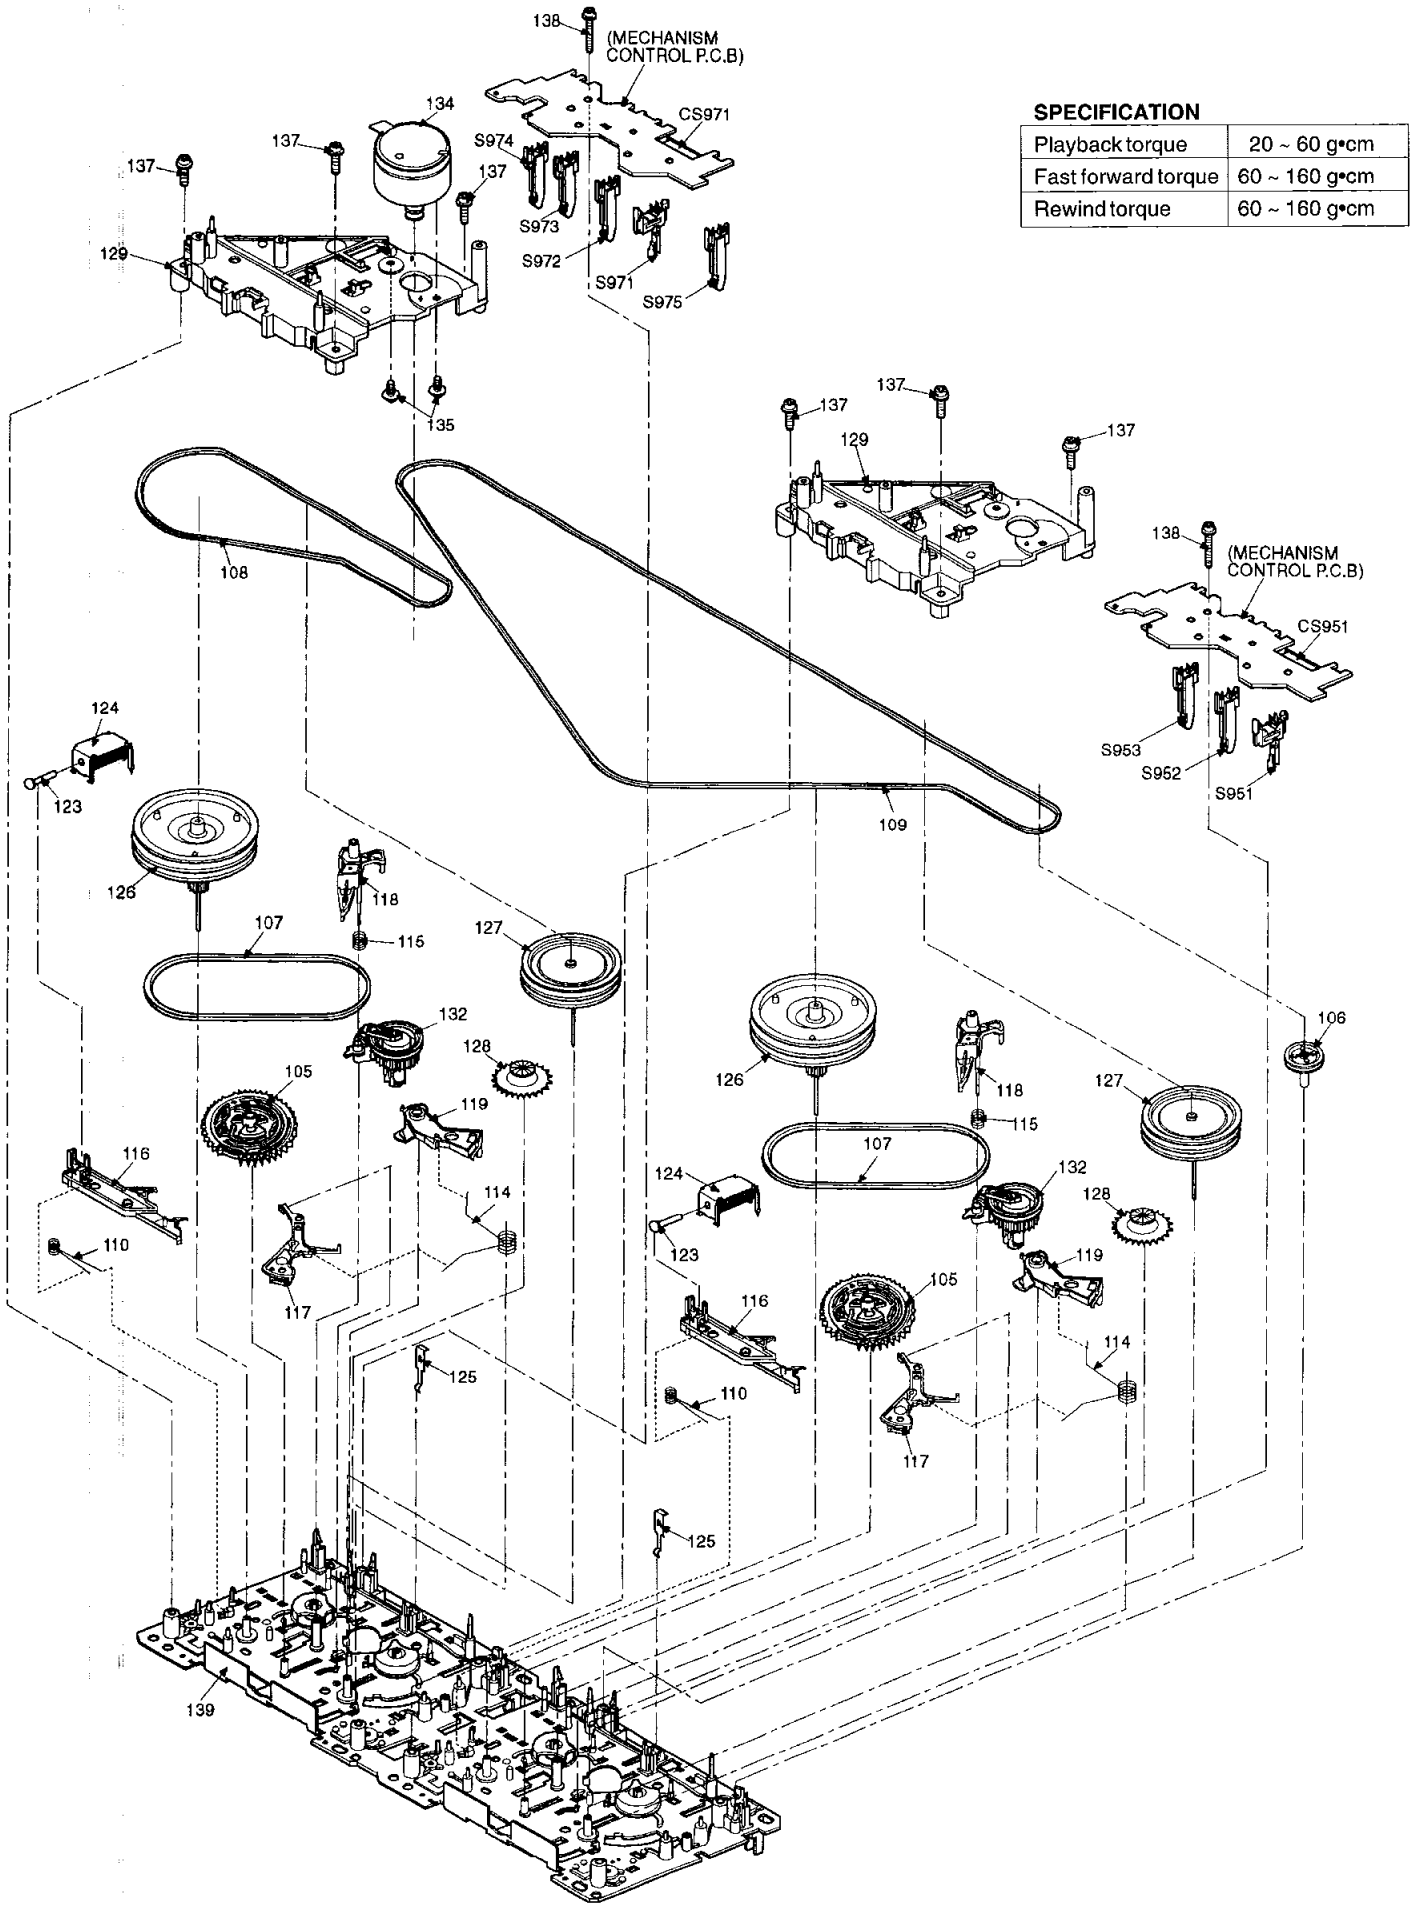

■ Mechanism Parts List

Notes : [M] in Remarks column indicates parts supplied by **MESA**.

Ref No.	Part No.	Part Name & Description	Remarks
		CASSETTE DECK	
101	RED0050	R/P HEAD BLOCK ASS'Y	[M]
101-1	RHE5152ZB	SCREW	[M]
102	RED0051	P/B HEAD BLOCK ASS'Y	[M]
102-1	RHE5152ZB	SCREW	[M]
103	RDG0300	REEL TABLE BASE	[M]
104	RDG0301	GEAR	[M]
105	RDK0026	GEAR	[M]
106	RDR0029	RELAY PULLY	[M]
107	RDV0033-1	BELT	[M]
108	RDV0034	BELT	[M]
109	RDV0057	BELT	[M]
110	RMB0312	SPRING	[M]
111	RMB0400	REEL TABLE SPRING	[M]
112	RMB0403	SPRING	[M]
113	RMB0404	SPRING	[M]
114	RMB0406	SPRING	[M]
115	RMB0408	SPRING	[M]
116	RML0370	LEVER	[M]
117	RML0371	LEVER	[M]
118	RML0372	ARM	[M]
119	RML0374	LEVER	[M]
120	RMM0131	LEVER	[M]
121	RMM0133	LEVER	[M]
122	RMQ0519	REEL TABLE HEAD	[M]
123	RMS0398-1	SHAFT	[M]
124	RSJ0003	PLUNGER	[M]
125	RUS609ZC	SPRING	[M]
126	RXF0049	FLYWHEEL ASS'Y	[M]
127	RXF0050	FLYWHEEL ASS'Y	[M]
128	RXG0040	GEAR	[M]
129	RMK0283	PLATE	[M]
130	RXL0124	PINCH ROLLER ASS'Y	[M]
130-1	RMB0401	SPRING	[M]
131	RXL0125	PINCH ROLLER ASS'Y	[M]
131-1	RMB0402	SPRING	[M]
132	RXL0126	GEAR	[M]
133	RXQ0412	ROD	[M]
133-1	RMB0405	SPRING	[M]
133-2	RMM0132	ROD	[M]
134	REM0070	MOTOR ASS'Y	[M]
135	RHD26022	SCREW	[M]
136	XTW2+5L	SCREW	[M]
137	XTW26+10S	SCREW	[M]
138	XYC2+JF17	SCREW	[M]
139	RFKJXED70-K	CHASSIS ASS'Y	[M]

■ Loading Mechanism Parts List

Notes : [M] in Remarks column indicates parts supplied by **MESA**.

Ref No.	Part No.	Part Name & Description	Remarks
		TRAVERSE DECK	
301	RML0517	TIMING LEVER	[M]
302	RML0516	PLUNGER LEVER	[M]
303	RMB0551	UPPER SPINDLE SPRING	[M]
304	RMQ0744	LOWER HOOK	[M]
305	RDV0056	BELT	[M]
306	RML0525	FRONT LOCK LEVER	[M]
307	RML0526	DISC LEVER	[M]
308	RDG0424	DRIVE GEAR	[M]
309	RDG0425	CHANGE GEAR	[M]
310	RDG0427	TRV CAM GEAR	[M]
311	RDG0428	TRV RELAY GEAR	[M]
312	RDG0426	UP/DOWN GEAR	[M]
313	RDG0429	PULLEY GEAR	[M]
314	RMB0549	CHANGE GEAR SPRING	[M]
315	RMQ0748	PITCH PLATE	[M]
316	RMB0553	PUSH SPRING	[M]
317	RML0530	ASSIST LEVER	[M]
318	RML0518	CONNECTION LEVER	[M]
319	RMM0201	SLIDE PLATE 1	[M]
320	RME0258	REAR LOCK SPRING	[M]
321	RML0521	REAR LOCK	[M]
322	RME0257	TRAY LOCK LEVER SPRI	[M]
323	RML0520	TRAY LOCK	[M]
324	RMM0202	SLIDE PLATE 2	[M]
325	XTB3+10J	SCREW	[M]
326	RMR0334	FIXED PLATE	[M]
327	RMR0624-W2	CLAMPER	[M]
328	RMB0561	ASSIST LEVER SPRING	[M]
329	RMR1121-K	MECHA COVER	[M]
330	RMA1110-2	TRAY ANGLE	[M]
331	RMR1122-H1	TRAY BASE	[M]
332	RMM0204	CARRIER	[M]
333	RMM0203	DRIVE RACK	[M]
334	RDG0432	SPEED UP GEAR	[M]
335	RML0524	SLIDE LOCK	[M]
336	RML0523	CARRIER LOCK	[M]
337	RME0260-1	SLIDE LOCK SPRING	[M]
338	RMR1123-H	TRAY	[M]
339	RXQ0595	MOTOR SUB A"Y	[M]
341	RSJ0003	SOLENOLD ASS'Y	[M]
343	RMA1106	UPPER PLATE	[M]
344	RML0519	8CD LEVER	[M]
345	RFKNAAK27GCS	MECHA BASE ASS'Y	[M]
346	RML0522	TURNING STOPPER	[M]
347	RMQ0745	LOWER SPINDLE	[M]
348	RMQ0746	UP/DOWN BASE	[M]
349	RMB0550	LOWER SPINDLE SPRING	[M]
350	RMQ0747	UPPER HOOK	[M]
351	RME0263	CLICK SPRING	[M]
352	RMQ0743	SPINDLE SHAFT	[M]
353	RMB0552	CUSHION SPRING	[M]
354	RDG0430	RELAY GEAR 'A'	[M]
355	RDG0431	RELAY GEAR 'B'	[M]
356	RME0262	DISK LEVER SP.	[M]
357	RMA1105	SUPPORT PLATE	[M]
358	RAE0152Z-M	TRV	[M]
358-1	SHGD113-1	FLOATING CUSHION	[M]
358-2	SNSD38	TRV MOTOR ASS'Y SCRE	[M]
359	RME0142	FLOATING SPRING A	[M]
360	RME0109	FLOATING SPRING B	[M]
361	RMR1124-K1	TRV CHASSIS	[M]
362	RMS0632	TRV PIN	[M]
363	XTN2+6G	PCB SCREW	[M]
369	RMX0141	PUSH SPACER	[M]
370	RMQ0749	UPPER SPINDLE	[M]
371	RHM0001	MAGNET	[M]
372	RMX0140	DISC SPACER	[M]
373	RME0261	FRONT LOCK SPRING	[M]
374	RMQ0742	SPINDLE BASE	[M]

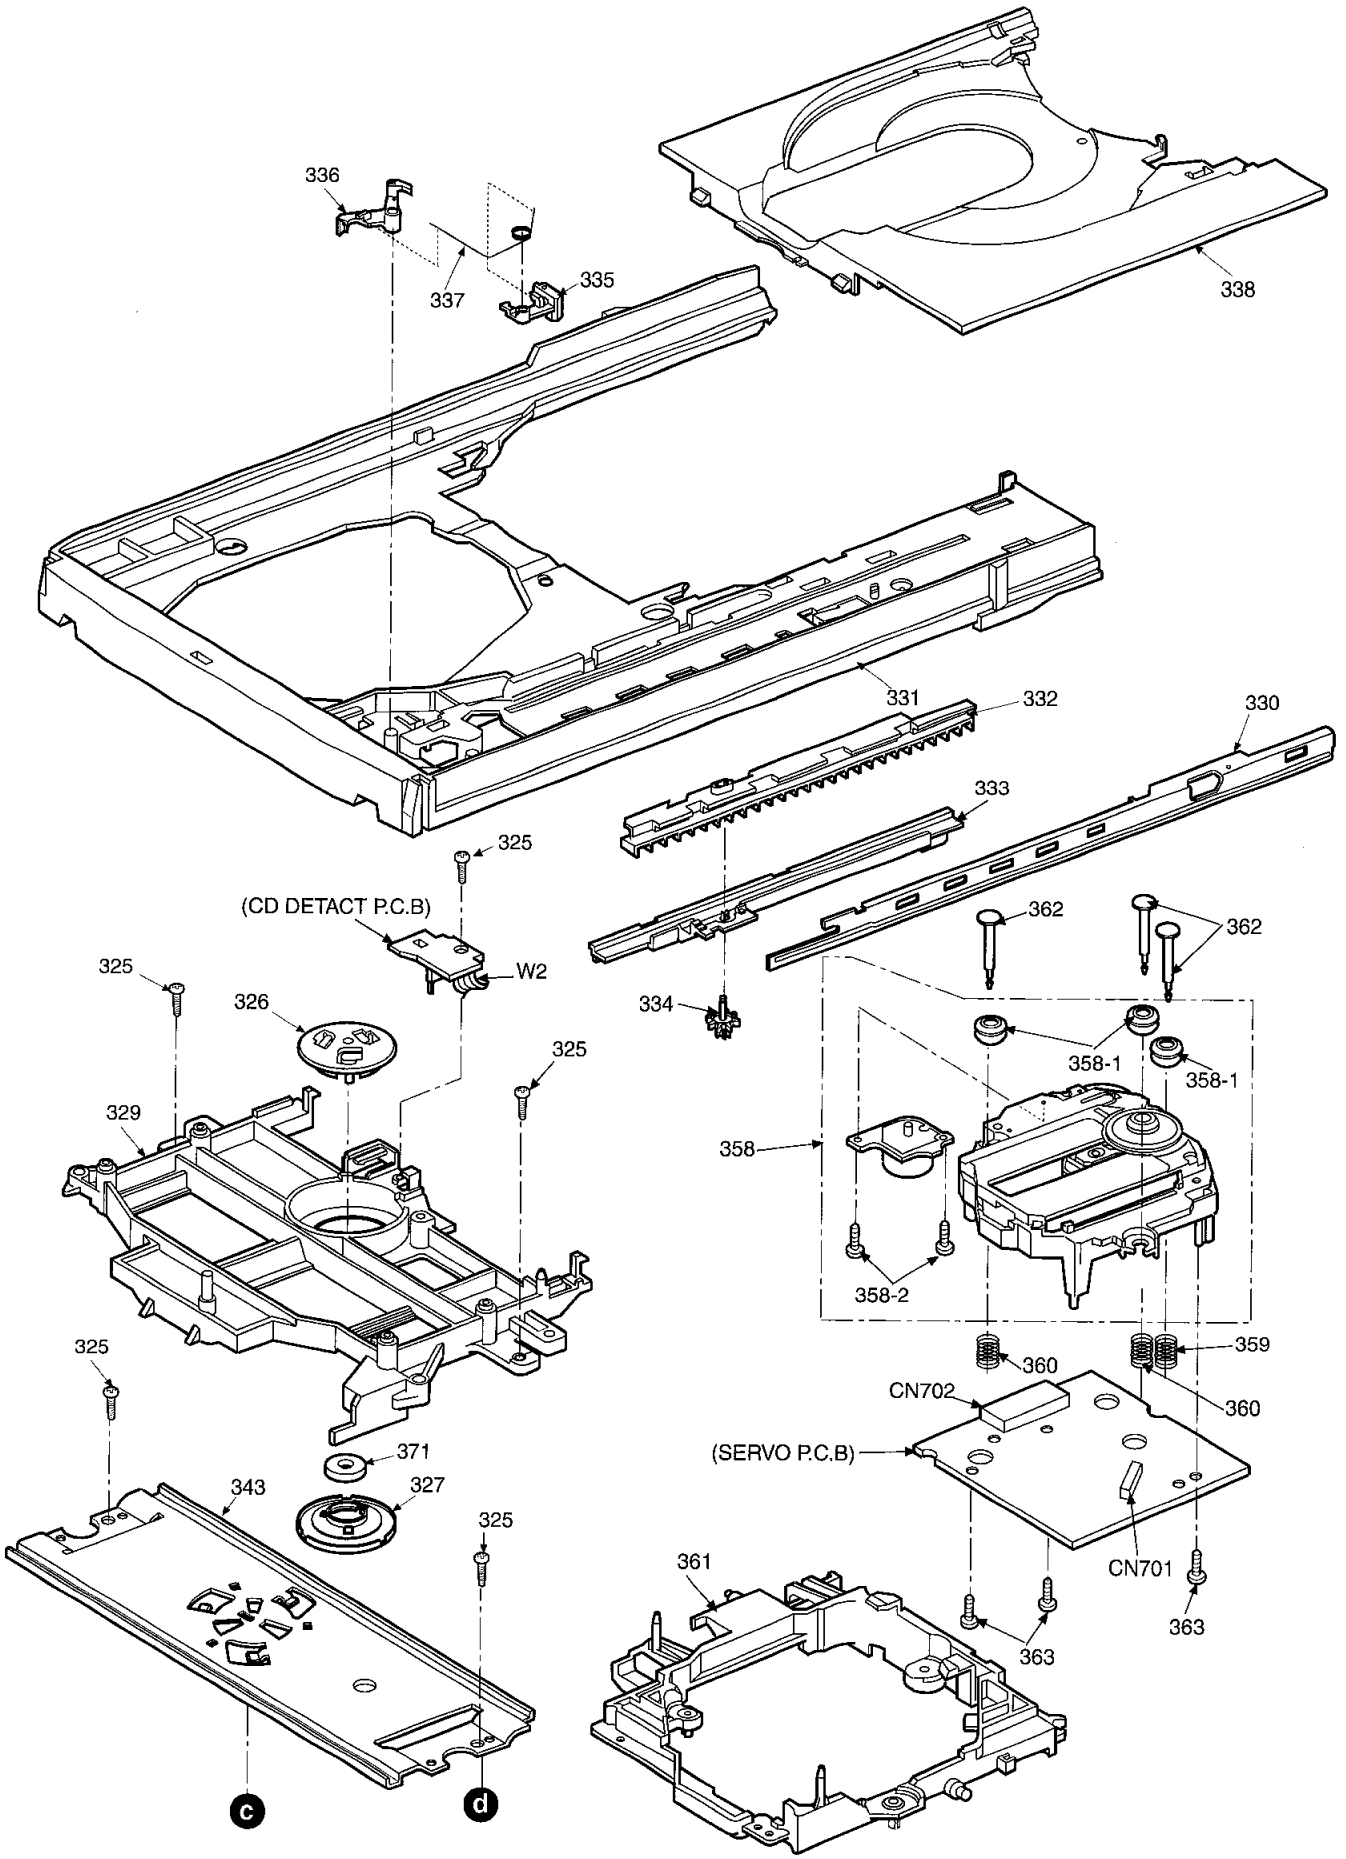
336
337
335
338
331
332
330
333
325
(CD DETACT P.C.B)
W2
362
362
325
326
325
334
358-1
358-1
329
358
358-2
325
360
359
CN702
360
(SERVO P.C.B)
371
343
327
325
CN701
361
363
363
c
d

■ Cabinet Parts Location

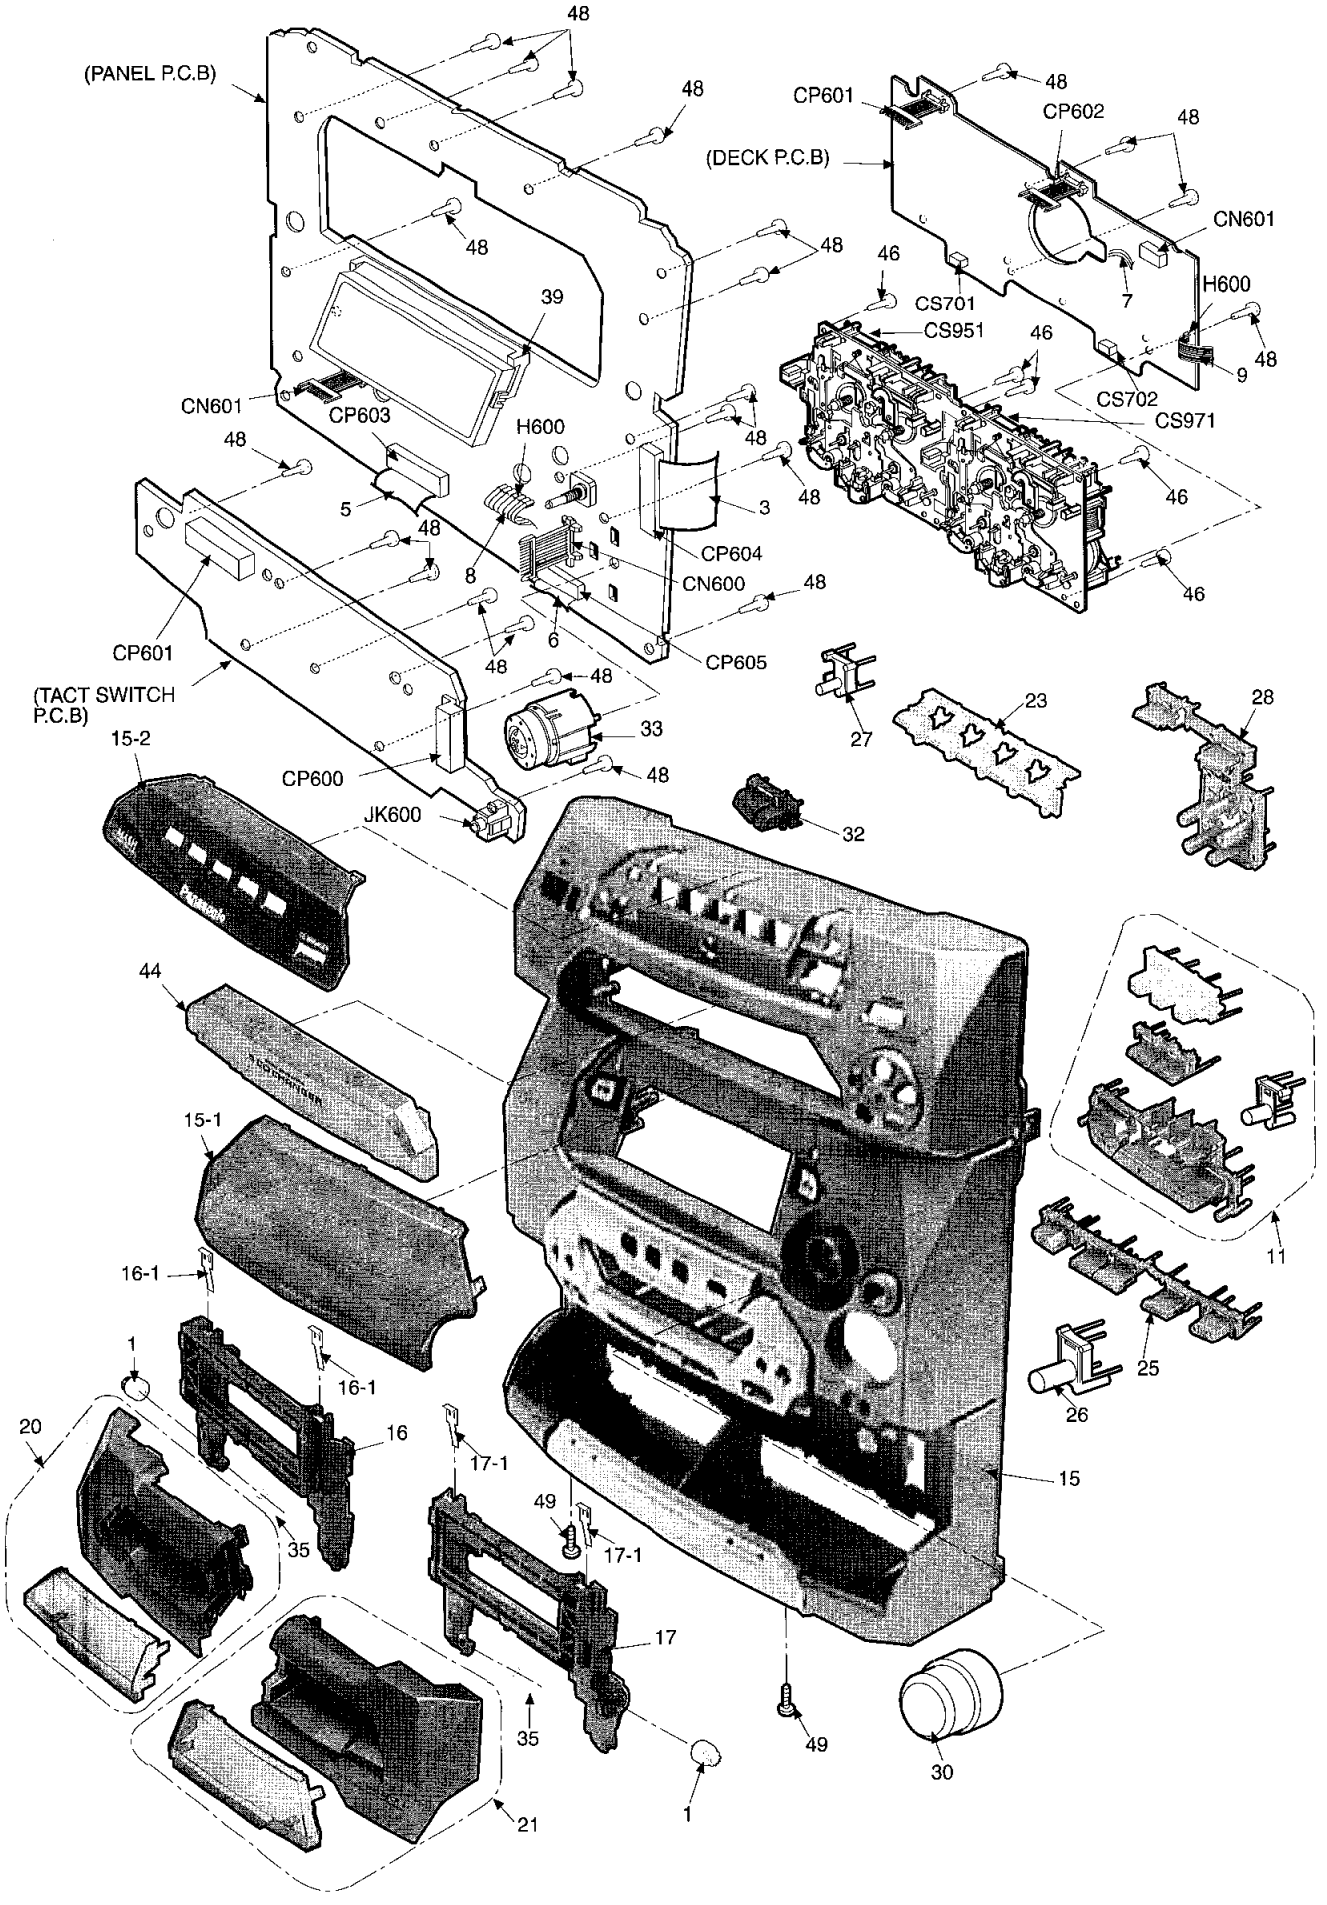

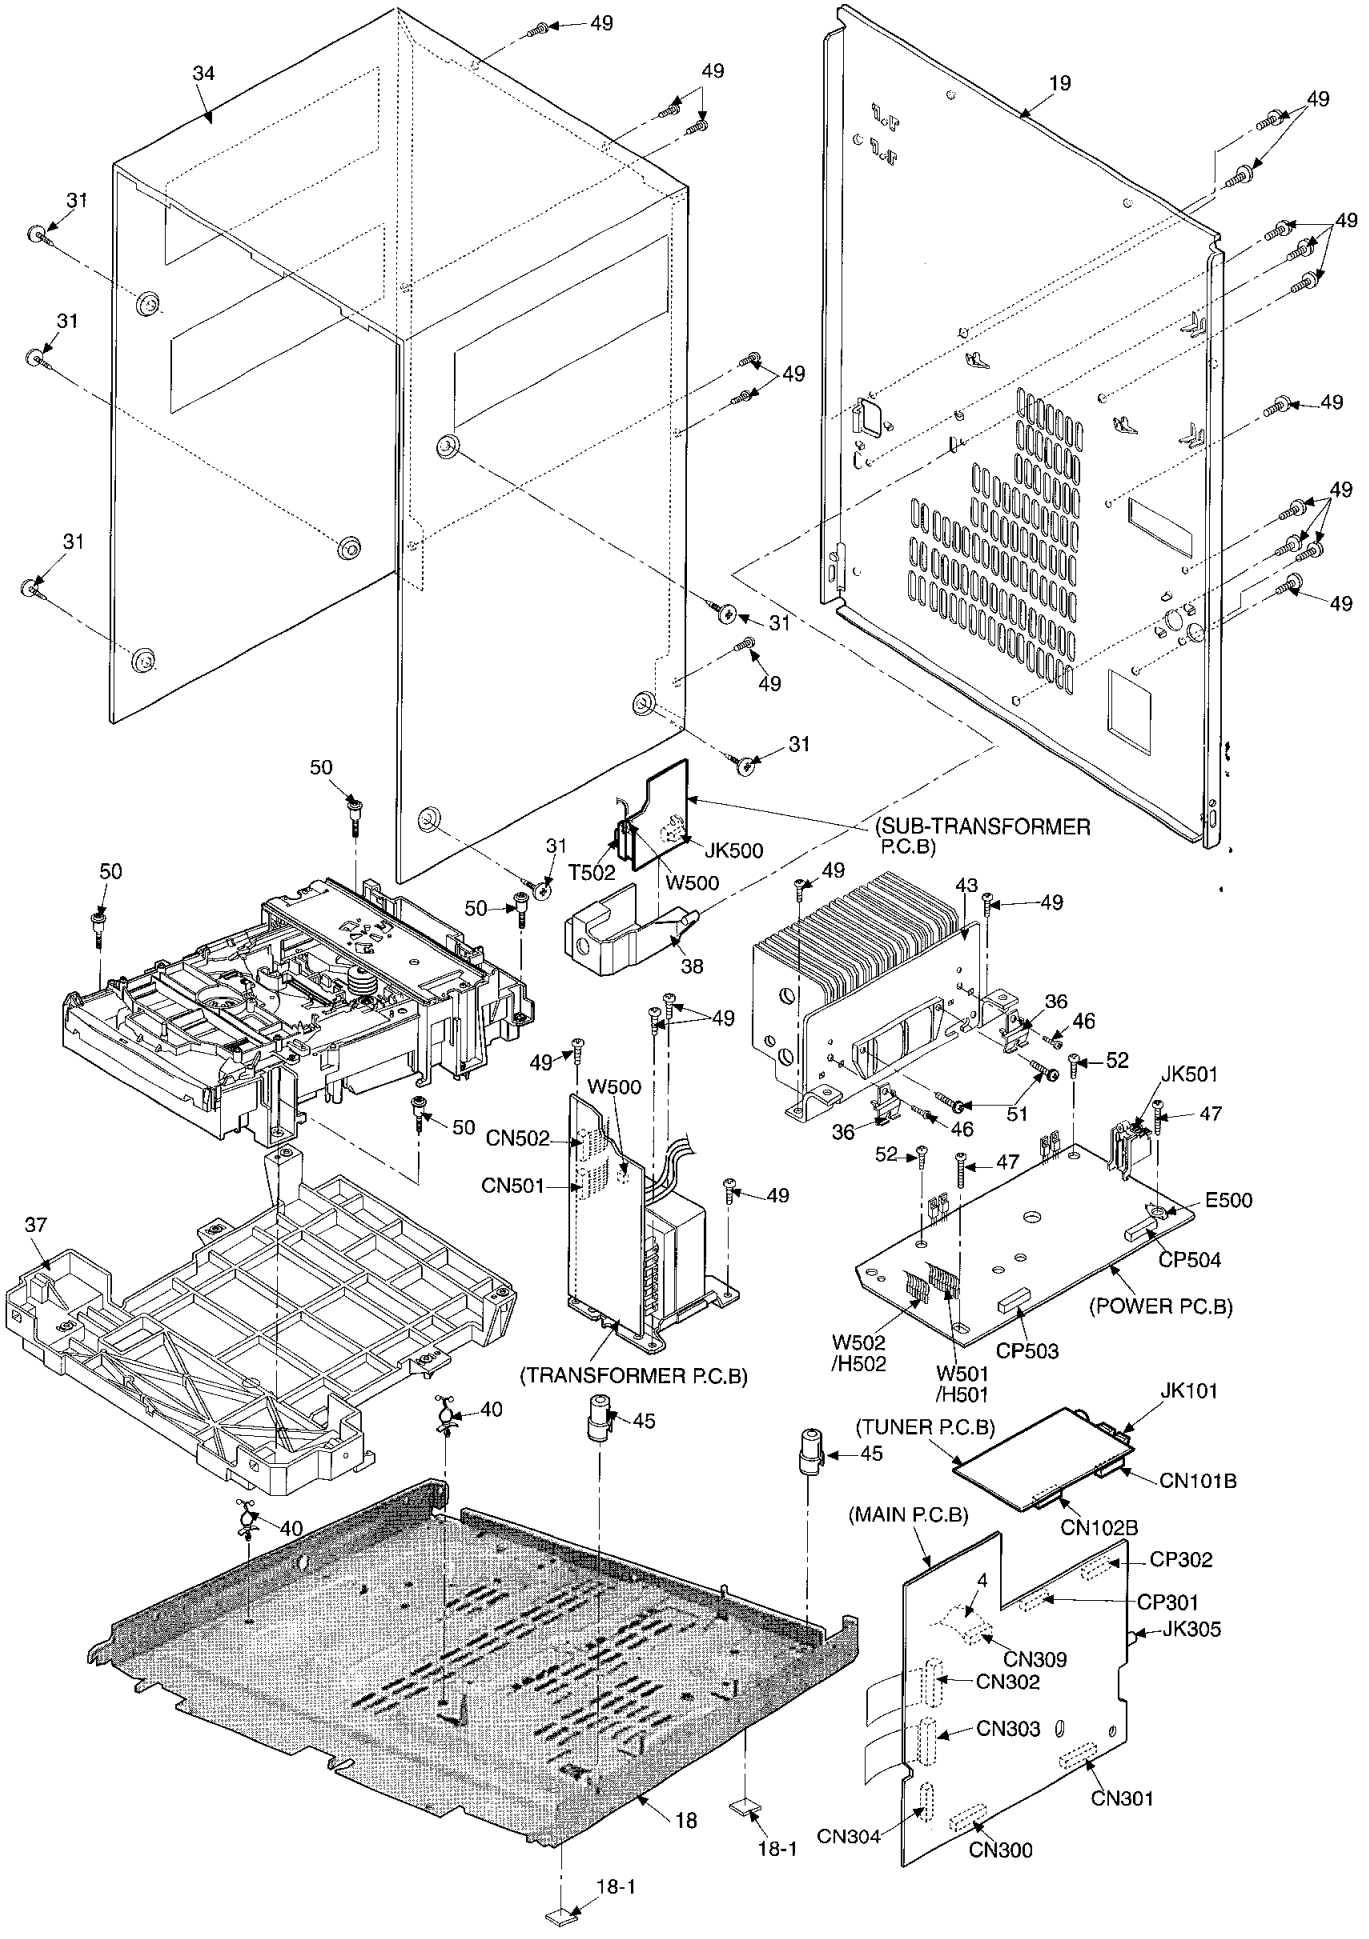
49
34
49
19
49
31
49
31
49
49
31
49
49
49
31
49
31
50
(SUB-TRANSFORMER P.C.B)
JK500
T502
W500
50
50
38
49
43
49
49
36
46
52
JK501
47
51
36
46
52
47
E500
CP504
(POWER PC.B)
W502 /H502
CP503
W501 /H501
49
W500
CN502
CN501
49
37
(TRANSFORMER P.C.B)
40
45
45
JK101
(TUNER P.C.B)
CN101B
CN102B
40
(MAIN P.C.B)
CP302
4
CP301
JK305
CN309
CN302
CN303
CN301
CN304
CN300
18
18-1
18-1

■ Replacement Parts List

Notes: * Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety.
Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low noise (resistors), etc are used.
When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list .
* The parenthesized indications in the Remarks columns specify the areas or colour. (Refer to the cover page for area or colour)
Parts without these indications can be used for all areas.
* [M] indicates in the Remarks columns indicates parts supplied by **MESA.**
* [D] indicates in the Remarks columns indicates parts supplied by **MAVD.**
* Warning : This product uses a laser diode. Refer to caution statements on page 3.
ACHTUNG : • Die Lasereinheit nicht zerlegen.
• Die Lasereinheit darf nur gegen eine vom Hertsteller spezifizierte Einheit ausgetauscht werden.

Ref No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
1	RDG0129-1	DAMPER GEAR	[M]
3	REEX0054	26P FFC WIRE	[M]
4	REEX0055	14P FFC WIRE	[M]
5	REEX0056	23P WIRE	[M]
6	REEX0065	20P FFC WIRE (PAN	[M]
7	RWJ0102065CK	WIRE	[M]
8	RWJ0208155RX	WIRE 8P	[M]
9	RWJ8010160RX	10P WIRE	[M]
11	RYQX0024-S	CONTROL BUTT. UNIT	[M]
15	RFKGAAK17EBK	FRONT PANEL ASS'Y	[D]
15-1	RKWX0129-Q	FL WINDOW	[M]
15-2	RGKX0035-K	CD ORNAMENT	[M]
16	RFKLACH330AK	C. HOLDER ASS'Y(L)	[M]
16-1	RUS757ZAA	CASS HALF SPRING	[M]
17	RFKLACH330BK	C. HOLDER ASS'Y(R)	[M]
17-1	RUS757ZAA	CASS HALF SPRING	[M]
18	RFKJAAK17PCK	BOTT. CHASSIS ASS'Y	[M]
18-1	RKA0059-K	LEG RUBBER	[M]
19	RGRX0013J-A	REAR PANEL	[D]EG E
19	RGRX0013J-B	REAR PANEL	[D]EB
20	RYFX0073-K	CASS LID UNIT (L)	[M]
21	RYFX0074-K	CASS LID UNIT (R)	[M]
23	RGUX0303-Q	DISC BUTTONS	[M]
25	RGUX0312-1S	DECK BUTTON	[M]
26	RGUX0304-Q	AI EQ BUTTON	[M]
27	RGUX0305-Q	TIMER BUTTON	[M]
28	RGUX0313-1S	EJECT BUTTON	[M]
30	RGWX0044-1S	VOLUME KNOB	[M]
31	RHD03001-K	SCREW (TRANS)	[M]
32	RGLX0017-Q	STAND BY LIGHT	[M]
33	RYQX0018-1S	JOY/JOG UNIT	[M]
34	RKMX0046-K	TOP CABINET (BENT)	[M]
35	RMB0446	CASS OPEN SPRING	[M]
36	RMC0158-S	TRANSISTOR HOLDER	[M]
37	RMKX0031	CD CHASSIS	[M]
38	RMNX0023	SUB TRANS HOLDER	[M]
39	RMNX0024	FL HOLDER	[M]
40	RMRX0026-W	WIRE CLAMPER	[M]

Ref No.	Part No.	Part Name & Description	Remarks
43	RXX0193	HEAT SINK	[M]
44	RGKX0040-1S	CD LID	[M]
45	SHE187-4	SPACER (TRANS)	[M]
46	XTB3+10JFZ	SCREW	[M]
47	XTB3+20J	SCREW	[M]
48	XTBS26+10J	SCREW	[M]
49	XTBS3+8JFZ1	SCREW	[M]
50	XTW3+12T	SCREW	[M]
51	XTW3+15T	SCREW	[M]
52	XTB3+10J	SCREW	[M]
		INTEGRATED CIRCUITS	
IC1	TA7291P	IC, DRIVE	[M]
IC101	LA1833MN-TLM	IC, IF & MPX	[M]
IC102	LC72131MDTRM	IC, PLL	[M]
IC302	M5218AP	IC, BUFFER AMP	[M]
IC303	M62433AFP	IC, AUDIO	[M]
IC501	RSN35H1	IC, HIC	[M]⚠
IC600	M38198MCA824	IC, MICRO-P	[M]
IC601	AN7348STA-E1	IC, TAPE PB	[M]
IC601	BU2090AF-E2	IC, I/O EXPANDER	[M]
IC602	BU2090AF-E2	IC, I/O EXPANDER	[M]
IC603	BA3835F-E2	IC, SPECTRUM	[M]
IC603	BA4558FE2	IC,	[M]
IC604	BA7755A	IC, SW	[M]
IC701	AN8837SBE1	IC, HEAD AMP	[M]
IC702	MN662746RPK1	IC, LSI	[M]
IC703	AN8780NSBE2	IC	[M]
IC951	0N2180RLC	IC, PHOTO INTERUPTOR	[M]
IC971	0N2180RLC	IC, PHOTO INTERUPTOR	[M]
		TRANSISTORS	
Q1	RVTDTC143EST	TRANSISTOR	[M]
Q101	2SC2787LTA	TRANSISTOR	[M]
Q102	2SC2787LTA	TRANSISTOR	[M]
Q106	RVTDTA114EST	TRANSISTOR	[M]
Q200	2SD2144STA	TRANSISTOR	[M]
Q201	KTC3199GRTA	TRANSISTOR	[M]

Ref No.	Part No.	Part Name & Description	Remarks
Q304	2SD1450STA	TRANSISTOR	[M]
Q305	KRC109MTA	TRANSISTOR	[M]
Q306	KRA102MTA	TRANSISTOR	[M]
Q307	KRC111MTA	TRANSISTOR	[M]
Q308	KRA102MTA	TRANSISTOR	[M]
Q309	2SC2785FTA	TRANSISTOR	[M]
Q310	2SC2785FTA	TRANSISTOR	[M]
Q311	2SC2785FTA	TRANSISTOR	[M]
Q312	KTC3199GRTA	TRANSISTOR	[M]
Q313	2SD2144STA	TRANSISTOR	[M]
Q314	KTC3199GRTA	TRANSISTOR	[M]
Q315	2SD2144STA	TRANSISTOR	[M]
Q316	2SD1450STA	TRANSISTOR	[M]
Q350	KSB564ACYGTA	TRANSISTOR	[M]
Q351	RVTDTC114EST	TRANSISTOR	[M]
Q400	2SD2144STA	TRANSISTOR	[M]
Q401	KTC3199GRTA	TRANSISTOR	[M]
Q501	2SD2395E	TRANSISTOR	[M]⚠
Q502	2SB1566E	TRANSISTOR	[M]⚠
Q503	KTA12710YTA	TRANSISTOR	[M]
Q504	2SB1566E	TRANSISTOR	[M]⚠
Q505	2SD2144STA	TRANSISTOR	[M]
Q506	2SA933SSTA	TRANSISTOR	[M]⚠
Q507	KTC3199GRTA	TRANSISTOR	[M]
Q508	KTC3199GRTA	TRANSISTOR	[M]⚠
Q509	KRA110MTA	TRANSISTOR	[M]
Q510	KRA110MTA	TRANSISTOR	[M]
Q511	2SC1740SSTA	TRANSISTOR	[M]⚠
Q512	2SB1238QRTV2	TRANSISTOR	[M]⚠
Q513	2SC2785FTA	TRANSISTOR	[M]
Q514	2SD2395E	TRANSISTOR	[M]⚠
Q515	2SC2785FTA	TRANSISTOR	[M]
Q516	2SC2785FTA	TRANSISTOR	[M]
Q517	KTC32030YTA	TRANSISTOR	[M]⚠
Q518	2SC2785FTA	TRANSISTOR	[M]
Q519	2SC1740SSTA	TRANSISTOR	[M]
Q520	KTC3199GRTA	TRANSISTOR	[M]
Q521	KTC3199GRTA	TRANSISTOR	[M]
Q522	2SD2144STA	TRANSISTOR	[M]
Q591	2SC1740SSTA	TRANSISTOR	[M]

Ref No.	Part No.	Part Name & Description	Remarks
Q592	2SC3940AQSTA	TRANSISTOR	[M]⚠
Q602	2SJ498CDTA	TRANSISTOR	[M]
Q602	KTA12710YTA	TRANSISTOR	[M]
Q603	KTC3199GRTA	TRANSISTOR	[M]
Q604	KTC3199GRTA	TRANSISTOR	[M]
Q605	KTC3199GRTA	TRANSISTOR	[M]
Q606	KTC3199GRTA	TRANSISTOR	[M]
Q607	KRC103MTA	TRANSISTOR	[M]
Q608	KTC3199GRTA	TRANSISTOR	[M]
Q609	KTC3199GRTA	TRANSISTOR	[M]
Q610	2SA933SSTA	TRANSISTOR	[M]
Q611	KRC102MTA	TRANSISTOR	[M]
Q701	2SA1037AKSTX	TRANSISTOR	[M]
Q702	2SJ498CDTA	TRANSISTOR	[M]
Q702	DTC114YKA146	TRANSISTOR	[M]
Q703	KTC3199GRTA	TRANSISTOR	[M]
Q704	KTC3199GRTA	TRANSISTOR	[M]
Q1001	2SC2784FTA	TRANSISTOR	[M]
Q1002	2SC2784FTA	TRANSISTOR	[M]
Q1003	2SD1450STA	TRANSISTOR	[M]
Q1004	2SD2144STA	TRANSISTOR	[M]
Q1005	2SD2144STA	TRANSISTOR	[M]
Q1006	KRC114MTA	TRANSISTOR	[M]
Q1007	KTC3199GRTA	TRANSISTOR	[M]
Q1008	2SD965RTA	TRANSISTOR	[M]
Q1009	KTA12710YTA	TRANSISTOR	[M]
Q1010	KRC111MTA	TRANSISTOR	[M]
Q1011	KRC111MTA	TRANSISTOR	[M]
Q1012	KRA102MTA	TRANSISTOR	[M]
Q1013	KRA102MTA	TRANSISTOR	[M]
Q1014	KTC3199GRTA	TRANSISTOR	[M]
Q1015	KTA12710YTA	TRANSISTOR	[M]
		DIODES	
D1	GP1S94	DIODE	[M]
D2	MTZJ4R7BTA	DIODE	[M]
D101	MTZJ5R1BTA	DIODE	[M]⚠
D200	RVD1SS133TA	DIODE	[M]
D302	MTZJ5R1BTA	DIODE	[M]⚠
D306	RVD1SS133TA	DIODE	[M]
D307	RVD1SS133TA	DIODE	[M]
D308	RVD1SS133TA	DIODE	[M]
D310	RVD1SS133TA	DIODE	[M]
D312	1D3E	DIODE	[M]
D313	RVD1SS133TA	DIODE	[M]
D314	RVD1SS133TA	DIODE	[M]
D315	RVD1SS133TA	DIODE	[M]
D316	RVD1SS133TA	DIODE	[M]

Ref No.	Part No.	Part Name & Description	Remarks
D400	RVD1SS133TA	DIODE	[M]
D500	MTZJ6R2BTA	DIODE	[M]⚠
D501	1N5402BM21	DIODE	[M]⚠
D502	1N5402BM21	DIODE	[M]⚠
D503	1N5402BM21	DIODE	[M]⚠
D504	1N5402BM21	DIODE	[M]⚠
D505	1D3E	DIODE	[M]⚠
D506	MTZJ12BTA	DIODE	[M]
D507	1D3E	DIODE	[M]⚠
D509	1D3E	DIODE	[M]
D510	1D3E	DIODE	[M]
D513	MTZJ5R1BTA	DIODE	[M]⚠
D515	MTZJ8R2CTA	DIODE	[M]⚠
D516	RVD1SS133TA	DIODE	[M]
D517	MTZJ5R6BTA	DIODE	[M]⚠
D518	MTZJ33BTA	DIODE	[M]⚠
D520	MTZJ10BTA	DIODE	[M]⚠
D521	1D3E	DIODE	[M]
D523	1D3E	DIODE	[M]
D524	MTZJ15CTA	DIODE	[M]⚠
D525	RVD1SS133TA	DIODE	[M]
D526	1D3E	DIODE	[M]
D528	RVD1SS133TA	DIODE	[M]
D539	RL1N4003N02	DIODE	[M]
D540	RL1N4003N02	DIODE	[M]
D541	RL1N4003N02	DIODE	[M]
D542	MA165TA	DIODE	[M]
D543	MA165TA	DIODE	[M]
D544	MA165TA	DIODE	[M]
D591	1D3E	DIODE	[M]⚠
D592	1D3E	DIODE	[M]⚠
D593	1D3E	DIODE	[M]⚠
D594	1D3E	DIODE	[M]⚠
D595	MTZJ7R5ATA	DIODE	[M]⚠
D596	RVD1SS133TA	DIODE	[M]
D598	1D3E	DIODE	[M]
D604	SLR325DCT31	DIODE	[M]
D605	LNJ201LPQJA	DIODE	[M]
D606	SLR325MCT31W	DIODE	[M]
D607	SLR325MCT31W	DIODE	[M]
D608	SLR325MCT31W	DIODE	[M]
D609	SLR325MCT31W	DIODE	[M]
D610	SLR325MCT31W	DIODE	[M]
D611	SLR325MCT31W	DIODE	[M]
D612	SLR325MCT31W	DIODE	[M]
D613	SLR325MCT31W	DIODE	[M]
D614	SLR325MCT31W	DIODE	[M]
D615	SLR325MCT31W	DIODE	[M]
D616	SLR325DCT31	DIODE	[M]

Ref No.	Part No.	Part Name & Description	Remarks
D617	SLR325DCT31	DIODE	[M]
D620	RVD1SS133TA	DIODE	[M]
D623	RVD1SS133TA	DIODE	[M]
D625	RVD1SS133TA	DIODE	[M]
D627	1SS291TA	DIODE	[M]
D628	1SS291TA	DIODE	[M]
D629	RVD1SS133TA	DIODE	[M]
D630	RVD1SS133TA	DIODE	[M]
D631	RVD1SS133TA	DIODE	[M]
D632	1SS291TA	DIODE	[M]
D633	RVD1SS133TA	DIODE	[M]
D634	RVD1SS133TA	DIODE	[M]
D635	RVD1SS133TA	DIODE	[M]
D636	MA4020LTA	DIODE	[M]
D637	1SS291TA	DIODE	[M]
D638	RVD1SS133TA	DIODE	[M]
D639	RVD1SS133TA	DIODE	[M]
D640	RVD1SS133TA	DIODE	[M]
D641	RVD1SS133TA	DIODE	[M]
D642	RVD1SS133TA	DIODE	[M]
D643	RVD1SS133TA	DIODE	[M]
D951	MA165TA	DIODE	[M]
D971	MA165TA	DIODE	[M]
D1002	RVD1SS133TA	DIODE	[M]
D1003	RVD1SS133TA	DIODE	[M]
D1004	MTZJ3R6BTA	DIODE	[M]
D1006	RVD1SS133TA	DIODE	[M]
D1007	RVD1SS133TA	DIODE	[M]
		VARIABLE RESISTORS	
VR600	RRV16B24104G	VR, ROTARY ENCODE	[M]
		SWITCHES	
S602	EVQ21405R	SW, AUX/MD	[M]
S603	EVQ21405R	SW, TUNE DOWN	[M]
S604	EVQ21405R	SW, EJECT 5	[M]
S605	EVQ21405R	SW, TUNER/BAND	[M]
S606	EVQ21405R	SW, TUNE UP	[M]
S607	EVQ21405R	SW, EJECT 4	[M]
S608	EVQ21405R	SW, CD	[M]
S609	EVQ21405R	SW, TUNE MODE	[M]
S610	EVQ21405R	SW, EJECT 3	[M]
S611	EVQ21405R	SW, TAPE DECK 1/2	[M]
S612	EVQ21405R	SW, MEMORY	[M]
S613	EVQ21405R	SW, EJECT 2	[M]
S614	EVQ21405R	SW, CLK/TIMER	[M]
S615	EVQ21405R	SW, ECO MODE	[M]

Ref No.	Part No.	Part Name & Description	Remarks
S616	EVQ21405R	SW, FM MODE/BP	[M]
S617	EVQ21405R	SW, EJECT 1	[M]
S618	EVQ21405R	SW, PLAY/REC	[M]
S619	EVQ21405R	SW, RANDOM	[M]
S620	EVQ21405R	SW, DECK 1 EJECT	[M]
S621	EVQ11G07K	SW, EQ DOWN	[M]
S622	EVQ21405R	SW, DISPLAY/DEMO	[M]
S623	EVQ21405R	SW, CD MANAGER	[M]
S624	EVQ21405R	SW, TAPE EDIT	[M]
S625	EVQ11G07K	SW, EQ LEFT	[M]
S626	EVQ21405R	SW, V. BASS	[M]
S627	EVQ21405R	SW, DISC 5	[M]
S628	EVQ11G07K	SW, EQ UP	[M]
S629	EVQ21405R	SW, REC/STOP	[M]
S630	EVQ21405R	SW, DISC 4	[M]
S631	EVQ11G07K	SW, EQ RIGHT	[M]
S632	EVQ21405R	SW, REV MODE	[M]
S633	EVQ21405R	SW, DISC 3	[M]
S634	EVQ21405R	SW, DECK 2 EJECT	[M]
S635	EVQ21405R	SW, DISC 2	[M]
S636	EVQ21405R	SW, DISC 1	[M]
S638	EVQ21405R	SW, POWER	[M]
S639	EVQ21405R	SW, 3D AI EQ	[M]
S701	RSH1A043-U	SW, REST	[M]
S951	RSH1A018-3U	SW, LEAF	[M]
S952	RSH1A019-2U	SW, LEAF	[M]
S953	RSH1A019-2U	SW, LEAF	[M]
S971	RSH1A018-3U	SW, LEAF	[M]
S972	RSH1A019-2U	SW, LEAF	[M]
S973	RSH1A019-2U	SW, LEAF	[M]
S974	RSH1A019-2U	SW, LEAF	[M]
S975	RSH1A019-2U	SW, LEAF	[M]
SW1	RSH1A032-U	SW, SLIDE	[M]
SW2	RSH1A032-U	SW, SLIDE	[M]
SW3	RSH1A005-1U	SWITCH	[M]
SW4	RSH1A91ZA-A	SWITCH	[M]
SW5	RSP1A017-A	SW, LOWER	[M]
SW600	ESE24SV1	JOG SWITCH	[M]
		CONNECTORS	
CN1	RJS1A9414	14P CONNECTOR	[M]
CN101B	RJU100H05	5P B/B CONNECTOR	[D]
CN102B	RJU100H06	6P B/B CONNECTOR	[D]
CN300	RJU057G12	P2 MQ CONNECTOR	[M]
CN301	RJU057G12	P2 MQ CONNECTOR	[M]
CN302	RJS2A3330-1	30P FFC CONNECTOR	[M]
CN303	RJS1A9420	20P FFC CONNECTOR	[M]
CN304	RJS1A5210	10P WIRE HOLDER	[M]

Ref No.	Part No.	Part Name & Description	Remarks
CN309	RJS1A9414-1	14P FFC CONNECTOR	[M]
CN501	RJT029W09V-1	9P CONNECTOR	[M]
CN502	RJT029W04V	4P CONNECTOR	[M]
CN600	RJT071H11	11P B-B PIN	[M]
CN601	RJS8T7ZA	8P MOLEX	[M]
CN601	RJT071H11	11P B-B PIN	[M]
CN701	RJS2A6016	16P FFC CONNECTOR	[M]
CN702	RJS1A6723-1Q	23P FFC CONNCETOR	[M]
CP301	RJT100W06	6 PIN B/B CONN.	[D]
CP302	RJT100W05	5 PIN B/B CONN.	[D]
CP503	RJT057G12	P2 MQ CONNECTOR	[M]
CP504	RJT057G12	P2 MQ CONNECTOR	[M]
CP600	RJU071H11M	CONNECTOR	[M]
CP601	RJT071H09A	9P B-B PIN	[M]
CP601	RJU071H11M	CONNECTOR	[M]
CP602	RJT071H09A	9P B-B PIN	[M]
CP603	RJS1A6223-1	23P CONNECTOR	[M]
CP604	RJS2A4230-F	30P CONNECTOR	[M]
CP605	RJS1A9420	20P FFC CONNECTOR	[M]
CS701	RJS1A6805-J	CONNECTOR SOCKET	[M]
CS702	RJS1A6805-J	CONNECTOR SOCKET	[M]
CS951	RJU071H09M1	CONNECTOR	[M]
CS971	RJU071H09M1	CONNECTOR	[M]
		COILS & TRANSFORMERS	
L101	ELESNR68MA	CHOKE COIL	[M]
L102	ELESNR68MA	CHOKE COIL	[M]
L103	ELEXTR47MA9	CHOKE COIL	[M]
L500	RLQZ271M	LINE COIL	[M]⚠
L501	RLQYR73MW-E	CHOKE COIL	[M]
L502	RLQYR73MW-E	CHOKE COIL	[M]
L600	RLQZP101KT-Y	AXIAL COIL	[M]
L601	7L1A62N	BIAS OSC COIL	[M]
L601	RLQZP100KT-Y	AXIAL COIL	[M]
L602	RLQZP101KT-Y	AXIAL COIL	[M]
L603	RLQZP3R3KT-Y	COIL	[M]
L604	RLQZP101KT-Y	AXIAL COIL	[M]
L605	RLQZP101KT-Y	AXIAL COIL	[M]
L1002	RLQZB470KT-D	RF CHOKE COIL	[M]
T501	RTP2W3B001	POWER TRANS	[D]⚠
T502	RTP1I3E001-V	BACK-UP TRANS	[M]⚠
		COMPONENT COMBINATION	
Z101	RLA2Z003M-T	ANT COIL BLOCK	[M]
Z102	RLI2Z006M-T	AM IFT	[M]
Z120	ENV17290G1Y	FM TUNER PACK	[M]
Z300	EXBF7L355SYV	LADDER RESISTOR	[M]

Ref No.	Part No.	Part Name & Description	Remarks
Z501	ERZV10V511CS	ZNR	[M]⚠
Z601	EXBF7L355SYV	LADDER RESISTOR	[M]
Z602	EXBF7L355SYV	LADDER RESISTOR	[M]
Z602	RCDGP1U28XD	REMOTE SENSOR	[M]
Z971	EXBF7L355SYV	RADA RESISTOR	[M]
		CERAMIC FILTERS	
CF201	RLFFETNGD01L	CERAMIC FILTER	[M]
CF202	RLFFETMGD01L	CERAMIC FILTER	[M]
		RELAY	
RL501	RSY0017M-0	RELAY	[M]⚠
RL502	RSY0040M-0	PRIMARY RELAY	[M]⚠
		OSCILLATORS	
X102	RLFDFT13DD	FM RESONATOR	[M]
X103	RSXC7M20S05T	CRYSTAL OSCILLATOR	[M]
X600	RSXZ8M00D01T	CERAMIC RESONATOR	[M]
X601	RSXD32K7S02	32.768HKZ X'TAL	[M]
X701	RSXZ16M9M01T	CERAMIC OSC	[M]
		DISPLAY TUBE	
FL600	RSL0276-F	FL	[M]
		FUSES	
F1	XBA2C06TB0	FUSE	[M]⚠
		FUSE HOLDERS	
FC1	EYF52BC	FUSE HOLDER	[M]
FC2	EYF52BC	FUSE HOLDER	[M]
		HOLDERS	
H501	RJS1A5509	9P CABLE HOLDER	[M]
H502	RJS1A5504	CABLE HOLDER	[M]
H600	RMR0317	8P CABLE HOLDER	[M]
H600	RMR0319	10P CABLE HOLDER	[M]
		JACKS	
JK101	RJH5210-1	JK, ANTENNA	[M]
JK305	RJH2206	JK, RCA	[M]
JK500	SJS9236-J	JK, AC INLET	[M]⚠

Ref No.	Part No.	Part Name & Description	Remarks
JK501	RJR0054B-J	JK, SPEAKER	[M]
JK600	RJJ37TK07-H	JK, HP	[M]
		EARTH TERMINAL	
E500	SNE1004-2	EARTH TERMINAL	[M]

Ref No.	Part No.	Part Name & Description	Remarks
		WIRES	
W1	REE0501	TRANS. WIRE (YEL)	[M]
W1	REZ1023-1	4P WIRE	[M]
W2	REE0856	TRANS. WIRE (BLACK)	[M]
W2	REZ1024	3P WIRE	[M]

Ref No.	Part No.	Part Name & Description	Remarks
W500	REXX0202	TRANSFORMER WIRE	[M]
W501	REXX0198	9-PIN WIRE	[M]

■ Resistors & Capacitors

Notes :
* Capacitor values are in microfarads (mF) unless specified otherwise, P=Pico-farads (pF), F=Farads.
* Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM).
* Bracketed indications in Values & Remarks columns specify the area (Refer to the first page for area). Parts without these indications can be used for all areas.
* [M] indicates in the Values & Remarks columns indicates parts supplied by **MESA**
* [D] indicates in the Values & Remarks columns indicates parts supplied by **MAVD.**

Ref. No.	Part No.	Values & Remarks
		RESISTORS
R1	ERDS2TJ102T	1K 1/4W [M]
R102	ERDS2TJ472T	4.7K 1/4W [M]
R103	ERDS2TJ101T	100 1/4W [M]
R104	ERDS2TJ103T	10K 1/4W [M]
R105	ERDS2TJ471T	470 1/4W [M]
R106	ERDS2TJ474T	470K 1/4W [M]
R107	ERDS2TJ331T	330 1/4W [M]
R108	ERDS2TJ474T	470K 1/4W [M]
R109	ERDS2TJ331T	330 1/4W [M]
R110	ERDS2TJ102T	1K 1/4W [M]
R111	ERDS2TJ391T	390 1/4W [M]
R112	ERDS2TJ104T	100K 1/4W [M]
R113	ERDS2TJ103T	10K 1/4W [M]
R114	ERDS2TJ562T	5.6K 1/4W [M]
R115	ERDS2TJ561T	560 1/4W [M]
R116	ERDS2TJ102T	1K 1/4W [M]
R117	ERDS2TJ683T	68K 1/4W [M]
R118	ERDS2TJ472T	4.7K 1/4W [M]
R119	ERDS2TJ333T	33K 1/4W [M]
R120	ERDS2TJ473T	47K 1/4W [M]
R121	ERDS2TJ223T	22K 1/4W [M]
R122	ERDS2TJ272T	2.7K 1/4W [M]
R123	ERDS2TJ683T	68K 1/4W [M]
R124	ERDS2TJ271T	270 1/4W [M]
R125	ERDS2TJ471T	470 1/4W [M]
R126	ERDS2TJ102T	1K 1/4W [M]
R127	ERDS2TJ471T	470 1/4W [M]
R128	ERDS2TJ820T	82 1/4W [M]
R129	ERDS2TJ273T	27K 1/4W [M]
R130	ERDS2TJ103T	10K 1/4W [M]
R131	ERDS2TJ680T	68 1/4W [M]
R132	ERDS2TJ103T	10K 1/4W [M]

Ref. No.	Part No.	Values & Remarks
R133	ERDS2TJ102T	1K 1/4W [M]
R134	ERDS2TJ471T	470 1/4W [M]
R135	ERDS2TJ102T	1K 1/4W [M]
R136	ERDS2TJ102T	1K 1/4W [M]
R137	ERDS2TJ102T	1K 1/4W [M]
R138	ERDS2TJ332T	3.3K 1/4W [M]
R141	ERDS2TJ102T	1K 1/4W [M]
R142	ERDS2TJ102T	1K 1/4W [M]
R143	ERDS2TJ223T	22K 1/4W [M]
R145	ERDS2TJ104T	100K 1/4W [M]
R146	ERDS2TJ104T	100K 1/4W [M]
R201	ERDS2TJ123T	12K 1/4W [M]
R202	ERDS2TJ222T	2.2K 1/4W [M]
R207	ERDS2TJ102T	1K 1/4W [M]
R208	ERDS2TJ822T	8.2K 1/4W [M]
R209	ERDS2TJ272T	2.7K 1/4W [M]
R210	ERDS2TJ222T	2.2K 1/4W [M]
R211	ERDS2TJ562T	5.6K 1/4W [M]
R212	ERDS2TJ182T	1.8K 1/4W [M]
R213	ERDS2TJ223T	22K 1/4W [M]
R215	ERDS2TJ152T	1.5K 1/4W [M]
R216	ERDS2TJ562T	5.6K 1/4W [M]
R217	ERDS2TJ683T	68K 1/4W [M]
R218	ERDS2TJ332T	3.3K 1/4W [M]
R219	ERDS2TJ472T	4.7K 1/4W [M]
R220	ERDS2TJ104T	100K 1/4W [M]
R221	ERDS2TJ102T	1K 1/4W [M]
R223	ERDS2TJ473T	47K 1/4W [M]
R224	ERDS2TJ153T	15K 1/4W [M]
R225	ERDS2TJ102T	1K 1/4W [M]
R226	ERDS2TJ152T	1.5K 1/4W [M]
R227	ERDS2TJ390T	39 1/4W [M]
R228	ERDS2TJ102T	1K 1/4W [M]
R229	ERDS2TJ472T	4.7K 1/4W [M]

Ref. No.	Part No.	Values & Remarks
R230	ERDS2TJ392T	3.9K 1/4W [M]
R231	ERDS2TJ271T	270 1/4W [M]
R232	ERDS2TJ123T	12K 1/4W [M]
R233	ERDS2TJ273T	27K 1/4W [M]
R236	ERDS2TJ222T	2.2K 1/4W [M]
R253	ERDS2TJ390T	39 1/4W [M]
R300	ERDS2TJ472T	4.7K 1/4W [M]
R301	ERDS2TJ223T	22K 1/4W [M]
R302	ERDS2TJ183T	18K 1/4W [M]
R303	ERDS2TJ100T	10 1/4W [M]
R304	ERDS2TJ223T	22K 1/4W [M]
R305	ERDS2TJ103T	10K 1/4W [M]
R306	ERDS2TJ122T	1.2K 1/4W [M]
R307	ERDS2TJ473T	47K 1/4W [M]
R308	ERDS2TJ332T	3.3K 1/4W [M]
R309	ERDS2TJ272T	2.7K 1/4W [M]
R313	ERDS2TJ393T	39K 1/4W [M]
R316	ERDS2TJ153T	15K 1/4W [M]
R318	ERDS2TJ123T	12K 1/4W [M]
R321	ERDS2TJ2R7T	2.7 1/4W [M]
R322	ERDS2TJ271T	270 1/4W [M]
R323	ERDS2TJ222T	2.2K 1/4W [M]
R324	ERDS2TJ222T	2.2K 1/4W [M]
R325	ERDS2TJ222T	2.2K 1/4W [M]
R326	ERDS2TJ683T	68K 1/4W [M]
R327	ERDS2TJ154T	150K 1/4W [M]
R328	ERDS2TJ683T	68K 1/4W [M]
R329	ERDS2TJ154T	150K 1/4W [M]
R330	ERDS2TJ333T	33K 1/4W [M]
R331	ERDS2TJ222T	2.2K 1/4W [M]
R332	ERDS2TJ222T	2.2K 1/4W [M]
R333	ERDS2TJ101T	100 1/4W [M]
R334	ERDS2TJ563T	56K 1/4W [M]
R343	ERDS2TJ104T	100K 1/4W [M]

Ref. No.	Part No.	Values & Remarks
R345	ERDS2TJ221T	220 1/4W [M]
R346	ERDS2TJ223T	22K 1/4W [M]
R347	ERDS2TJ123T	12K 1/4W [M]
R348	ERDS2TJ103T	10K 1/4W [M]
R349	ERDS2TJ103T	10K 1/4W [M]
R350	ERDS2TJ102T	1K 1/4W [M]
R351	ERDS2TJ472T	4.7K 1/4W [M]
R352	ERDS2TJ472T	4.7K 1/4W [M]
R353	ERDS2TJ222T	2.2K 1/4W [M]
R354	ERDS2TJ472T	4.7K 1/4W [M]
R355	ERDS2TJ472T	4.7K 1/4W [M]
R356	ERDS2TJ472T	4.7K 1/4W [M]
R357	ERDS2TJ222T	2.2K 1/4W [M]
R358	ERDS2TJ472T	4.7K 1/4W [M]
R359	ERDS2TJ472T	4.7K 1/4W [M]
R360	ERDS2TJ472T	4.7K 1/4W [M]
R401	ERDS2TJ123T	12K 1/4W [M]
R402	ERDS2TJ222T	2.2K 1/4W [M]
R407	ERDS2TJ102T	1K 1/4W [M]
R408	ERDS2TJ822T	8.2K 1/4W [M]
R409	ERDS2TJ272T	2.7K 1/4W [M]
R410	ERDS2TJ222T	2.2K 1/4W [M]
R411	ERDS2TJ562T	5.6K 1/4W [M]
R412	ERDS2TJ182T	1.8K 1/4W [M]
R413	ERDS2TJ223T	22K 1/4W [M]
R415	ERDS2TJ152T	1.5K 1/4W [M]
R416	ERDS2TJ562T	5.6K 1/4W [M]
R417	ERDS2TJ683T	68K 1/4W [M]
R418	ERDS2TJ332T	3.3K 1/4W [M]
R419	ERDS2TJ472T	4.7K 1/4W [M]
R420	ERDS2TJ104T	100K 1/4W [M]
R421	ERDS2TJ102T	1K 1/4W [M]
R423	ERDS2TJ473T	47K 1/4W [M]
R424	ERDS2TJ153T	15K 1/4W [M]

Ref. No.	Part No.	Values & Remarks
R425	ERDS2TJ102T	1K 1/4W [M]
R426	ERDS2TJ152T	1.5K 1/4W [M]
R427	ERDS2TJ390T	39 1/4W [M]
R428	ERDS2TJ102T	1K 1/4W [M]
R429	ERDS2TJ472T	4.7K 1/4W [M]
R430	ERDS2TJ392T	3.9K 1/4W [M]
R431	ERDS2TJ271T	270 1/4W [M]
R432	ERDS2TJ123T	12K 1/4W [M]
R433	ERDS2TJ273T	27K 1/4W [M]
R436	ERDS2TJ222T	2.2K 1/4W [M]
R451	ERDS2TJ562T	5.6K 1/4W [M]
R452	ERDS2TJ103T	10K 1/4W [M]
R453	ERDS2TJ390T	39 1/4W [M]
R454	ERDS2TJ223T	22K 1/4W [M]
R455	ERDS2TJ152T	1.5K 1/4W [M]
R456	ERDS2TJ562T	5.6K 1/4W [M]
R457	ERDS2TJ822T	8.2K 1/4W [M]
R458	ERDS2TJ822T	8.2K 1/4W [M]
R459	ERDS2TJ392T	3.9K 1/4W [M]
R460	ERDS2TJ332T	3.3K 1/4W [M]
R501	ERDS2TJ100T	10 1/4W [M]
R502	ERDS2TJ100T	10 1/4W [M]
R503	ERDS2TJ332T	3.3K 1/4W [M]
R507	ERDS2TJ103T	10K 1/4W [M]
R509	ERDS2TJ472T	4.7K 1/4W [M]
R510	ERDS2TJ122T	1.2K 1/4W [M]
R511	ERDS2TJ182T	1.8K 1/4W [M]
R512	ERDS2TJ151T	150 1/4W [M]
R513	ERDS2TJ331T	330 1/4W [M]
R514	ERDS1FVJ470T	47 1/2W ⚠[M]
R515	ERDS1FVJ470T	47 1/2W ⚠[M]
R516	ERDS2TJ822T	8.2K 1/4W [M]
R517	ERDS2TJ331T	330 1/4W [M]
R518	ERDS2TJ122T	1.2K 1/4W [M]
R519	ERDS2TJ2R2T	2.2 1/4W [M]
R520	ERDS2TJ2R2T	2.2 1/4W [M]
R521	ERDS2TJ151T	150 1/4W [M]
R522	ERDS2TJ472T	4.7K 1/4W [M]
R523	ERD2FCVJ4R7T	4.7 1/4W [M]
R524	ERDS2TJ2R2T	2.2 1/4W [M]
R525	ERDS2TJ272T	2.7K 1/4W [M]
R526	ERDS2TJ103T	10K 1/4W [M]
R527	ERDS2TJ561T	560 1/4W [M]
R528	ERDS2TJ272T	2.7K 1/4W [M]
R529	ERDS1FVJ332T	3.3K 1/2W ⚠[M]
R530	ERD2FCVG270T	27 1/4W [M]
R531	ERDS1FVJ150T	15 1/2W ⚠[M]
R532	ERDS2TJ102T	1K 1/4W [M]
R533	ERDS2TJ102T	1K 1/4W [M]

Ref. No.	Part No.	Values & Remarks
R534	ERD25FVJ4R7T	4.7 1/4W [M]
R535	ERDS2TJ124T	120K 1/4W [M]
R536	ERDS1FVJ100T	10 1/2W ⚠[M]
R537	ERDS2TJ222T	2.2K 1/4W [M]
R538	ERDS2TJ103T	10K 1/4W [M]
R539	ERDS1FVJ392T	3.9K 1/2W ⚠[M]
R540	ERDS2TJ683T	68K 1/4W [M]
R541	ERDS2TJ683T	68K 1/4W [M]
R542	ERDS2TJ562T	5.6K 1/4W [M]
R543	ERDS2TJ562T	5.6K 1/4W [M]
R544	ERDS2TJ683T	68K 1/4W [M]
R545	ERDS2TJ683T	68K 1/4W [M]
R546	ERDS2TJ223T	22K 1/4W [M]
R547	ERDS2TJ124T	120K 1/4W [M]
R548	ERDS2TJ104T	100K 1/4W [M]
R549	ERDS1FVJ2R2T	2.2 1/2W ⚠[M]
R550	ERDS2TJ332T	3.3K 1/4W [M]
R551	ERDS2TJ103T	10K 1/4W [M]
R552	ERDS1FVJ100T	10 1/2W ⚠[M]
R553	ERDS1FVJ100T	10 1/2W ⚠[M]
R554	ERDS2TJ334T	330K 1/4W [M]
R556	ERD2FCVG270T	27 1/4W [M]
R557	ERDS1FVJ270T	27 1/2W ⚠[M]
R558	ERDS2TJ104T	100K 1/4W [M]
R559	ERDS2TJ104T	100K 1/4W [M]
R560	ERDS2TJ123T	12K 1/4W [M]
R561	ERDS2TJ123T	12K 1/4W [M]
R562	ERDS2TJ102T	1K 1/4W [M]
R563	ERDS2TJ103T	10K 1/4W [M]
R564	ERDS2TJ272T	2.7K 1/4W [M]
R565	ERDS2TJ104T	100K 1/4W [M]
R566	ERDS2TJ222T	2.2K 1/4W [M]
R567	ERDS2TJ151T	150 1/4W [M]
R568	ERDS2TJ823T	82K 1/4W [M]
R569	ERDS2TJ393T	39K 1/4W [M]
R570	ERDS2TJ104T	100K 1/4W [M]
R571	ERDS2TJ563T	56K 1/4W [M]
R572	ERDS2TJ563T	56K 1/4W [M]
R573	ERDS2TJ822T	8.2K 1/4W [M]
R574	ERDS2TJ822T	8.2K 1/4W [M]
R580	ERDS2TJ150T	15 1/4W [M]
R581	ERDS1FVJ270T	27 1/2W ⚠[M]
R591	RSFMB40KT-L	FUSE PROTECTOR ⚠[M]
R592	RSFMB40KT-L	FUSE PROTECTOR ⚠[M]
R593	ERDS2TJ222T	2.2K 1/4W [M]
R595	ERDS2TJ332T	3.3K 1/4W [M]
R597	ERDS2TJ102T	1K 1/4W [M]
R598	ERDS2TJ223T	22K 1/4W [M]
R599	ERDS2TJ151T	150 1/4W [M]

Ref. No.	Part No.	Values & Remarks
R600	ERDS2TJ223T	22K 1/4W [M]
R601	ERDS2TJ183T	18K 1/4W [M]
R601	ERDS2TJ333T	33K 1/4W [M]
R602	ERDS2TJ104T	100K 1/4W [M]
R602	ERDS2TJ392T	3.9K 1/4W [M]
R603	ERDS2TJ682T	6.8K 1/4W [M]
R604	ERDS2TJ103T	10K 1/4W [M]
R604	ERDS2TJ822T	8.2K 1/4W [M]
R605	ERDS2TJ103T	10K 1/4W [M]
R606	ERDS2TJ222T	2.2K 1/4W [M]
R606	ERDS2TJ682T	6.8K 1/4W [M]
R607	ERDS2TJ103T	10K 1/4W [M]
R607	ERDS2TJ472T	4.7K 1/4W [M]
R608	ERDS2TJ682T	6.8K 1/4W [M]
R609	ERDS2TJ153T	15K 1/4W [M]
R609	ERDS2TJ472T	4.7K 1/4W [M]
R610	ERDS2TJ104T	100K 1/4W [M]
R610	ERDS2TJ272T	2.7K 1/4W [M]
R611	ERDS2TJ472T	4.7K 1/4W [M]
R611	ERDS2TJ563T	56K 1/4W [M]
R612	ERDS2TJ470T	47 1/4W [M]
R613	ERDS2TJ272T	2.7K 1/4W [M]
R614	ERDS2TJ222T	2.2K 1/4W [M]
R615	ERDS2TJ103T	10K 1/4W [M]
R616	ERDS2TJ272T	2.7K 1/4W [M]
R617	ERDS2TJ222T	2.2K 1/4W [M]
R618	ERDS2TJ182T	1.8K 1/4W [M]
R622	ERDS2TJ221T	220 1/4W [M]
R622	ERDS2TJ470T	47 1/4W [M]
R623	ERDS2TJ682T	6.8K 1/4W [M]
R624	ERDS2TJ222T	2.2K 1/4W [M]
R629	ERDS2TJ182T	1.8K 1/4W [M]
R630	ERDS2TJ122T	1.2K 1/4W [M]
R631	ERDS2TJ472T	4.7K 1/4W [M]
R633	ERDS2TJ182T	1.8K 1/4W [M]
R634	ERDS2TJ122T	1.2K 1/4W [M]
R635	ERDS2TJ102T	1K 1/4W [M]
R638	ERDS2TJ272T	2.7K 1/4W [M]
R639	ERDS2TJ102T	1K 1/4W [M]
R640	ERDS2TJ122T	1.2K 1/4W [M]
R641	ERDS2TJ102T	1K 1/4W [M]
R642	ERDS2TJ102T	1K 1/4W [M]
R644	ERDS2TJ222T	2.2K 1/4W [M]
R645	ERDS2TJ102T	1K 1/4W [M]
R646	ERDS2TJ820T	82 1/4W [M]
R647	ERDS2TJ331T	330 1/4W [M]
R648	ERDS2TJ102T	1K 1/4W [M]
R649	ERDS2TJ182T	1.8K 1/4W [M]
R650	ERDS2TJ331T	330 1/4W [M]

Ref. No.	Part No.	Values & Remarks
R652	ERDS2TJ102T	1K 1/4W [M]
R653	ERDS2TJ122T	1.2K 1/4W [M]
R654	ERDS2TJ331T	330 1/4W [M]
R655	ERDS2TJ331T	330 1/4W [M]
R656	ERDS2TJ102T	1K 1/4W [M]
R657	ERDS2TJ331T	330 1/4W [M]
R658	ERDS2TJ101T	100 1/4W [M]
R659	ERDS2TJ331T	330 1/4W [M]
R660	ERDS2TJ102T	1K 1/4W [M]
R661	ERDS2TJ331T	330 1/4W [M]
R662	ERDS2TJ102T	1K 1/4W [M]
R663	ERDS2TJ102T	1K 1/4W [M]
R664	ERDS2TJ104T	100K 1/4W [M]
R665	ERDS2TJ104T	100K 1/4W [M]
R666	ERDS2TJ104T	100K 1/4W [M]
R667	ERDS2TJ104T	100K 1/4W [M]
R668	ERDS2TJ104T	100K 1/4W [M]
R669	ERDS2TJ104T	100K 1/4W [M]
R670	ERDS2TJ104T	100K 1/4W [M]
R671	ERDS2TJ104T	100K 1/4W [M]
R672	ERDS2TJ104T	100K 1/4W [M]
R673	ERDS2TJ104T	100K 1/4W [M]
R674	ERDS2TJ104T	100K 1/4W [M]
R675	ERDS2TJ104T	100K 1/4W [M]
R676	ERDS2TJ104T	100K 1/4W [M]
R677	ERDS2TJ103T	10K 1/4W [M]
R678	ERDS2TJ391T	390 1/4W [M]
R679	ERDS2TJ391T	390 1/4W [M]
R682	ERDS2TJ103T	10K 1/4W [M]
R683	ERDS2TJ103T	10K 1/4W [M]
R684	ERDS2TJ103T	10K 1/4W [M]
R685	ERDS2TJ103T	10K 1/4W [M]
R686	ERDS2TJ223T	22K 1/4W [M]
R688	ERDS2TJ103T	10K 1/4W [M]
R689	ERDS2TJ101T	100 1/4W [M]
R690	ERDS2TJ101T	100 1/4W [M]
R691	ERDS2TJ101T	100 1/4W [M]
R692	ERDS2TJ101T	100 1/4W [M]
R694	ERDS2TJ152T	1.5K 1/4W [M]
R695	ERDS2TJ223T	22K 1/4W [M]
R697	ERDS2TJ224T	220K 1/4W [M]
R698	ERDS2TJ104T	100K 1/4W [M]
R699	ERDS2TJ101T	100 1/4W [M]
R701	ERDS2TJ183T	18K 1/4W [M]
R701	ERJ6GEYJ4R7A	4.7 1/10W [M]
R702	ERDS2TJ470T	47 1/4W [M]
R702	ERJ6GEYJ822A	8.2K 1/10W [M]
R703	ERDS2TJ392T	3.9K 1/4W [M]
R704	ERDS2TJ822T	8.2K 1/4W [M]

Ref. No.	Part No.	Values & Remarks
R704	ERJ6GEYJ102A	1K 1/10W [M]
R705	ERJ6GEYJ124A	120K 1/10W [M]
R706	ERDS2TJ222T	2.2K 1/4W [M]
R706	ERJ6GEYJ102A	1K 1/10W [M]
R707	ERDS2TJ103T	10K 1/4W [M]
R707	ERJ6GEYJ474A	470K 1/10W [M]
R708	ERJ6GEYJ154A	150K 1/10W [M]
R709	ERDS2TJ153T	15K 1/4W [M]
R709	ERJ6GEYJ473A	47K 1/10W [M]
R710	ERDS2TJ104T	100K 1/4W [M]
R710	ERJ6GEYJ103A	10K 1/10W [M]
R711	ERDS2TJ563T	56K 1/4W [M]
R711	ERJ6GEYJ104A	100K 1/10W [M]
R712	ERDS2TJ470T	47 1/4W [M]
R712	ERJ6GEYJ151A	150 1/10W [M]
R715	ERJ6GEYJ122A	1.2K 1/10W [M]
R717	ERJ6GEYJ102A	1K 1/10W [M]
R718	ERJ6GEYJ102A	1K 1/10W [M]
R719	ERJ6GEYJ102A	1K 1/10W [M]
R720	ERJ6GEYJ102A	1K 1/10W [M]
R721	ERJ6GEYJ101A	100 1/10W [M]
R723	ERJ6GEYJ272A	2.7K 1/10W [M]
R724	ERJ6GEYJ333A	33K 1/10W [M]
R725	ERJ6GEYJ122A	1.2K 1/10W [M]
R727	ERJ6GEYJ682A	6.8K 1/10W [M]
R728	ERJ6GEYJ682A	6.8K 1/10W [M]
R729	ERJ6GEYJ562A	5.6K 1/10W [M]
R731	ERJ6GEYJ123A	12K 1/10W [M]
R734	ERJ6GEYJ101A	100 1/10W [M]
R735	ERJ6GEYJ101A	100 1/10W [M]
R736	ERJ6GEYJ101A	100 1/10W [M]
R738	ERJ6GEYJ223A	22K 1/10W [M]
R741	ERJ6GEYJ562A	5.6K 1/10W [M]
R742	ERJ6GEYJ562A	5.6K 1/10W [M]
R743	ERJ6GEYJ562A	5.6K 1/10W [M]
R744	ERJ6GEYJ104A	100K 1/10W [M]
R745	ERJ6GEYJ106A	10M 1/10W [M]
R748	ERJ6GEYJ272A	2.7K 1/10W [M]
R749	ERJ6GEYJ682A	6.8K 1/10W [M]
R752	ERJ8GEYJ220A	22 1/8W [M]
R770	ERJ6GEYJ224A	220K 1/10W [M]
R901	ERDS2TJ101T	100 1/4W [M]
R902	ERDS2TJ473T	47K 1/4W [M]
R903	ERDS2TJ101T	100 1/4W [M]
R904	ERDS2TJ473T	47K 1/4W [M]
R905	ERDS2TJ101T	100 1/4W [M]
R906	ERDS2TJ101T	100 1/4W [M]
R907	ERDS2TJ104T	100K 1/4W [M]
R908	ERDS2TJ101T	100 1/4W [M]

Ref. No.	Part No.	Values & Remarks
R909	ERDS2TJ101T	100 1/4W [M]
R911	ERDS2TJ473T	47K 1/4W [M]
R912	ERDS2TJ104T	100K 1/4W [M]
R913	ERDS2TJ101T	100 1/4W [M]
R914	ERDS2TJ104T	100K 1/4W [M]
R915	ERDS2TJ101T	100 1/4W [M]
R916	ERDS2TJ101T	100 1/4W [M]
R917	ERDS2TJ681T	680 1/4W [M]
R918	ERDS2TJ106T	10M 1/4W [M]
R919	ERDS2TJ101T	100 1/4W [M]
R920	ERDS2TJ334T	330K 1/4W [M]
R921	ERDS2TJ562T	5.6K 1/4W [M]
R922	ERDS2TJ680T	68 1/4W [M]
R923	ERDS2TJ103T	10K 1/4W [M]
R924	ERDS2TJ104T	100K 1/4W [M]
R925	ERDS2TJ680T	68 1/4W [M]
R926	ERDS2TJ102T	1K 1/4W [M]
R927	ERDS2TJ103T	10K 1/4W [M]
R928	ERDS2TJ103T	10K 1/4W [M]
R929	ERDS2TJ103T	10K 1/4W [M]
R930	ERDS2TJ103T	10K 1/4W [M]
R931	ERDS2TJ472T	4.7K 1/4W [M]
R932	ERDS2TJ223T	22K 1/4W [M]
R933	ERDS2TJ471T	470 1/4W [M]
R934	ERDS2TJ472T	4.7K 1/4W [M]
R935	ERDS2TJ473T	47K 1/4W [M]
R936	ERDS2TJ473T	47K 1/4W [M]
R937	ERDS2TJ474T	470K 1/4W [M]
R938	ERDS2TJ472T	4.7K 1/4W [M]
R939	ERDS2TJ104T	100K 1/4W [M]
R940	ERDS2TJ104T	100K 1/4W [M]
R941	ERDS2TJ104T	100K 1/4W [M]
R942	ERDS2TJ101T	100 1/4W [M]
R945	ERDS2TJ103T	10K 1/4W [M]
R947	ERDS2TJ102T	1K 1/4W [M]
R948	ERDS2TJ102T	1K 1/4W [M]
R952	ERDS2TJ101T	100 1/4W [M]
R952	ERDS2TJ821T	820 1/4W [M]
R953	ERDS2TJ393T	39K 1/4W [M]
R972	ERDS2TJ821T	820 1/4W [M]
R973	ERDS2TJ393T	39K 1/4W [M]
R984	ERDS2TJ103T	10K 1/4W [M]
R985	ERDS2TJ820T	82 1/4W [M]
R986	ERDS2TJ151T	150 1/4W [M]
R1002	ERDS2TJ102T	1K 1/4W [M]
R1003	ERDS2TJ103T	10K 1/4W [M]
R1005	ERDS2TJ1R0T	1 1/4W [M]
R1006	ERDS2TJ152T	1.5K 1/4W [M]
R1008	ERDS2TJ102T	1K 1/4W [M]

Ref. No.	Part No.	Values & Remarks
R1010	ERDS2TJ4R7T	4.7 1/4W [M]
R1011	ERDS2TJ223T	22K 1/4W [M]
R1012	ERDS2TJ103T	10K 1/4W [M]
R1013	ERDS2TJ472T	4.7K 1/4W [M]
R1014	ERDS2TJ472T	4.7K 1/4W [M]
R1015	ERDS2TJ472T	4.7K 1/4W [M]
R1016	ERDS2TJ274T	270K 1/4W [M]
R1017	ERDS2TJ152T	1.5K 1/4W [M]
R1018	ERDS2TJ106T	10M 1/4W [M]
R1019	ERDS2TJ222T	2.2K 1/4W [M]
R1020	ERDS2TJ273T	27K 1/4W [M]
R1021	ERDS2TJ103T	10K 1/4W [M]
R1022	ERDS2TJ103T	10K 1/4W [M]
R1023	ERDS2TJ472T	4.7K 1/4W [M]
R1025	ERDS2TJ822T	8.2K 1/4W [M]
R1026	ERDS2TJ2R7T	2.7 1/4W [M]
R1027	ERDS2TJ2R7T	2.7 1/4W [M]
R1028	ERDS2TJ102T	1K 1/4W [M]
R1029	ERDS2TJ102T	1K 1/4W [M]
R1030	ERDS2TJ472T	4.7K 1/4W [M]
R1031	ERDS2TJ102T	1K 1/4W [M]
R1032	ERDS2TJ682T	6.8K 1/4W [M]
R1033	ERDS2TJ103T	10K 1/4W [M]
R1034	ERDS2TJ103T	10K 1/4W [M]
R1035	ERDS2TJ102T	1K 1/4W [M]
R1036	ERDS2TJ682T	6.8K 1/4W [M]
R1037	ERDS2TJ823T	82K 1/4W [M]
R1038	ERDS2TJ222T	2.2K 1/4W [M]
R1039	ERDS2TJ222T	2.2K 1/4W [M]
R1040	ERDS2TJ393T	39K 1/4W [M]
R1041	ERDS2TJ682T	6.8K 1/4W [M]
R1042	ERDS2TJ472T	4.7K 1/4W [M]
R1043	ERDS2TJ472T	4.7K 1/4W [M]
R1044	ERDS2TJ102T	1K 1/4W [M]
R1045	ERDS2TJ393T	39K 1/4W [M]
R1046	ERDS2TJ822T	8.2K 1/4W [M]
R1047	ERDS2TJ391T	390 1/4W [M]
R1048	ERDS2TJ472T	4.7K 1/4W [M]
R1049	ERDS2TJ103T	10K 1/4W [M]
		CAPACITORS
C1	ECEA1CKA101B	100 16V [M]
C2	ECBT1E103ZF5	0.01 25V [M]
C101	ECBT1C103NS5	0.01 16V [M]
C102	ECEA1CKA101B	100 16V [M]
C103	ECBT1C103NS5	0.01 16V [M]
C104	ECBT1H102KB5	1000P 50V [M]
C105	ECBT1H102KB5	1000P 50V [M]

Ref. No.	Part No.	Values & Remarks
C106	ECBT1C103NS5	0.01 16V [M]
C107	ECBT1H473ZF5	0.047 50V [M]
C108	ECBT1H8R2KC5	8.2P 50V [M]
C109	ECBT1H102KB5	1000P 50V [M]
C110	ECBT1C103NS5	0.01 16V [M]
C111	ECEA1EKA4R7B	4.7 25V [M]
C112	ECBT1C103NS5	0.01 16V [M]
C113	ECBT1H102KB5	1000P 50V [M]
C114	ECEA1HKA3R3B	3.3 50V [M]
C115	ECEA1EKA4R7B	4.7 25V [M]
C116	ECFR1C333KR	0.033 16V [M]
C117	ECFR1C183KR	0.018 16V [M]
C118	ECFR1C183KR	0.018 16V [M]
C119	ECQP2A391JZT	390P 100V [M]
C120	ECEA1CKA100B	10 16V [M]
C121	ECEA1HKAR47B	0.47 50V [M]
C122	ECEA1HKA010B	1 50V [M]
C123	ECEA1HKA010B	1 50V [M]
C124	ECBT1H101KB5	100P 50V [M]
C125	ECEA1CKA220B	22 16V [M]
C126	ECBT1H473ZF5	0.047 50V [M]
C127	ECEA1CKA220B	22 16V [M]
C129	ECEA0JKA101B	100 6.3V [M]
C130	ECEA0JKA101B	100 6.3V [M]
C131	ECBT1H101KB5	100P 50V [M]
C132	ECBT1H102KB5	1000P 50V [M]
C133	ECBT1H150JC5	15P 50V [M]
C134	ECBT1H180JC5	18P 50V [M]
C136	ECBT1H102KB5	1000P 50V [M]
C137	ECFR1C472KR	4700P 16V [M]
C138	ECBT1C103KS5	0.01 16V [M]
C139	ECFR1C472KR	4700P 16V [M]
C141	ECEA1HKA010B	1 50V [M]
C142	ECEA1HKA010B	1 50V [M]
C143	ECBT1C472KR5	4700P 16V [M]
C144	ECBT1C472KR5	4700P 16V [M]
C147	ECBT1H102KB5	1000P 50V [M]
C148	ECBT1C103NS5	0.01 16V [M]
C149	ECBT1H104ZF5	0.1 50V [M]
C201	ECBT1H101KB5	100P 50V [M]
C202	ECBT1H101KB5	100P 50V [M]
C204	ECBT1H221KB5	220P 50V [M]
C205	ECBT1C272KR5	2700P 16V [M]
C207	ECEA1HKA010B	1 50V [M]
C208	ECFR1C563KR	0.056 16V [M]
C209	ECEA1HKAR15B	0.15 50V [M]
C210	ECFR1C223KR	0.022 16V [M]
C211	ECFR1C393KR	0.039 16V [M]
C212	ECFR1C223KR	0.022 16V [M]

Ref. No.	Part No.	Values & Remarks
C213	ECBT1C332KR5	3300P 16V [M]
C214	ECBT1C222KR5	2200P 16V [M]
C215	ECBT1C272KR5	2700P 16V [M]
C216	ECBT1C152KR5	1500P 16V [M]
C217	ECFR1C823MR	0.082 16V [M]
C218	ECEA1HKAR15B	0.15 50V [M]
C220	ECBT1H102KB5	1000P 50V [M]
C221	ECFR1E104ZF5	0.1 25V [M]
C222	ECBT1H471KB5	470P 50V [M]
C223	ECEA1HKA4R7B	4.7 50V [M]
C224	ECEA1HKA2R2B	2.2 50V [M]
C225	ECEA1HKA3R3B	3.3 50V [M]
C227	ECBT1H681KB5	680P 50V [M]
C228	ECEA1CKA100B	10 16V [M]
C229	ECBT1H101KB5	100P 50V [M]
C230	ECBT1H470J5	47P 50V [M]
C231	ECQV1H154JZ3	0.15 50V [M]
C232	ECBT1C332KR5	3300P 16V [M]
C233	ECEA1HKA010B	1 50V [M]
C237	ECBT1H473ZF5	0.047 50V [M]
C238	ECEA1HKAR33B	0.33 50V [M]
C239	ECBT1H102KB5	1000P 50V [M]
C300	ECBT1E103ZF5	0.01 25V [M]
C301	ECBT1H102KB5	1000P 50V [M]
C303	ECBT1H104ZF5	0.1 50V [M]
C304	ECEA1AM331B	330 10V [M]
C305	ECBT1C152KR5	1500P 16V [M]
C306	ECEA1HKA0R1B	0.1 50V [M]
C307	ECBT1H102KB5	1000P 50V [M]
C311	ECBT1H104ZF5	0.1 50V [M]
C312	ECBT1H104ZF5	0.1 50V [M]
C313	ECBT1H104ZF5	0.1 50V [M]
C314	ECBT1H151KB5	150P 50V [M]
C315	ECBT1H151KB5	150P 50V [M]
C316	ECBT1H151KB5	150P 50V [M]
C317	ECEA1HKA010B	1 50V [M]
C318	ECBT1E103ZF5	0.01 25V [M]
C319	ECEA1CKA100B	10 16V [M]
C320	ECBT1E103ZF5	0.01 25V [M]
C330	ECEA1HKA010B	1 50V [M]
C331	ECEA1HKA4R7B	4.7 50V [M]
C401	ECBT1H101KB5	100P 50V [M]
C402	ECBT1H101KB5	100P 50V [M]
C404	ECBT1H221KB5	220P 50V [M]
C405	ECBT1C272KR5	2700P 16V [M]
C407	ECEA1HKA010B	1 50V [M]
C408	ECFR1C563KR	0.056 16V [M]
C409	ECEA1HKAR15B	0.15 50V [M]
C410	ECFR1C223KR	0.022 16V [M]
C411	ECFR1C393KR	0.039 16V [M]
C412	ECFR1C223KR	0.022 16V [M]
C413	ECBT1C332KR5	3300P 16V [M]
C414	ECBT1C222KR5	2200P 16V [M]
C415	ECBT1C272KR5	2700P 16V [M]
C416	ECBT1C152KR5	1500P 16V [M]
C417	ECFR1C823MR	0.082 16V [M]
C418	ECEA1HKAR15B	0.15 50V [M]
C420	ECBT1H102KB5	1000P 50V [M]
C421	ECFR1E104ZF5	0.1 25V [M]
C422	ECBT1H471KB5	470P 50V [M]
C423	ECEA1HKA4R7B	4.7 50V [M]
C424	ECEA1HKA2R2B	2.2 50V [M]
C425	ECEA1HKA3R3B	3.3 50V [M]
C427	ECBT1H681KB5	680P 50V [M]
C428	ECEA1CKA100B	10 16V [M]
C429	ECBT1H101KB5	100P 50V [M]
C430	ECBT1H470J5	47P 50V [M]
C431	ECQV1H154JZ3	0.15 50V [M]
C432	ECBT1C332KR5	3300P 16V [M]
C433	ECEA1HKA010B	1 50V [M]
C437	ECBT1H473ZF5	0.047 50V [M]
C438	ECEA1HKAR33B	0.33 50V [M]
C501	ECBT1H102KB5	1000P 50V [M]
C502	ECBT1H102KB5	1000P 50V [M]
C503	ECBT1H331KB5	330P 50V [M]
C504	ECBT1H331KB5	330P 50V [M]
C506	RCEA1H222B-S	2200P 50V ⚠[M]
C507	RCEA1H222B-S	2200P 50V ⚠[M]
C508	RCEA1E332B-S	3300P 25V ⚠[M]
C509	ECBT1H103ZF5	0.01 50V [M]
C510	ECBT1H103ZF5	0.01 50V [M]
C511	ECKR2H103ZF5	0.01 500V [M]
C512	ECEA1CKA101B	100 16V [M]
C513	ECKR2H103ZF5	0.01 500V [M]
C514	ECEA1AKA330B	33 10V [M]
C515	ECEA1JM101B	100 63V [M]
C516	ECEA2AM100B	10 100V [M]
C517	ECKR2H103ZF5	0.01 500V [M]
C518	ECKR2H103ZF5	0.01 500V [M]
C519	ECEA1HKA100B	10 50V [M]
C520	ECKR2H103ZF5	0.01 500V [M]
C521	ECEA1EKA330B	33 25V [M]
C522	ECEA1EM101B	100 25V [M]
C523	ECEA1HKA010B	1 50V [M]
C524	ECEA1HKA010B	1 50V [M]
C525	ECEA1EKA330B	33 25V [M]
C526	ECEA1HM330B	33 50V [M]
C527	ECKR2H103ZF5	0.01 500V [M]
C528	ECKR2H103ZF5	0.01 500V [M]
C529	ECEA1HM101B	100 50V [M]
C530	ECKR2H103ZF5	0.01 500V [M]
C531	ECKR2H103ZF5	0.01 500V [M]
C532	ECKR2H103ZF5	0.01 500V [M]
C533	ECEA1HM101B	100 50V [M]
C534	ECKR2H103ZF5	0.01 500V [M]
C536	ECEA0JKA221B	220 6.3V [M]
C537	ECBT1H102KB5	1000P 50V [M]
C540	ECBT1H150J5	15P 50V [M]
C541	ECBT1H150J5	15P 50V [M]
C542	ECEA2AU100B	10 100V [M]
C543	ECEA2AM100B	10 100V [M]
C544	ECQV1H104JZ3	0.1 50V [M]
C545	ECQV1H104JZ3	0.1 50V [M]
C546	ECQV1H104JZ3	0.1 50V [M]
C547	ECQV1H104JZ3	0.1 50V [M]
C548	ECQV1H474JZ3	0.47 50V [M]
C549	ECQV1H474JZ3	0.47 50V [M]
C550	ECEA2AU100B	10 100V [M]
C551	ECEA1HKA100B	10 50V [M]
C552	ECEA1EKA4R7B	4.7 25V [M]
C553	ECEA1HKA3R3B	3.3 50V [M]
C554	ECEA1HKA3R3B	3.3 50V [M]
C555	ECBT1H473ZF5	0.047 50V [M]
C556	ECBT1H473ZF5	0.047 50V [M]
C592	ECKR2H103ZF5	0.01 500V [M]
C593	RCEA1C102B-S	1000P 16V ⚠[M]
C596	ECKR2H103ZF5	0.01 500V [M]
C597	ECEA1EKA220B	22 25V [M]
C601	ECBT1H102KB5	1000P 50V [M]
C602	ECBT1H471KB5	470P 50V [M]
C603	ECBT1H102KB5	1000P 50V [M]
C604	ECBT1E223ZF5	0.022 25V [M]
C604	ECBT1H102KB5	1000P 50V [M]
C605	ECEA1AKA101B	100 10V [M]
C606	ECBT1E223ZF5	0.022 25V [M]
C606	ECFR1C183KR	0.018 16V [M]
C607	ECEA1HKA3R3B	3.3 50V [M]
C608	ECBT1H221KB5	220P 50V [M]
C609	ECEA1HKA010B	1 50V [M]
C611	ECBT1H104ZF5	0.1 50V [M]
C612	ECEA1VKA220B	22 35V [M]
C613	ECBT1H681KB5	680P 50V [M]
C614	ECBT1H681KB5	680P 50V [M]
C615	ECBT1H101KB5	100P 50V [M]
C616	ECBT1H101KB5	100P 50V [M]
C621	ECBT1E103ZF5	0.01 25V [M]
C622	ECBT1E103ZF5	0.01 25V [M]
C623	ECBT1H102KB5	1000P 50V [M]
C624	ECEA0JKA101B	100 6.3V [M]
C625	RCEA0J102B-S	1000P 6.3V [M]
C626	ECBT1H102KB5	1000P 50V [M]
C627	ECBT1E103ZF5	0.01 25V [M]
C628	ECEA1AKA220B	22 10V [M]
C629	ECBT1H331KB5	330P 50V [M]
C630	ECBT1H561KB5	560P 50V [M]
C631	ECBT1H561KB5	560P 50V [M]
C632	ECBT1H101KB5	100P 50V [M]
C633	ECBT1H101KB5	100P 50V [M]
C634	ECEA1VKA220B	22 35V [M]
C635	ECBT1H561KB5	560P 50V [M]
C636	ECBT1H561KB5	560P 50V [M]
C637	ECBT1H561KB5	560P 50V [M]
C638	ECBT1H561KB5	560P 50V [M]
C639	ECBT1H101KB5	100P 50V [M]
C640	ECBT1H561KB5	560P 50V [M]
C641	ECBT1H561KB5	560P 50V [M]
C642	ECEA1CKA100B	10 16V [M]
C643	ECBT1E103ZF5	0.01 25V [M]
C644	ECEA1HKA0R1B	0.1 50V [M]
C645	ECEA1HKA0R1B	0.1 50V [M]
C647	ECBT1E103ZF5	0.01 25V [M]
C648	ECEA1HKA0R1B	0.1 50V [M]
C649	ECEA1HKA0R1B	0.1 50V [M]
C650	ECBT1E103ZF5	0.01 25V [M]
C651	ECBT1H150JC5	15P 50V [M]
C652	ECBT1H101KB5	100P 50V [M]
C653	ECEA1AM331B	330 10V [M]
C654	ECBT1H180JC5	18P 50V [M]
C655	ECBT1H101KB5	100P 50V [M]
C656	ECBT1H680J5	68P 50V [M]
C657	ECBT1H680J5	68P 50V [M]
C658	ECEA1HKA010B	1 50V [M]
C659	ECBT1H560J5	56P 50V [M]
C660	ECEA1HKA3R3B	3.3 50V [M]
C661	ECBT1H560J5	56P 50V [M]
C662	ECEA1HKA2R2B	2.2 50V [M]
C663	ECBT1H102KB5	1000P 50V [M]
C664	ECBT1H102KB5	1000P 50V [M]
C665	ECBT1H561KB5	560P 50V [M]
C666	ECBT1H102KB5	1000P 50V [M]
C667	ECBT1H102KB5	1000P 50V [M]
C668	ECBT1H471KB5	470P 50V [M]
C701	ECBT1H102KB5	1000P 50V [M]
C701	ECEA0JKA330I	33 6.3V [M]
C702	ECBT1H471KB5	470P 50V [M]
C702	ECUZ1E104MBN	0.1 25V [M]

Ref. No.	Part No.	Values & Remarks
C703	ECBT1H102KB5	1000P 50V [M]
C703	ECEA0JKA101I	100 6.3V [M]
C704	ECBT1H102KB5	1000P 50V [M]
C704	ECUZ1E104MBN	0.1 25V [M]
C705	ECEA1AKA101B	100 10V [M]
C706	ECFR1C183KR	0.018 16V [M]
C706	ECUZ1H272KBN	2700P 50V [M]
C707	ECEA1HKA3R3B	3.3 50V [M]
C707	ECUZ1E273KBN	0.027 25V [M]
C708	ECBT1H221KB5	220P 50V [M]
C709	ECEA1HKA010B	1 50V [M]
C710	ECUV1H151KCN	150P 50V [M]
C711	ECUZ1E104ZFN	0.1 25V [M]
C712	ECUZ1E104ZFN	0.1 25V [M]
C713	ECUZ1E104MBN	0.1 25V [M]
C714	ECEA0JKA101I	100 6.3V [M]
C715	ECUZ1H182KBN	1800P 50V [M]
C716	ECUZ1H821KBN	820P 50V [M]
C717	ECUZ1E104ZFN	0.1 25V [M]
C718	ECUZ1C224KBN	0.22 16V [M]
C721	ECUZ1H150JCN	15P 50V [M]
C722	ECUZ1H150JCN	15P 50V [M]
C723	ECEA1AKA221I	220 10V [M]
C724	ECUZ1E104MBN	0.1 25V [M]
C725	ECUZ1H102KBN	1000P 50V [M]
C726	ECUZ1H102KBN	1000P 50V [M]
C727	ECA1HAK010XI	1 50V [M]
C728	ECA1HAK010XI	1 50V [M]
C730	ECUZ1E104ZFN	0.1 25V [M]
C731	ECEA0JKA221I	220 6.3V [M]
C732	ECEA0JKA221I	220 6.3V [M]
C733	ECUZ1E104MBN	0.1 25V [M]
C734	ECEA1AKA221I	220 10V [M]
C735	ECUZ1E104ZFN	0.1 25V [M]
C736	ECUZ1E104ZFN	0.1 25V [M]
C737	ECUZ1E104ZFN	0.1 25V [M]
C738	ECUZ1E104MBN	0.1 25V [M]
C739	ECUZ1H103KBN	0.01 50V [M]
C742	ECUZ1E273KBN	0.027 25V [M]
C743	ECUZ1E104ZFN	0.1 25V [M]
C744	ECUZ1E183KBN	0.018 25V [M]
C745	ECUZ1C473KBN	0.047 16V [M]
C747	ECUV1H221KBN	220P 50V [M]
C749	ECUZ1H222KBN	2200P 50V [M]
C750	ECUZ1E104MBN	0.1 25V [M]
C751	ECUZ1E104MBN	0.1 25V [M]
C752	ECUZ1H102KBN	1000P 50V [M]
C753	ECUZ1H471KBM	470P 50V [M]
C754	ECUZ1H471KBN	470P 50V [M]

Ref. No.	Part No.	Values & Remarks
C761	ECUZ1H471KBN	470P 50V [M]
C762	ECUZ1H471KBN	470P 50V [M]
C1001	ECBT1C103MS5	0.01 16V [M]
C1002	ECEA1HKN2R2B	2.2 50V [M]
C1003	ECQP1272JZT	2700P 100V [M]
C1004	ECBT1C103MS5	0.01 16V [M]
C1005	ECQP1152JZT	1500P 100V [M]
C1007	ECQP2A472JZT	4700P 100V [M]
C1008	ECEA1HKA010B	1 50V [M]
C1009	RCE1HU101BT	100P 50V [M]
C1010	ECQV1H473JZ3	0.047 50V [M]
C1011	ECBT1H102KB5	1000P 50V [M]
C1012	ECBT1H102KB5	1000P 50V [M]
C1013	ECBT1C222KR5	2200P 16V [M]
C1014	ECBT1C222KR5	2200P 16V [M]
C1015	ECBT1C103MS5	0.01 16V [M]
C1016	ECEA0JKA470B	47 6.3V [M]
C1017	ECEA1HKA3R3B	3.3 50V [M]
C1018	ECFR1C683KR	0.068 16V [M]
C1019	ECEA1CKA220B	22 16V [M]
C1020	ECEA1CKA220B	22 16V [M]
C1021	ECEA1AKA220B	22 10V [M]
C1022	ECEA1AKA221Q	220 10V [M]
C1023	ECBT1C103MS5	0.01 16V [M]
C1024	ECEA1HKA3R3B	3.3 50V [M]
C1025	ECBT1H470J5	47P 50V [M]
C1026	ECBT1H101KB5	100P 50V [M]
C1027	ECBT1C472KR5	4700P 16V [M]
C1028	ECBT1H101KB5	100P 50V [M]
C1029	ECFR1E104ZF5	0.1 25V [M]
C1030	ECFR1C104KR	0.1 16V [M]
C1031	ECEA1AKA470B	47 10V [M]
C1032	ECEA1HKA220B	22 50V [M]
C1033	ECEA1HKA0R1B	0.1 50V [M]
C1034	ECEA1AKA330B	33 10V [M]
		CHIP JUMPER
RJ701	ERJ6GEY0R00A	0 1/10W [M]
RJ702	ERJ8GEY0R00A	0 1/8W [M]
RJ703	ERJ8GEY0R00A	0 1/8W [M]
RJ704	ERJ8GEY0R00A	0 1/8W [M]
RJ705	ERJ8GEY0R00A	0 1/8W [M]
RJ706	ERJ8GEY0R00A	0 1/8W [M]
RJ707	ERJ8GEY0R00A	0 1/8W [M]
RJ708	ERJ8GEY0R00A	0 1/8W [M]
RJ709	ERJ8GEY0R00A	0 1/8W [M]
RJ710	ERJ8GEY0R00A	0 1/8W [M]
RJ721	ERJ6GEY0R00A	0 1/10W [M]

Ref. No.	Part No.	Values & Remarks
RJ722	ERJ6GEY0R00A	0 1/10W [M]
RJ723	ERJ6GEY0R00A	0 1/10W [M]
RJ724	ERJ6GEY0R00A	0 1/10W [M]
RJ725	ERJ6GEY0R00A	0 1/10W [M]
RJ726	ERJ6GEY0R00A	0 1/10W [M]
RJ727	ERJ6GEY0R00A	0 1/10W [M]
RJ728	ERJ6GEY0R00A	0 1/10W [M]
RJ750	ERJ6GEY0R00A	0 1/10W [M]
		TEST JUMPER
TJ701	EYF8CU	TEST JUMPER [M]

Ref. No.	Part No.	Values & Remarks

■ Packing Materials & Accessories

Notes: * Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety.
Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low noise (resistors), etc are used.
When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list .
* The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area)
Parts without these indications can be used for all areas.
* The "(SF)" mark denotes the standard part.
* [M] indicates in the Remarks columns indicates parts supplied by **MESA**.
* [D] indicates in the Remarks columns indicates parts supplied by **MAVD.**
* Remote Control Unit : Supply period for three years from terminal of production.
* Reference for O/I book languages are as follows :

Ar : Arabic	Cf : Canadian French	Ch : Chinese	Cz : Czech	Da : Danish
Du : Dutch	En : English	Fr : French	Ge : German	It : Italian
Ko : Korean	Po : Polish	Ru : Russian	Sp : Spanish	Sw : Swedish

Ref No.	Part No.	Part Name & Description	Remarks
		PACKING MATERIALS	
P1	RPGX0557	PACKING CASE	[D]EB,E
P1	RPGX0569	PACKING CASE	[D]EG
P2	RPNX0096	POLYFOAM	[D]
P3	RPFX0007	MIRAMAT BAG	[M]

Ref No.	Part No.	Part Name & Description	Remarks
		ACCESSORIES	
A1	RAK-CH943WK	REMOTE CONTROL	[M]
A1-1	HTR0216-72PW	R/C BATTER COVER	[M]
A2	RJA0043-1C	AC CORD	[D]EG,E⚠
A2	RJA0044-1C	AC CORD	[D]EB⚠
A3	RQT4704-E	O/I BOOK (En/Sp/Sw)	[D]E

Ref No.	Part No.	Part Name & Description	Remarks
A3	RQT4705-R	O/I BOOK (Ru/Cz/Po)	[D]E
A3	RQT4706-D	O/I BOOK (Ge/It/Fr)	[D]EG
A3	RQT4707-H	O/I BOOK (Du/Da)	[D]EG
A3	RQT4708-B	O/I BOOK (En)	[D]EB
A3	RQT5112-R	O/I BOOK (Ru)	[D]E
A4	RSA0007	FM ANTENNA	[M]
A5	RSA0022	AM LOOP ANT	[M]

■ Packaging

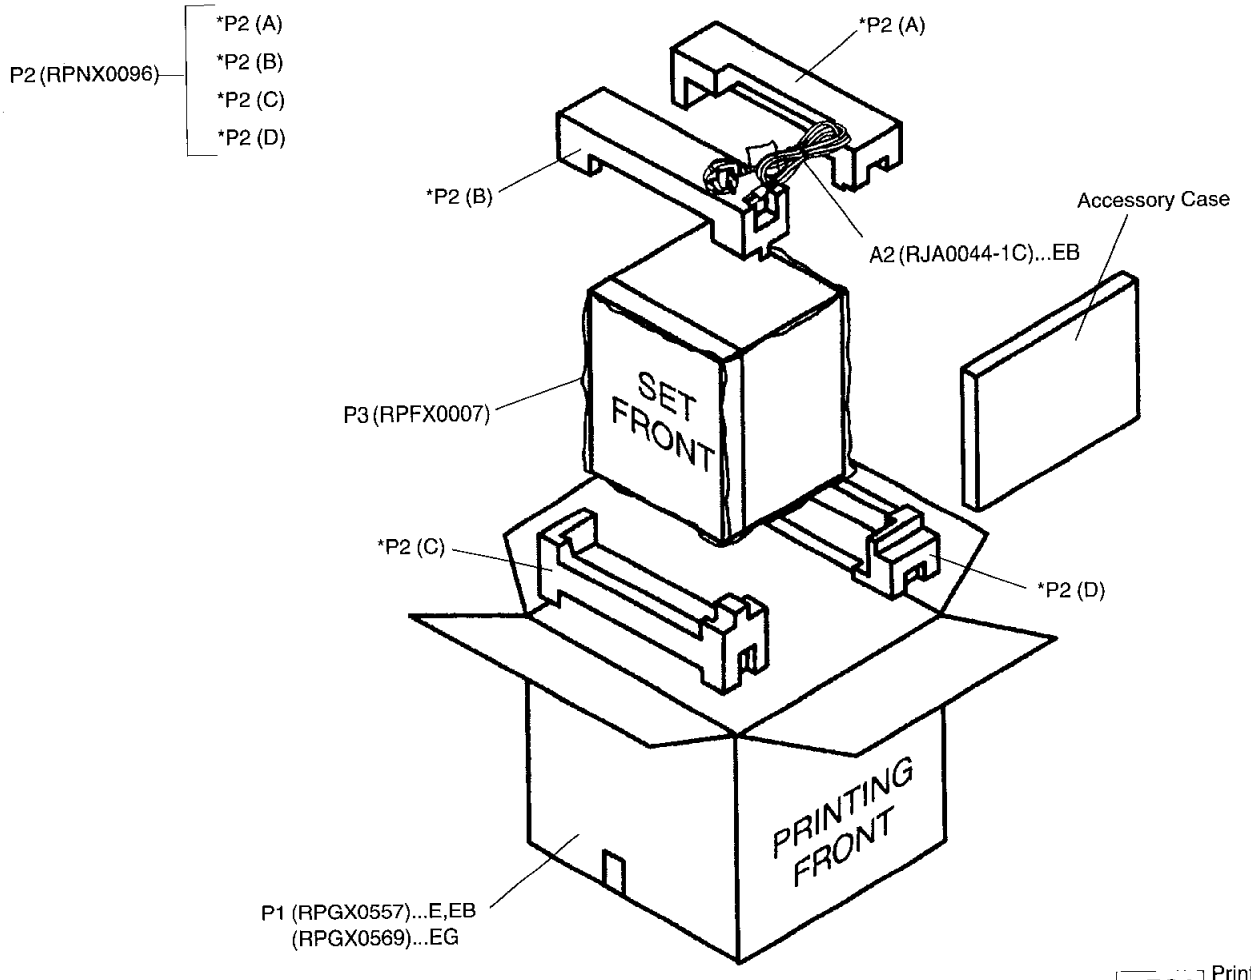

MESA Printed in Germany
G990308100 H/K/J/O/L

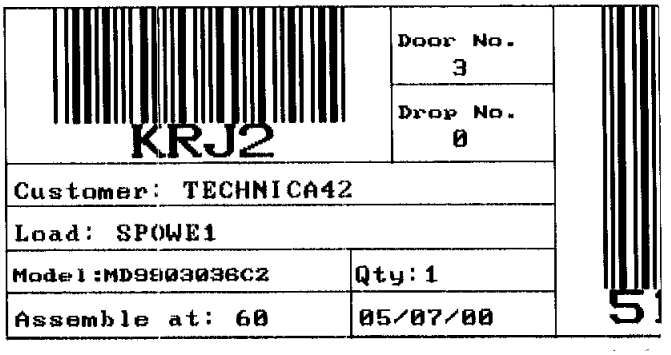
KRJ2
Door No.
3
Drop No.
0
Customer: TECHNICA42
Load: SPOWE1
Model:MD9803036C2
Qty:1
Assemble at: 60
05/07/00